

Xplore Technologies Software Release Note

Name	Xplore RFID Sample Reader Software
	xRFID_Sample_Reader_2.0.5.1.zip
File Ivaille	XKFID_Salliple_Readel_2.0.5.1.21p
Release Date	December 30, 2016
This Version	2.0.5.1
Replaces Version	All previous versions
Intended Users	XSLATE R12 users
Intended Product	XSLATE R12 Tablet PCs with SlateMate ONLY
File Size	14 MB
Operating	Windows 7 (64-bit) Windows 8.1 (64-bit) Windows 10 (64-bit)

Fixes in this Release

N/A

What's New in this Release

Initital release

Installation and Configuration Instructions

To install the RFID Software 2.0.5.1 update (if you have the SlateMate option), perform the following steps:

- 1. Download the update and save to the directory location of your choice.
- 2. Uninstall any previously installed Xplore RFID Demo through Control Panel → Programs and Features
- 3. Unzip the file to a location on your local drive.
- 4. Double-click the installer (xRFID_Installer.exe) and follow the prompts.
- 5. Double-click the IdleRFOfftime.reg file and follow the prompts to add configuration information to the Registry.

Licensing

Refer to your applicable end-user licensing agreement for usage terms.