



ZebraNet Print Server Username and Password

Summary

What is the default user name and password for the print server and how they can be changed.

Details.

There are 2 types of print servers available. Internal 10/100 and External 10/100. The behavior will depend on which type of print server is being used and whether settings are being loaded from the printer or the print server. To directly access the Zebra Print Server you will be prompted for a username and password. The default user name and password is admin & 1234.

There are 2 methods to change the password and only one place to change the username.

The ZPL **^KP** command can be used to change the password. The username and password can be changed from the print server's web page under **Web Admin**. The Web Admin link can be found on the Print Server Configuration web page. How you change the password can produce different results depending on which print server type and where settings are being loaded from, **Printer** or the **Print Server**. The default is to load settings from **Printer**. For full details and difference across printer models, see [The Wired and Wireless Print Server User's Guide](#).

Note: The following table is for wired print servers. A wireless print server option always gets its setting from the printer and acts the same as an Internal 10/100.

Option:	Int 10/100 ^KP	Int10/100 Web Admin	Ext 10/100 ^KP	Ext 10/100 & Web Admin	Ext 10/100 ^KP & Load settings from Print Server	Ext 10/100 Web Admin from Print Server
Telnet	No	Yes	Yes	No*	Yes	Yes
Printer's Web Page	Yes	No	Yes	No	Yes	Yes
Print Server's Web page	No	Yes	Yes	No*	Yes	Yes
LCD Menu	Yes	No	Yes	No	Yes	Yes

* The password change will take until the printer is power cycled. After which it will go back to the printer's password.

Depending on how you are accessing the printer will determine if you are prompted for username or password:

FTP:

username: Username not required. Just hit enter.
password: No password prompt.

TELNET:

user name: No Username Prompt
password: 1234 (default)

Printer's Home Page:

user name: No Username Prompt
password: 1234 (default)

Print Server's Web Page

user name: admin (default)
password: 1234 (default)

Printer LCD Menu:

password: 1234 (default)

Notice: Zebra Technologies Corporation makes no representations about the suitability of this documentation for any purpose. It is provided "as is", for your information only, without warranty of any kind, either expressed or implied, including, but not limited to, implied warranties of merchantability, fitness for a particular purpose and non-infringement.