

Service Information

Before using the unit, it must be configured to operate in the facility network and run the required applications. If a problem occurs using the equipment, contact the facility technical or Systems Support representative. If there is a problem with the equipment, they will contact the Symbol Support Center.


United States	1-800-653-5350	Canada	905-629-7226
	1-631-738-2400	Asia/Pacific	+65-6796-9600
United Kingdom	0800 328 2424		
Australia	1-800-672-906	Austria/Österreich	01-5055794-0
Denmark/Danmark	7020-1718	Finland/Suomi	9 5407 580
France	01-40-96-52-21	Germany/Deutschland	6074-49020
Italy/Italia	2-484441	Mexico/México	5-520-1835
Netherlands/Nederland	315-271700	Norway/Norge	+47 2232 4375
South Africa	11-809 531 1	Spain/España	91 324 40 00
Sweden/Sverige	08 445 29 00	Outside Spain	+34 91 324 40 00
Latin America	1-800-347-0178 Inside US		
Sales Support	+1-954-255-2610 Outside US		
Europe/Mid-East	Contact local distributor or call		
Distributor Operations	+44 118 945 7360		

For the latest version of this guide and other supporting documentation, go to:

<http://www.symbol.com/manuals>



72-74679-01
Revision A — September 2005

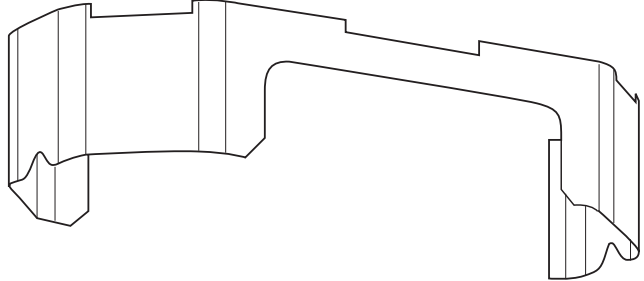

Quick Reference Guide,
Mounting Instructions and Mounting Template

Floor Guard Installation

The DC600 Floor Guard QRG provides printed a full size mounting template (in the box) to provide for accurate positioning of the DC600 Floor Guard.

Note: If the DC600 is already mounted, cut out the outline of the DC600 from the mounting template and fit the template around the DC600 to position the Floor Guard mounting holes.

To install the optional floor guard:

1. Refer to the DC600 Integrator Guide (P/N 72E-7172-0X) for information on DC600 configuration and location options. The document is available at:
<http://www.symbol.com/manuals>

Note: If the DC600 is already mounted, cut out the outline of the DC600 from the mounting template and fit the template around the DC600 to position the Floor Guard mounting holes.

3. Position the DC600 Mounting Template under the DC600 and line up the DC600 mounting holes with the mounting holes on the mounting template. The mounting template shows the position of the Floor Guard two right hand mounting holes.
4. Use the mounting template to locate the DC600 Floor Guard directly over the mounting template locating holes.
5. Use the Floor Guard to mark the mounting hole locations on the floor
6. Remove the DC600 Floor Guard and prepare the floor for mounting as applicable for the floor material.
7. Replace the DC600 Floor Guard and attach with fasteners appropriate for the floor material.

© 2005 SYMBOL TECHNOLOGIES, INC. All rights reserved.
Symbol reserves the right to make changes to any product to improve reliability, function, or design.

Symbol does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein. No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Symbol products might be used. An implied license exists only for equipment, circuits, and subsystems contained in Symbol products. Symbol and the Symbol logo are registered trademarks of Symbol Technologies, Inc. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, N.Y. 11742-1300
<http://www.symbol.com>

Reference Documents

Supporting documents are available for viewing/download from the Symbol documentation web site:
<http://www.symbol.com/manuals>
Software updates, SDKs, development support and related documents are available from the Symbol Devzone web site:
<http://devzone.symbol.com>

Patents

This product is covered by one or more of the patents listed on the web site:
<http://www.symbol.com/patents>

Warranty

 
For the complete Symbol hardware product warranty statement, go to:
<http://www.symbol.com/warranty>

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, N.Y. 11742-1300
<http://www.symbol.com>

Patents

This product is covered by one or more of the patents listed on the web site:
<http://www.symbol.com/patents>

Open For Positioning Template



Using the Mounting Template

1. Refer to the *DC600 Integrator Guide (P/N 72E-71772-0X)* for information on DC600 configuration and location options. The document is available at: <http://www.symbol.com/manuals>
Note: If the DC600 is already mounted, cut out the outline of the DC600 from the mounting template and fit the template around the DC600 to position the Floor Guard mounting holes.
2. Position the DC600 Mounting Template under the DC600 and line up the DC600 mounting holes with the mounting holes on the mounting template. The mounting template shows the position of the Floor Guard two right hand mounting holes.
3. Use the mounting template to locate the DC600 Floor Guard directly over the mounting template locating holes.
4. Use the Floor Guard to mark the mounting hole locations on the floor.
5. Remove the DC600 Floor Guard and prepare the floor for mounting as applicable for the floor material.
6. Replace the DC600 Floor Guard and attach with fasteners appropriate for the floor material.

