


ZD100TA

Quick Start Guide

1 Setup

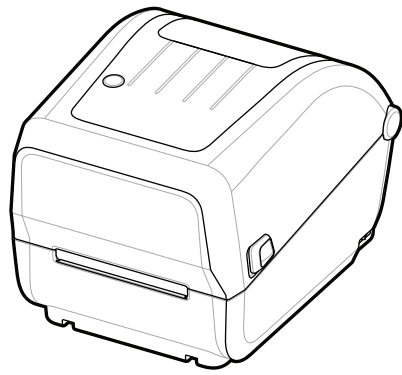


Zebra Technologies | 3 Overlook Point | Lincolnshire, IL 60069 USA
zebra.com

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. © 2024 Zebra Technologies Corp. and/or its affiliates. All rights reserved.

IMPORTANT

Install the driver for your printer.

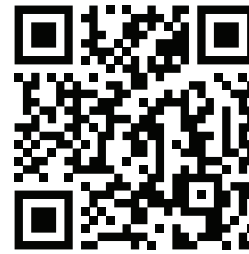

zebra.com/zd100-info




The driver **MUST** be installed before connecting the printer to the computer, or it will cause complications. If your Microsoft Windows-based computer does not have the driver installed for this printer, download it from zebra.com/zd100-info and install it before continuing.


Verify that you have the items shown.




Printer

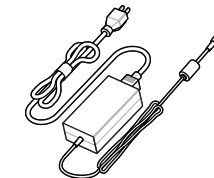


Power Supply

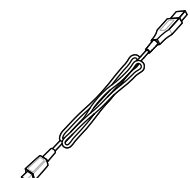


USB Cable

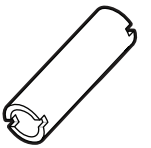

74m Ribbon Core

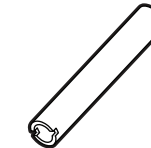

300m Ribbon Core

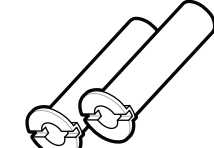


Non-Zebra Ribbon Adapters





Manual


! Labels and Ribbons are not included.

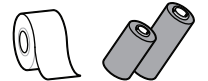

2 Set up printer

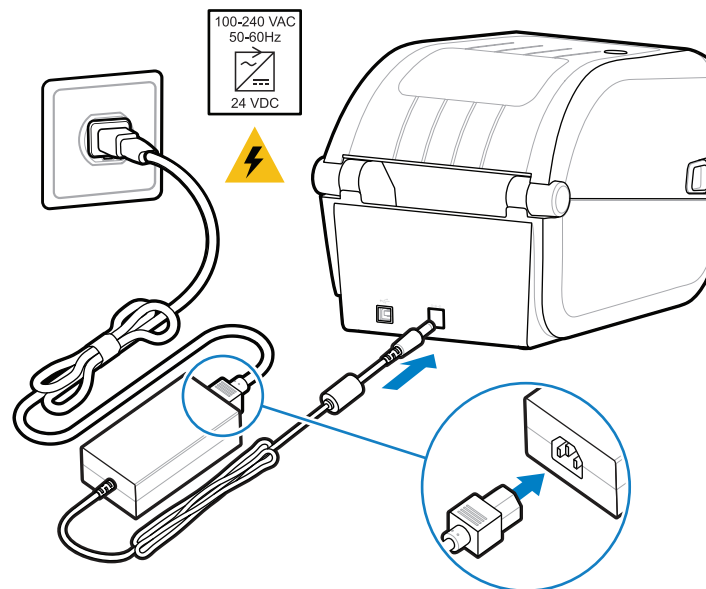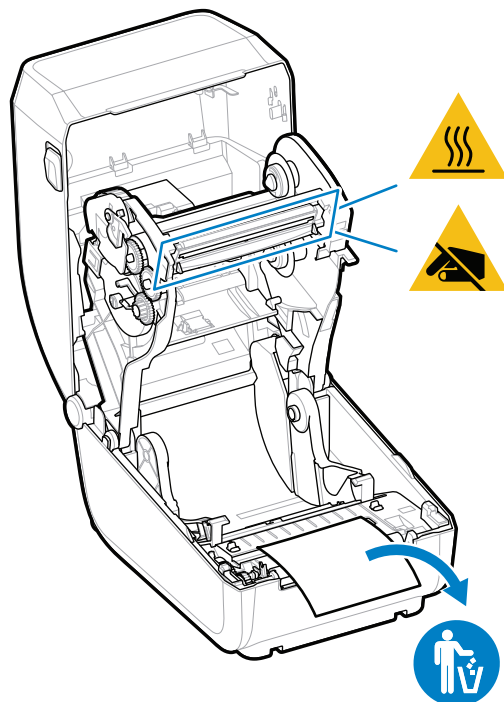


Connect the power supply.
(If needed, connect the two parts of the power supply.)

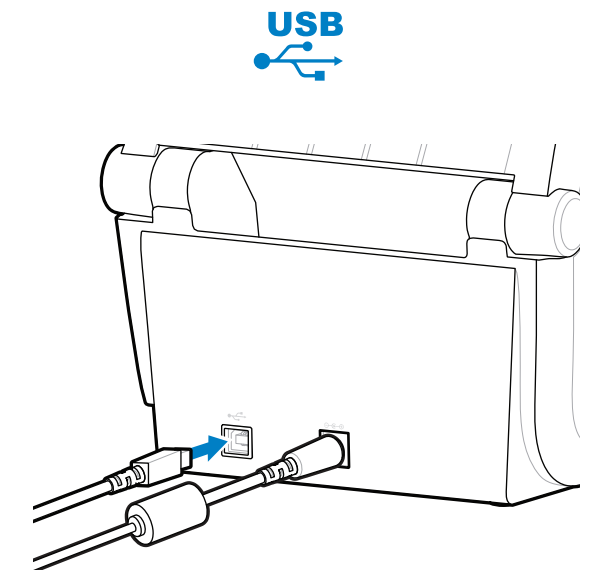


Connect the USB cable to the printer.

3 Load Media


NOTE: To print using direct thermal only, make sure you adjust the print model via the Printer Driver or Zebra Setup Utility.

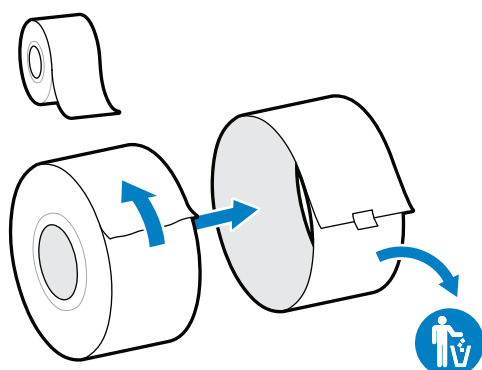


Remove and discard the outer layer.

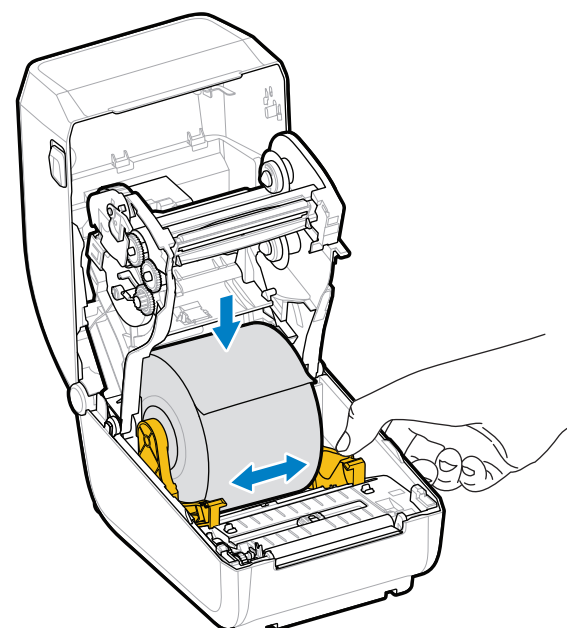

Pull the media guides open and place the media roll on the roll holders.

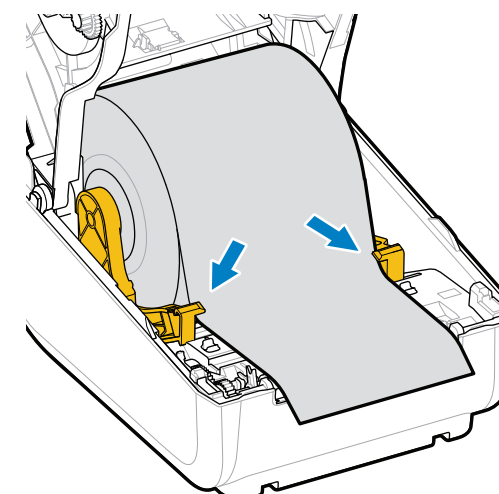


Push the paper under the guides.

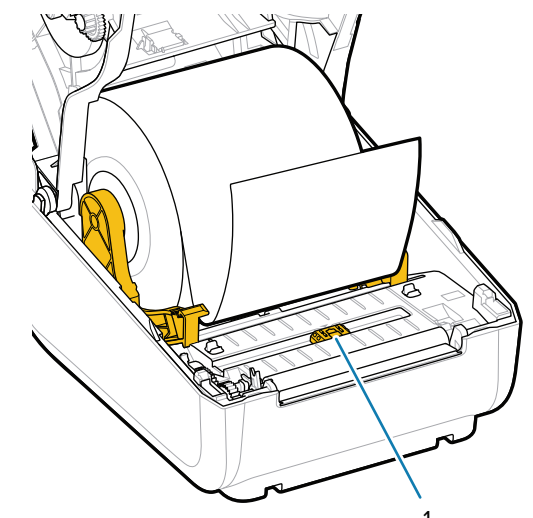

Align the sensor (1) near the center (default).


4 Load Ribbon

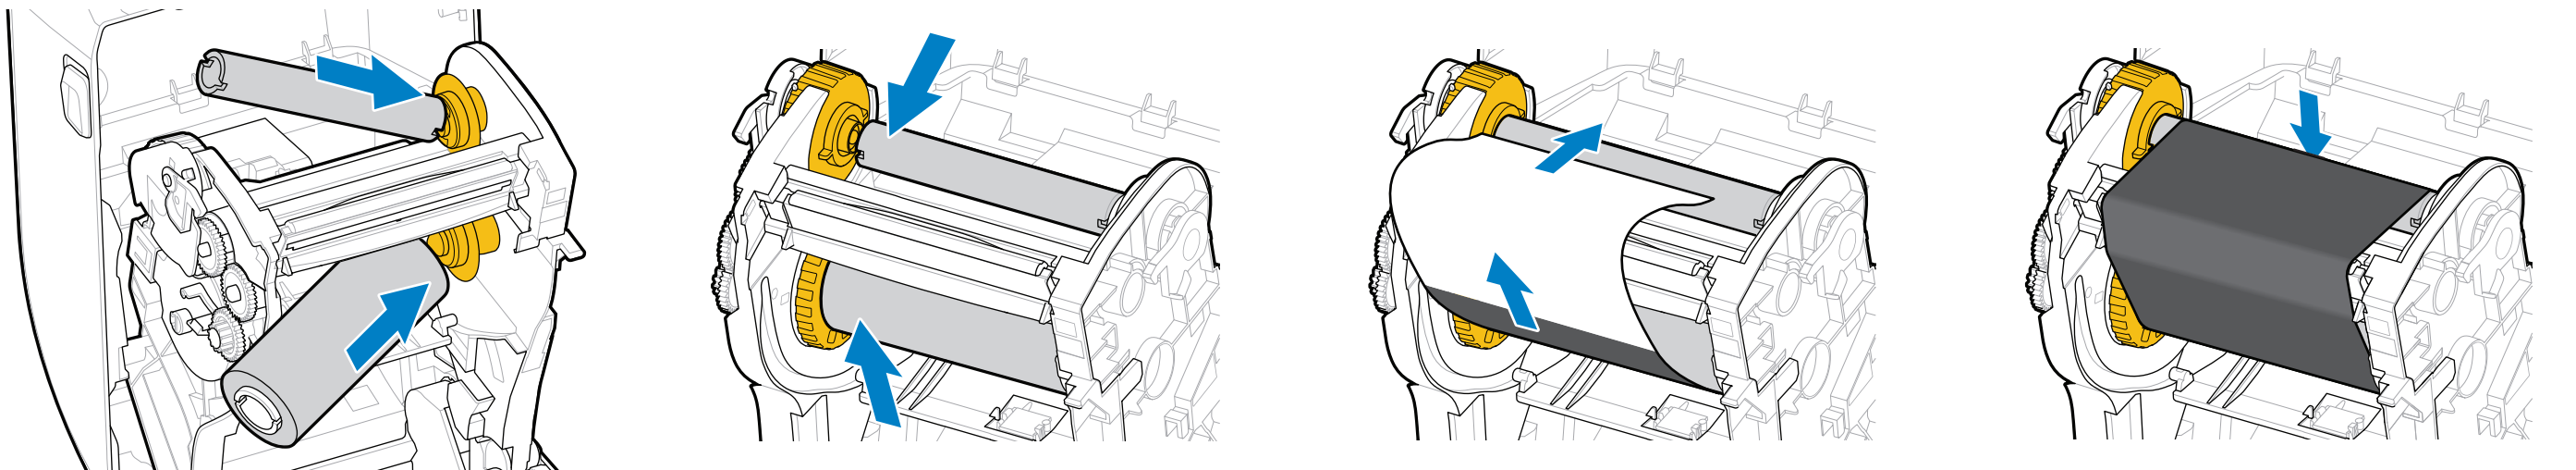

Insert the ribbon take-up core on the top spindles. Load the ribbon on the lower spindles.


Pull the ribbon leader forward, and attach it to the take-up core. Wind the media around the take-up spindle.

5 Power On and Print

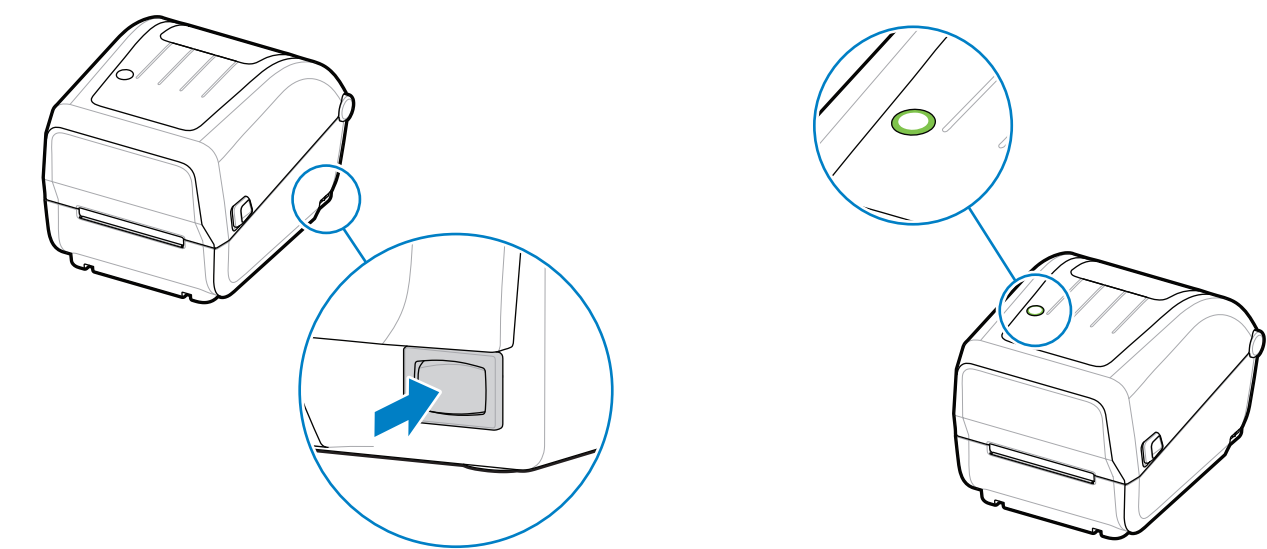

Press the **POWER** switch to turn on. The light on top of the printer will cycle.

Printer is ready when the status light is green.

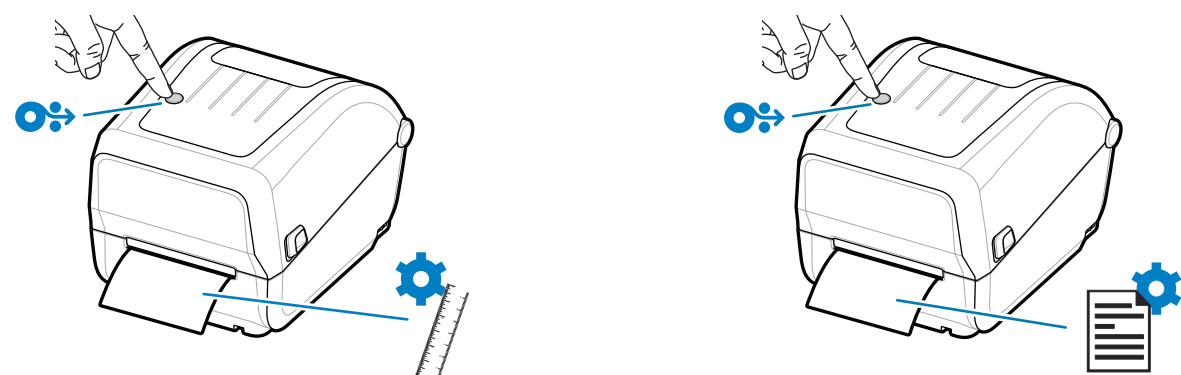

Perform Media Calibration:
Press and hold **FEED** until the status light blinks off and on **TWICE**, then release.

Test Print Configuration Report:
Press and hold **FEED** until the Green Light blinks off and on **ONCE**, then release.

NOTE: If the print quality is not good, check the darkness setting, the media type, or the ribbon type or clean the printhead.

i Support and Information

Zebra QuickHelp QR Code



This is a Zebra Quick-Help QR Code. You will find them on your Zebra product and documentation. Open the camera app on your smart mobile device and point it at the QR code to view helpful content in a browser.

Product Registration (Hardware)

Product Registration is suspended for hardware and software as we work to deliver a simpler customer service experience. Registration is not required to seek service or support for your device or software, but please keep your serial numbers or software license numbers in a safe place, as you will be asked to provide that information when you request service or support.

CAUTION – For personnel and equipment safety, always use an approved three-conductor power cord specific to the region or country intended for installation. This cord must use a three-conductor grounded plug and an IEC 320 female connector and bear the relevant certification mark of the country in which the product is being used.



View user documentation.
zebra.com/zd100-info



Need to design a label?
zebra.com/zebradesigner



Learn about genuine Zebra supplies.
zebra.com/supplies



Need to manage your printer?
zebra.com/profilemanager



View Quick Answers and Knowledge Base.
zebra.com/knowledge

Join Community Connection of Zebra users and ambassadors.
zebra.com/supportcommunity

Contact Zebra about your printer.
zebra.com/contact

Need to secure your printer?
zebra.com/printsecure

Learn about product patent information.
ip.zebra.com

