

Removable Peel Bracket with Spring Assembly Maintenance Kit



Installation Instructions

Read these instructions thoroughly before installing this kit.


Supported printers:

- ZE500
- ZE511
- ZE521

The graphics shown in this document depict a right-hand (RH) 4-inch model. Most of the graphics for a left-hand (LH) model would be a mirror image. Differences are noted when applicable.

Parts List

Before proceeding, verify that your kit contains the following items. To reorder specific parts, navigate to zebra.com/parts, and select your printer model.

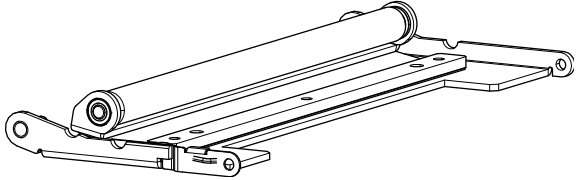	Removable Peel Bracket with spring Qty: 1
--	--

Tools Required



NOTE: Depending on your print engine and the type of peel bucket currently installed, you will need to use either a  T10 or  PH1 screwdriver. Use the tool appropriate for the screw on your print engine.

-  Phillips keys, drivers, or bits
Size: PH1
-  Hexalobular (6-lobe, star) keys, drivers, or bits
Size: T10
- Sorting bin for screws and small parts (optional)


Prepare for Installation

CAUTION: Turn off (O) the printer and disconnect it from the power source before performing the following procedure.


CAUTION—ESD: Observe proper electrostatic safety precautions when handling static-sensitive components such as circuit boards and printheads.

It may be necessary to remove the print engine from the applicator to gain unobstructed access. Follow these steps if necessary.

1. Loosen the center mounting bolt (1), but do not remove it. This bolt supports the print engine.

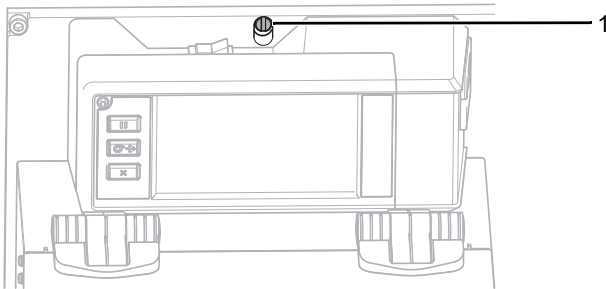

2. Remove the four screws securing the print engine to the applicator.

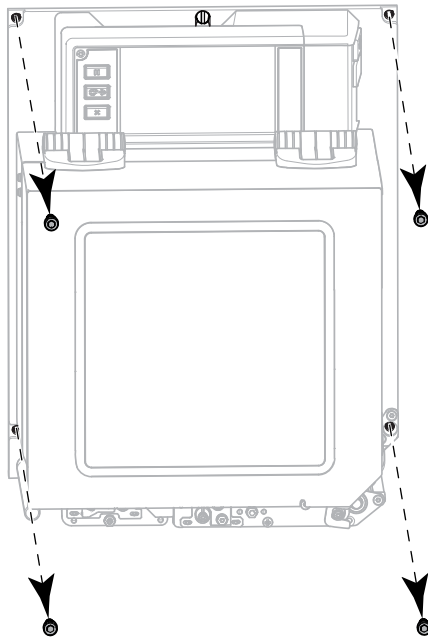


3. Lift the print engine off of the center mounting bolt and place it on a workbench.

Remove the Existing Peel Bracket




NOTE: Depending on your print engine and the type of peel bracket currently installed, you will need to use either a a  T10 or  PH1 screwdriver. Use the tool appropriate for the screw or thumbscrew on your print engine.

1. Lift up on the peel bracket latch (1) and release the peel bracket (2).
2. Remove the screw (3) securing the peel bracket (thumbscrew shown). Save the screw to use when installing the removable peel bracket.
3. Tilt down the outboard end of the peel bracket and lift the inboard end up and off of the pivot pin.

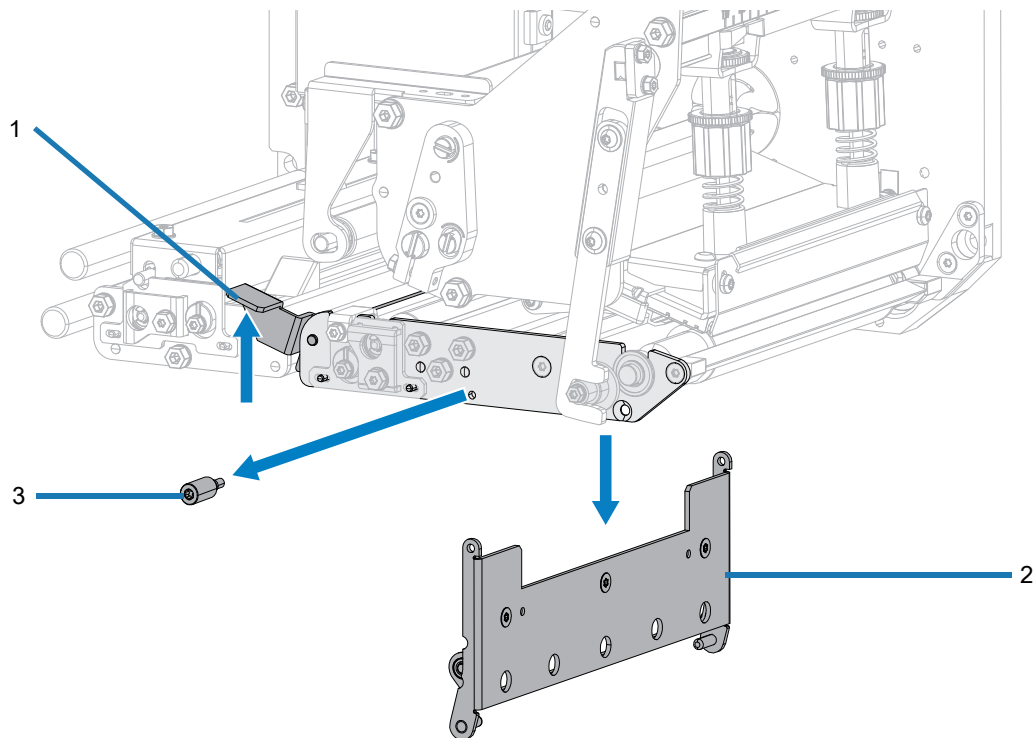


Install the Removable Peel Bracket with Spring


1. Reinstall the screw that you removed previously.

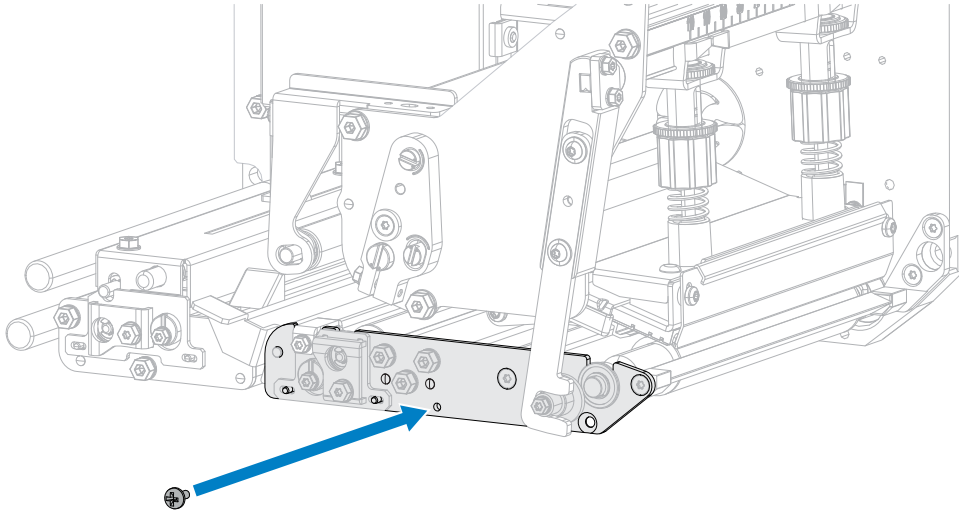


2. For a RH print engine, position the hole in the spring leg over the end of the screw.
For a LH print engine, position the hole in the spring leg over the end of the inboard side pin.

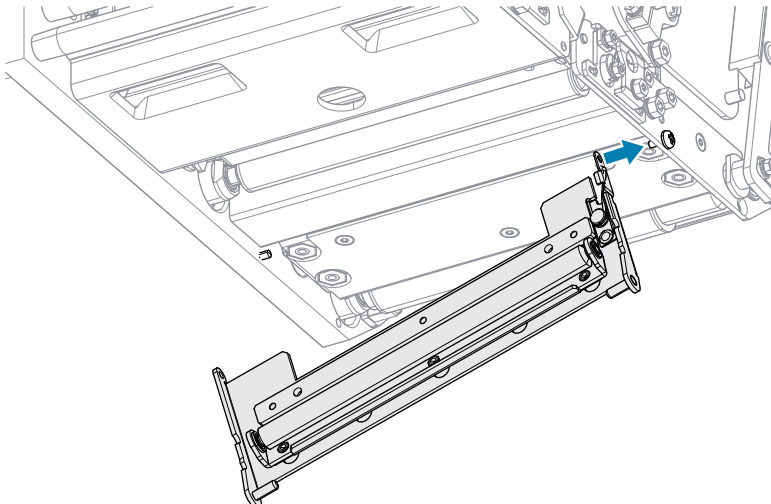

-
3. For a RH print engine, compress the spring leg until the other end slides over the inboard side pin.
For a LH print engine, compress the spring leg until the other end slides over the end of the screw.

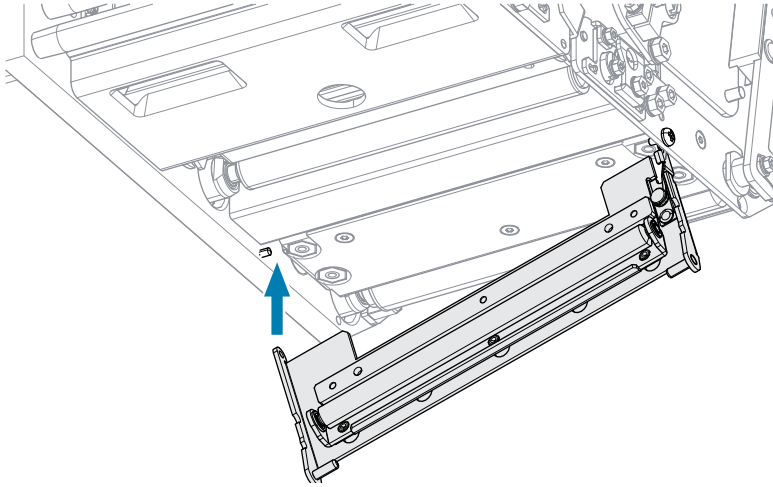

4. Rotate the bracket up and against the peel latch to close.

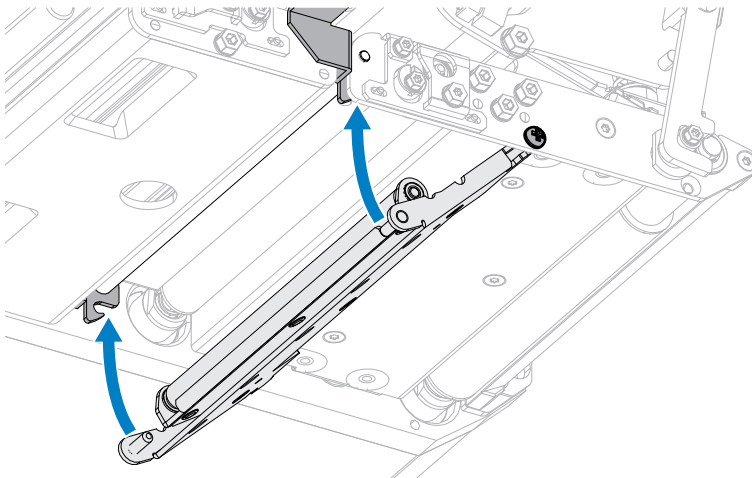

Resume Printer Operation

1. Reinstall media and ribbon (if used).
2. Close the printhead assembly.
3. Close the media door.
4. Reinstall the print engine into the applicator, if it was removed.
 - a. Lift the print engine and support it on the center mounting bolt.
 - b. Reinstall the screws securing the print engine.
 - c. Tighten the center mounting bolt.
5. Reconnect the AC power cord and interface cables.
6. Turn on (I) the printer power.

The installation is complete.