

# WORKABOUT PRO 3 TRANSITIONAL BOOST VERSIONS 1.0 (D037) TO 1.5 (E168) RELEASE NOTES

Workabout Pro 3 Utilities

## DESCRIPTION

Transitional BooSt for terminals with current BooSt versions 1.0 (D037) – 1.5 (E168).

Terminals with BooSt versions 1.0 (D037) – 1.5 (E168) can not load the Transitional BooSt. These terminals will first have to be updated to a newer Boost (2.0 (H088) – 3.0 (B199)) and then they can load the Transitional Boost.

This download package contains 2 files:

1. *7527.img* -An unsigned-secured boost release 2.0 (H088) which can handle loading multi-images
2. *7527OS.img* -The transitional boost E299 (4.0.740)

## INSTALLATION INSTRUCTIONS

1. Download the package, unzip the files, and place both of these files onto a storage device.
2. Ensure that the main battery is well charged, or the device is in a powered docking station.
3. Insert the storage device.
4. Boot the device into BooSt by pressing and holding the Blue + Enter + Scan button for 7 seconds.
5. The image should run, and load the appropriate files. Do not remove the storage device or power until the upgrade process has been successfully completed.

For more information, please see the Transitional BooSt information page.

[Transitional BooSt Information Page](#)

## RELEASE DATE

January 1, 2010