
 



CONTENTS OF THE BOX
4-SLOT CHARGER (RV3004)

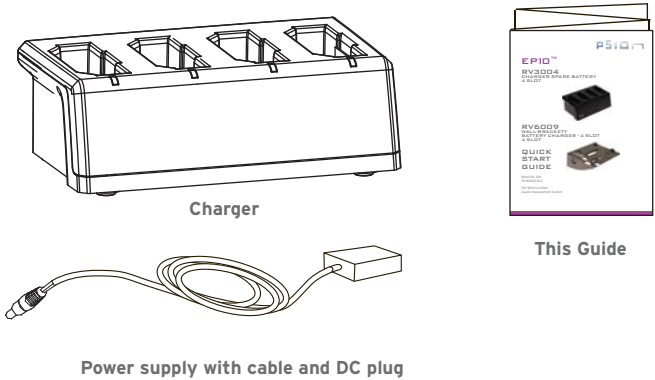

ALSO NEEDED - NOT INCLUDED IN RV3004




WALL BRACKET - 4-SLOT CHARGER
(RV3007)

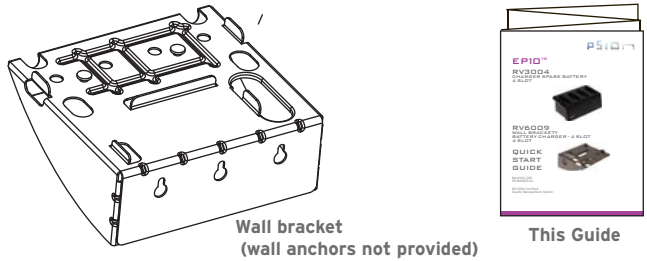

WALL MOUNTING


1 Attach the Bracket to the Wall

Attach the bracket to the wall, as shown below, using anchors that are suitable for the wall type. See the location guide on the next panel for the positioning of the anchors.

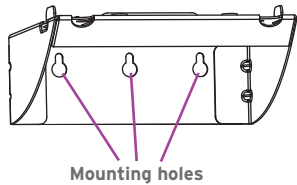


2 Attach the Charger to the Bracket

Lower the keyhole slots on the base of the charger over the tabs on the bracket. Then push the charger towards the back of the bracket until it clicks into place.

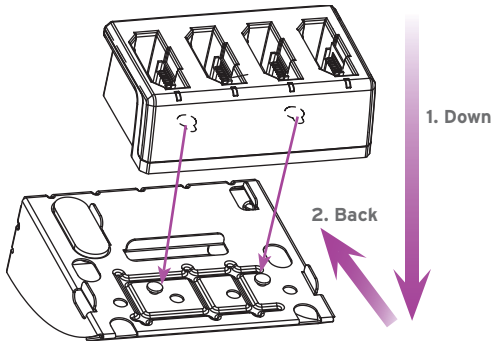


LOCATION GUIDE FOR THE
MOUNTING SCREWS

WALL MOUNTING

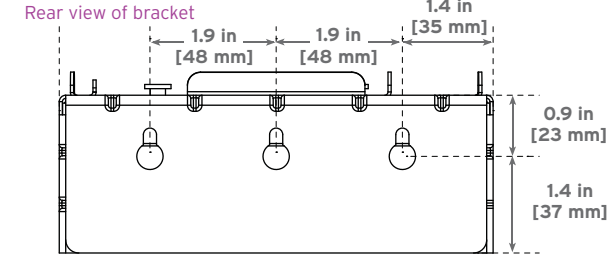


TABLETOP MOUNTING

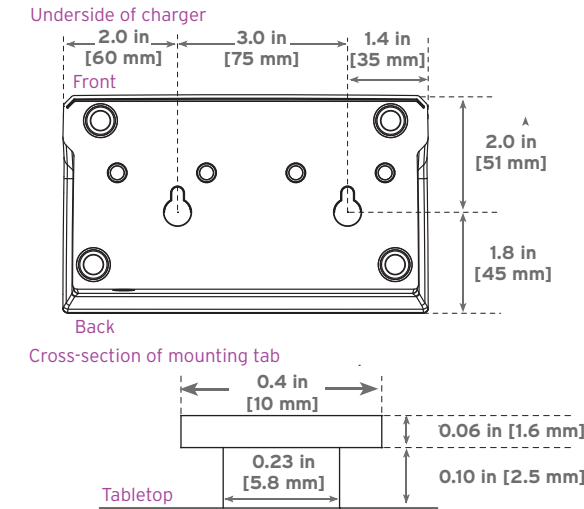

TABLETOP INSTALLATION

CHARGER NOT ANCHORED TO THE TABLE

Set the charger down on its rubber feet as shown:

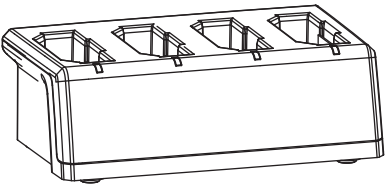


CHARGER ANCHORED TO THE TABLE

1 Attach 2 Anchoring Screws to the Tabletop

See location guide, on the previous panel, for the positions of the screws and the size of the screwheads.

2 Attach Charger to Anchoring Screws

Lower the keyhole slots on the base of the charger over the screwheads. Then push the charger backwards until it clicks into place.

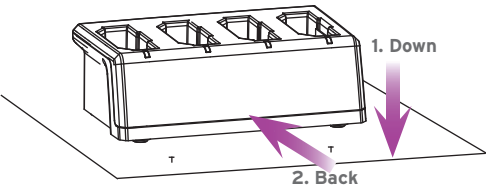


OVER >

CONNECT THE CHARGER TO EXTERNAL POWER

1 Connect the Power Supply to the Charger

Insert the DC plug from the power supply into the socket on the back of the charger:


Rear view of charger

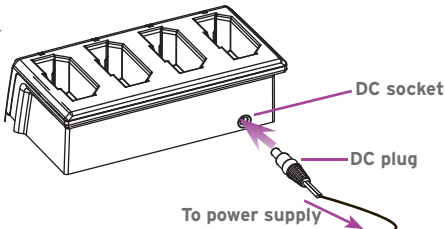

2 Connect the Power Supply to an External Power Source

Place the power supply in the holder and route the cables as shown here:


Rear view of charger on bracket

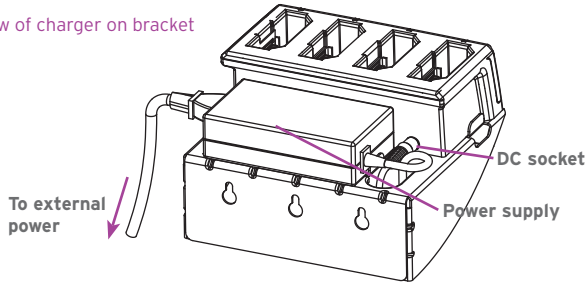

CHARGE

1 Insert an EP10 Battery into the Charger

Slide an EP10 battery, as shown, into each charge compartment until the battery touches the base of the charge compartment.

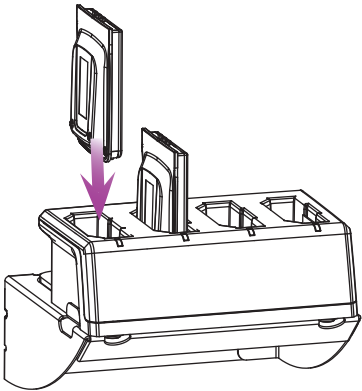


2 Charge EP10 Battery for 3 Hours to 4 Hours

Note: Full battery performance is only reached after the first few charge/discharge cycles.



BATTERY CHARGE INDICATOR

Each charge compartment has a charge LED.

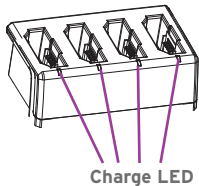

Charge LED Behaviour	Description
Off	No battery detected.
Solid Green	Battery charging complete.
Flashing Green	Charge in progress.
Flashing Yellow	Battery is not charging due to out-of-temperature conditions.
Solid Red	Unable to read battery or non Psion battery.

© Copyright 2011 by Psion Inc.
Psion, Psion Teklogix, and EP10 are trademarks of Psion Inc. Other product names mentioned in this document are trademarks or registered trademarks of other hardware, software, or service providers and are used herein for identification purposes only.



EP10™
RV3004
CHARGER SPARE BATTERY
4 SLOT



RV3007
WALL BRACKET
BATTERY CHARGER - 4 SLOT



QUICK
START
GUIDE

April 21, 2011
PN 8000233.A

ISO 9001 Certified
Quality Management System