


# FR68


## Quick Start Guide

### FEATURES

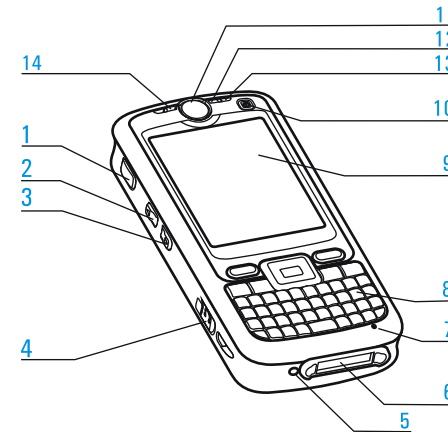


- |                      |                     |
|----------------------|---------------------|
| 1 Scan Button        | 8 Keypad            |
| 2 Volume Up Button   | 9 Touch Screen      |
| 3 Volume Down Button | 10 Power Button     |
| 4 Headset Jack       | 11 Scan/Decode LED  |
| 5 Reset Button       | 12 Charging LED     |
| 6 I/O Connector      | 13 Radio Status LED |
| 7 Microphone         | 14 Receiver         |

- |                     |                      |
|---------------------|----------------------|
| 15 Battery Door     | 22 Exit Window       |
| 16 Door Latch       | 23 Stylus            |
| 17 Speaker          | 24 Scan Button       |
| 18 Camera Flash     | 25 Hold Key          |
| 19 Self-view Mirror | 26 IrDA Window       |
| 20 Camera           | 27 microSD Card Slot |
| 21 Tether Point     | 28 Camera Button     |

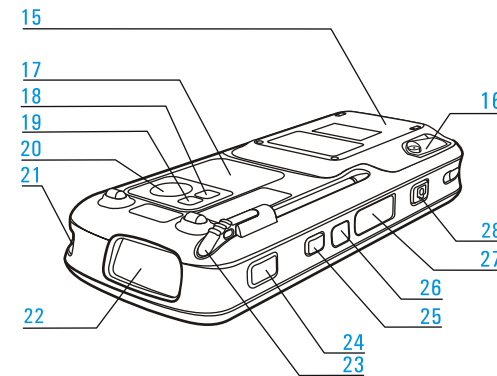

### KEYPADS

- |               |               |
|---------------|---------------|
| 1 Soft Key    | 6 Enter       |
| 2 Start Menu  | 7 End         |
| 3 Talk        | 8 Messaging   |
| 4 Navigation  | 9 Blue key    |
| 5 Scan Button | 10 Orange key |

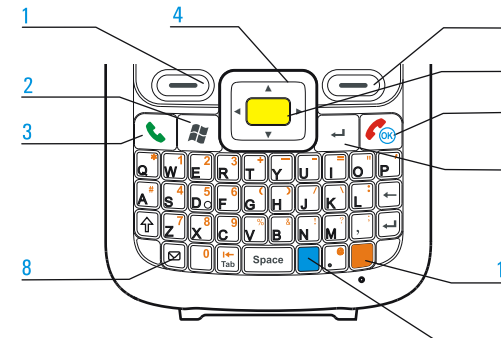

#### Orange Key


Use this key to select items (shown on the keypad in orange).

#### Blue Key

Use this key to select items (shown on the keypad in blue).


### GETTING STARTED

#### 1 Insert the Battery

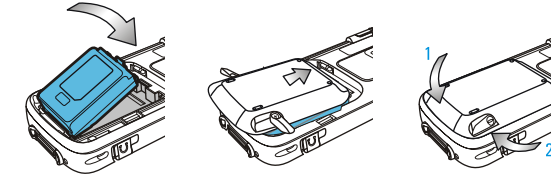

**Note:** Standard Capacity Battery and Door Show Removing battery: After removing the battery door, pls wait for 5 secs before you remove the battery. Secure the battery door onto the device. Ensure that the latch is locked.

#### 2 Charge the FR6800

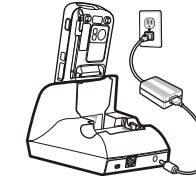



##### Charging LED

Slow Blinking Amber=Charging  
Solid Amber=Fully Charged  
Fast Green=Fully Charged Error

\*It is recommended that FR68 be charged for 24 hours before the first use to ensure that the internal battery is fully charged. When the external battery is completely discharged, please charge the FR68 for approximately 15 minutes before pressing the power button to turn it on. It is normal for the FR68's charging indicator not to flash during the 15 minutes. After pressing the power button, the charging indicator will begin flashing.

**Note:** For use with MC75 cradles(P/N: CRD7X00-1000RR) only. Please put the cradle adaptor into the cradle before charging.


#### 3 Install the Cradle Adaptor

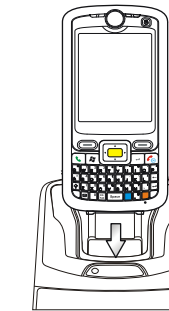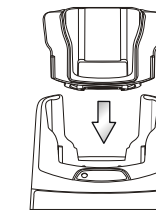

Insert the cradle adaptor into the cradle. The cradle adaptor sit securely inside the cradle. Insert the FR68 into the cradle adaptor to charge.

Do not try to charge the FR68 in the cradle without the cradle adaptor.

#### 4 Remove the FR68 from the Cradle after Charging

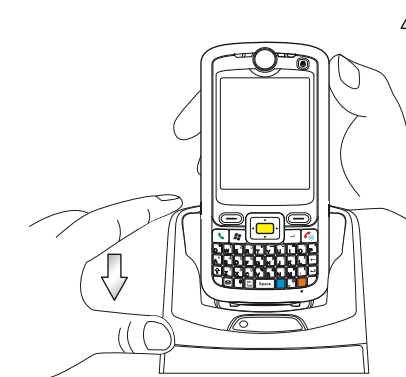

Use one hand to hold the cradle adaptor. Lift the FR68 out of cradle with the other hand. The cradle adaptor remains securely seated in the cradle.

For more information on the FR68, visit the Zebra website at <http://www.zebra.com/FR68>

Setting up and using the FR68  
FR68 User Guide  
Available at <http://www.zebra.com/FR68>

Troubleshooting  
FR68 User Guide  
Available at <http://www.zebra.com/FR68>

Connecting and synchronizing with the host computer  
ActiveSync® Help on the host computer. To view help, start ActiveSync®, click Help— Microsoft ActiveSync Help.

Information on using programs on the FR68  
Tap Start – Help within the specific program.



Zebra Technologies Corporation  
Lincolnshire, IL USA  
Zebra and the Zebra head graphic are registered trademarks of the ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company.  
© 2015 Symbol Technologies, Inc.




72-119042-02 Rev A - March 2015

## 5 Install ActiveSync®

Download ActiveSync® 4.5 or higher from <http://www.microsoft.com> and follow the instructions to install the AActiveSync® onto the host computer.

## 6 Communicate with Host

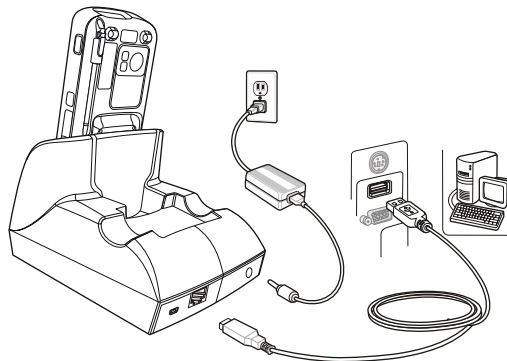


**Note:** Only for USB

## 7 Create a Partnership

Follow the on-screen ActiveSync® instructions to establish a connection between the FR68 and the host computer.


## 8 Insert microSD Card

- 1 Open the microSD card rubber door.
- 2 Insert the microSD card into the card slot with the card contacts facing up.
- 3 Close the microSD card rubber door.

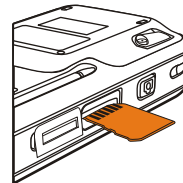

## 9 Insert SIM Card (Located Under Battery)

- 1 Remove the battery door.
- 2 Remove the battery.
- 3 Insert the SIM card with contacts facing down.

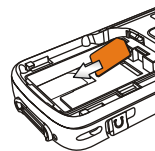


- 4 Replace the battery.
- 5 Replace the battery door.

## Screen Protector

Zebra recommends the use of a screen protector to minimize wear and tear. Screen protectors enhance the usability and durability of touch screen displays. Benefits include:

- Protection from scratches and gouges
- Durable writing and touch surface with tactile feel
- Abrasion and chemical resistance
- Glare reduction
- Keeping the device's screen looking like new
- Quick and easy installation

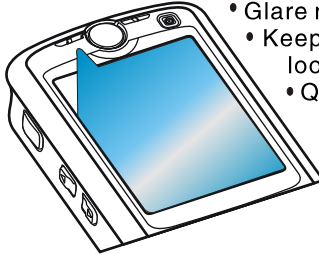


Not using a screen protector can affect your warranty coverage.

An initial screen protector is already applied to your FR68. Contact your local account manager or Zebra for more information and purchasing details. Part number: MN2800AAAPSC



## Charge in Cradle

Slow Blinking Amber: Charging  
Solid Amber: Fully Charged

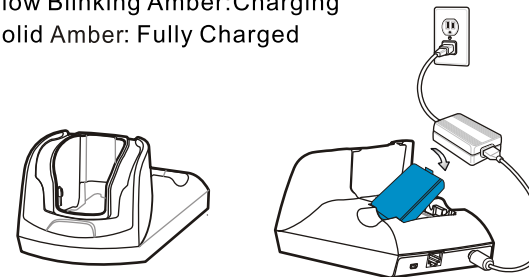

## Spare Battery Charger

Slow Blinking Amber: Charging  
Solid Amber: Fully Charged

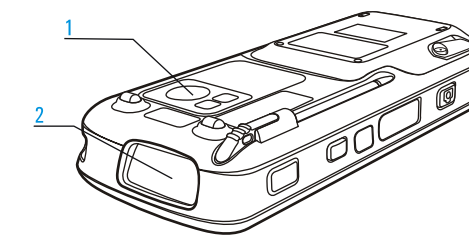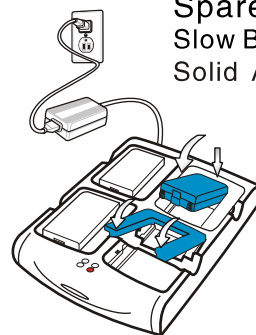


1. Camera lens
2. Exit Window

## GPS Information\*

When using the GPS feature of FR68:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear and unobstructed view of the sky.
- Without a clear view, acquisition takes much longer and could result in the FR68 being unable to compute the initial position quickly.
- Obtain a satellite fix before moving.
- Shutdown GPS application when not in use.

\* If applicable

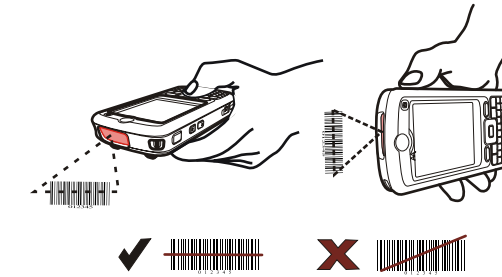

AVOID EXTREME WRIST ANGLES

