
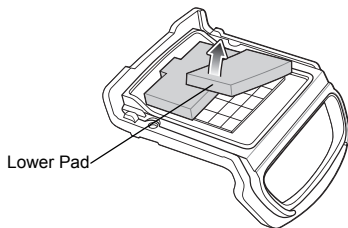
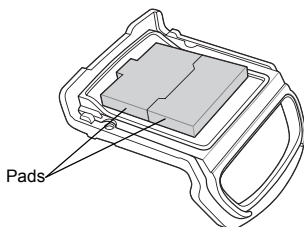


MC1000 Extended SD Card Installation Instructions

When installing an extended Secure Digital (SD) Card, you must remove a pad on the back of the SD Card cover.

1. Remove two screws securing the SD Card cover.
2. Lift the SD Card cover off the mobile computer.
3. Peel the lower pad off the back of the cover.
4. Install the SD Card into the mobile computer.
5. Replace the SD Card cover onto the mobile computer and secure using the two screws.

If the SD Card cover does not have a split pad on the back of the cover, contact Zebra Support. See the *MC1000 Regulatory Guide* for contact information.

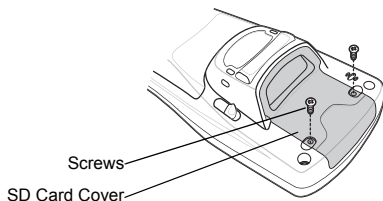

72-85359-03 Revision A - April 2015