


CONTENTS OF THE BOX

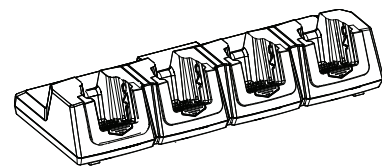

ST4004 Quad Docking Station



This Guide



 
Ethernet cable (0.9 metre)



Omnii Accessories
Regulatory & Warranty Guide



AC/DC Adaptor




Country-specific power cord, sold separately

FEATURES


FRONT

Charging compartment (quantity 4)

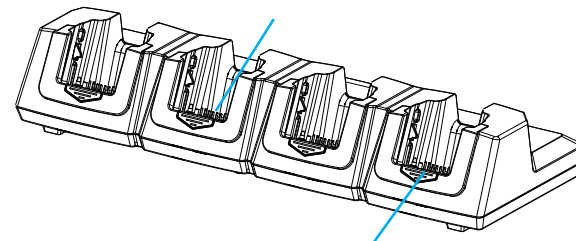

Docking connectors (quantity 4)

BACK

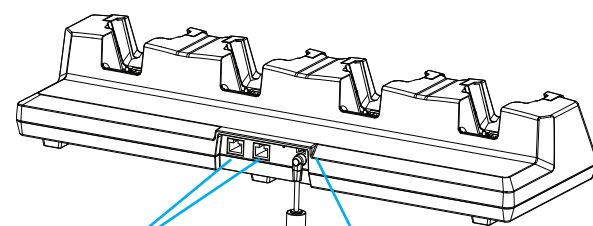

RJ45 Ethernet ports

DC In connector

OPERATION


The **ST4004** features:

- Fast charging of the Omnii internal battery for 4 units.
- An RJ45 10/100 Base-T Ethernet interface compatible with the USB to Ethernet drivers included in Omnii.
- An additional Ethernet interface for connecting more docking stations downstream, up to 4 on the same network.

GETTING STARTED


1 Connect the Docking Station to external power.

Note: Use only the universal AC power adaptor approved by Psion for use with the Quad Docking Station.

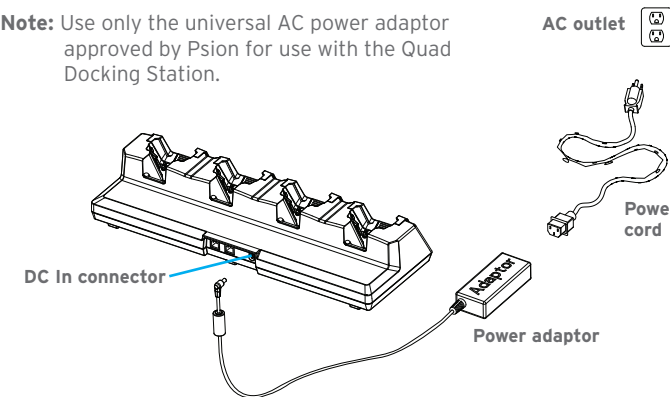


Warning: Use an IEC320-C13 power cord approved by Psion, with the ground pin connected to a proper earth-grounded receptacle. Check with a qualified electrician if you are uncertain of your receptacle grounding.


2 Connect the Docking Station to an Ethernet network.

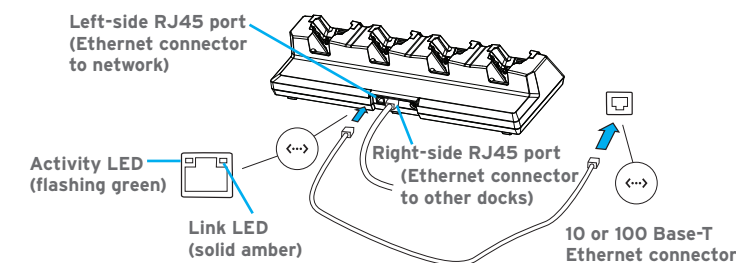

The Ethernet connection in the Quad Docking Station

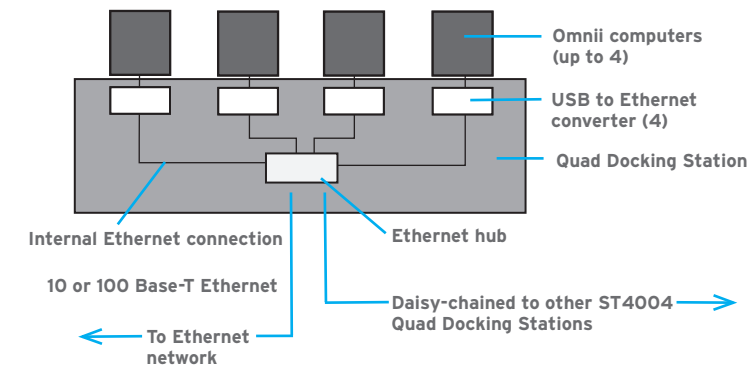

Maximum of four ST4004 Quad Docking Stations on one network cable

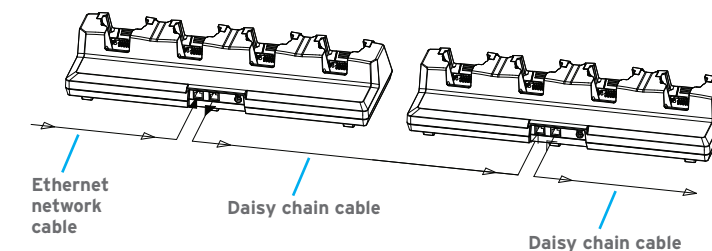


OVER ➤




3 Insertion and removal of the Omnii computers.

Slide Omnii into the docking station until it latches.

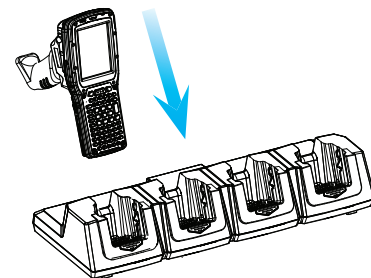

To remove Omnii, push down on the release mechanism on the front face of the docking bay. The hand-held will detach from the docking bay release arms and can be pulled up and out.

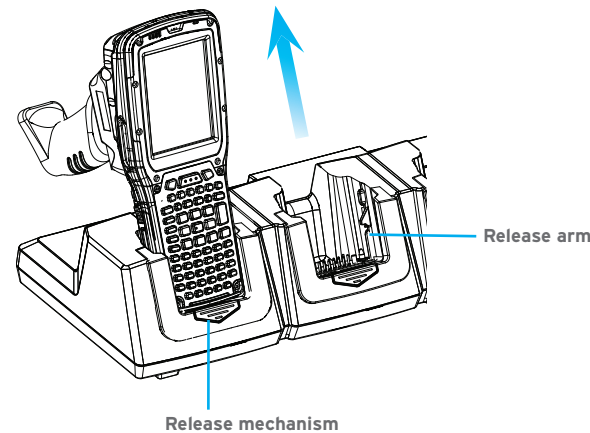

4 Allow the Omnii computers to charge for 3-4 hours before first use.

Note: Full battery performance is only reached after the first few charge/discharge cycles.



Omnii Battery Charge LED Behaviour

Charge LED Behaviour	Function
OFF	No battery detected.
Solid Green	Battery charging complete.
Flashing Green	Charge in progress.
Flashing Yellow	Battery is not charging due to out-of-temperature conditions.
Solid Red	Unable to read battery or non Psion battery.


CONNECTING TO AN ETHERNET NETWORK

When an Omnii is inserted in the docking station, a dock icon is displayed in the taskbar at the bottom of the screen. The Omnii also detects the presence of the Ethernet network and automatically detects and loads the appropriate drivers to communicate with the network.

© Copyright 2011 by Psion Inc.
2100 Meadowvale Boulevard, Mississauga, Ontario, Canada L5N 7J9
<http://www.pSION.com>
Psion, the Psion logo, and the names of other products and services provided by Psion are trademarks of Psion Inc. All trademarks used herein are the property of their respective owners.



Omnii
ST4004 QUAD
DOCKING STATION
QUICK START GUIDE

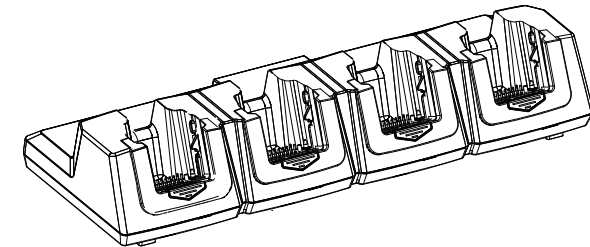

August 19, 2011
PN 8000222.A

ISO 9001 Certified
Quality Management System