




PD40

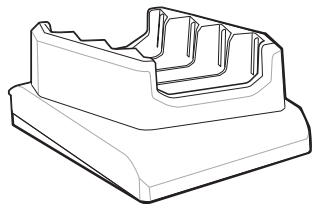


Charging Cup


Installation Guide




## 1 Remove Power

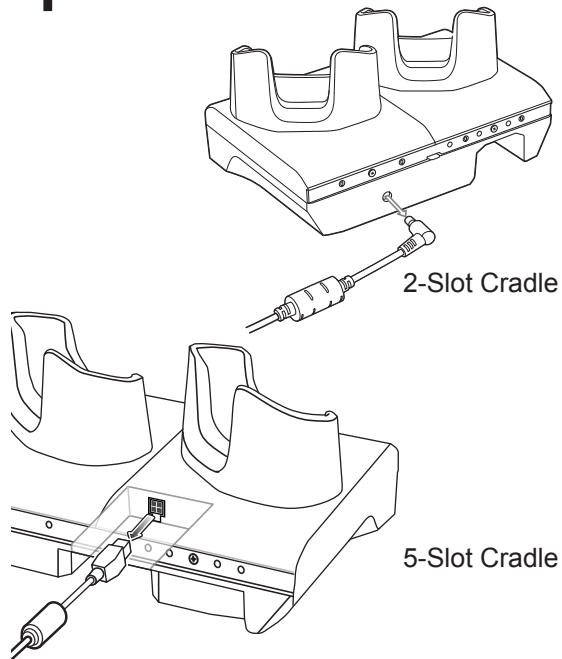


## 2 Remove Screw

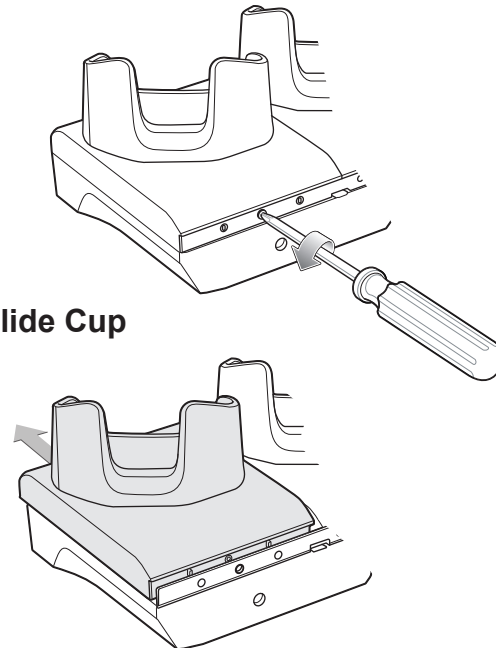

## 3 Slide Cup

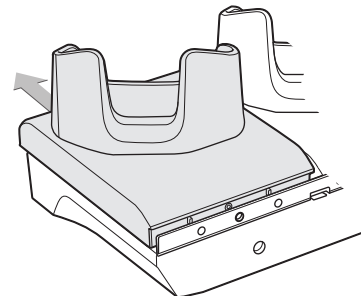

## 4 Disconnect Cup Cable from Base

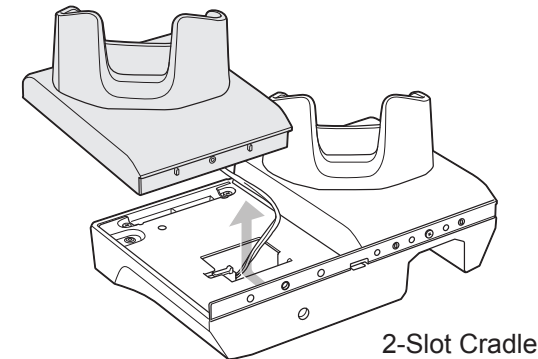

Zebra Technologies Corporation  
3 Overlook Point  
Lincolnshire, IL 60069, U.S.A.


Zebra and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.  
© 2015 Symbol Technologies LLC. All rights reserved.





MN-002669-01 Rev. A — November 2015




## 4 Disconnect Cup Cable From Base

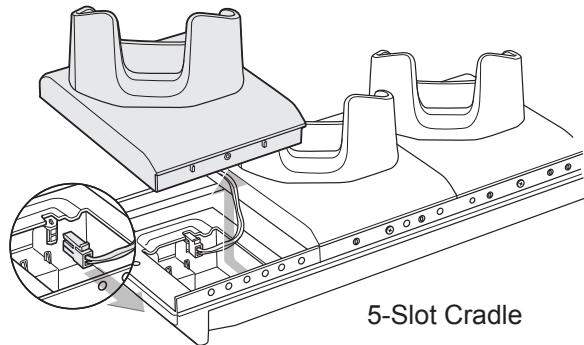


## 5 Connect Charging Cup Cable to Base

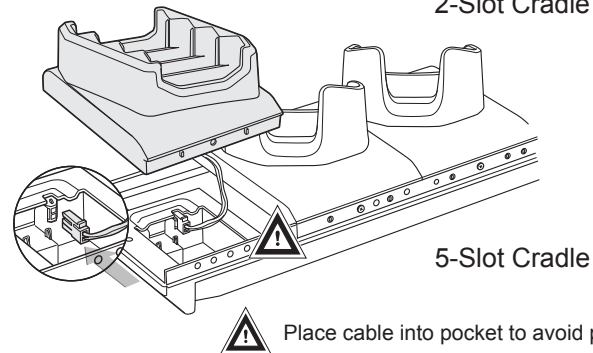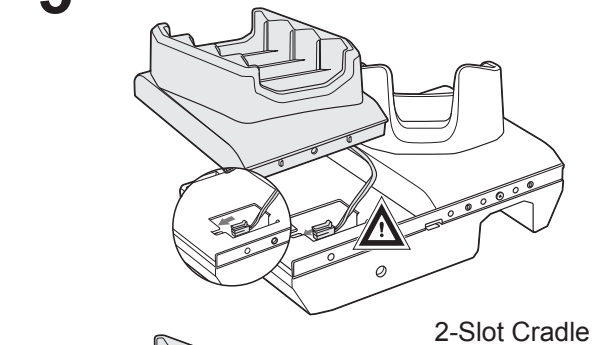


 Place cable into pocket to avoid pinching

## 6 Slide Cup

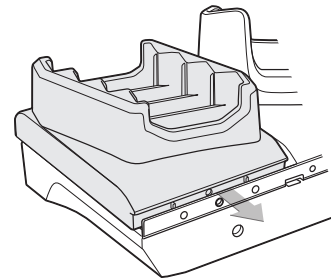

## 7 Secure Cup

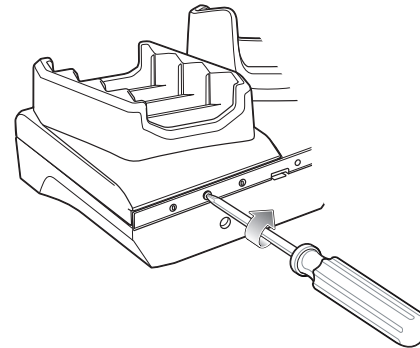


## Regulatory Information

This guide applies to part number: CUP-PD40-4SCHG.

All Zebra devices are designed to be compliant with the rules and regulations in the locations at which they are sold and will be labeled as required.

Local language translations are available at the following website: <http://www.zebra.com/support>. Any changes or modifications to Zebra equipment, not expressly approved by Zebra could void the user's authority to operate the equipment.

Any changes or modifications to Zebra equipment, not expressly approved by Zebra could void the user's authority to operate the equipment.

 **CAUTION** For use only with Zebra approved and UL Listed devices. Zebra approved, and UL Listed/Recognized battery packs.