

# Ethernet Bracket Installation Guide




MN-004058-01EN — 10/20 Rev A


Zebra Technologies | 3 Overlook Point | Lincolnshire, IL 60069 USA  
www.zebra.com

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. © 2020 Zebra Technologies Corp. and/or its affiliates. All rights reserved.


1. Flip the assembly over and unscrew the bracket to detach.

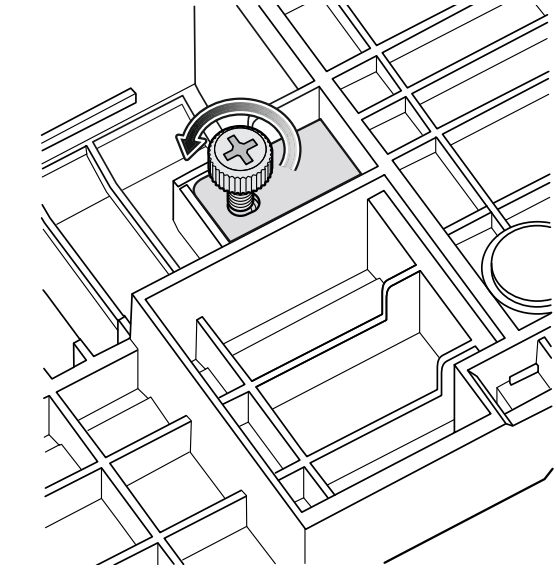

2. Slide bracket downwards and lift up to remove from the assembly.

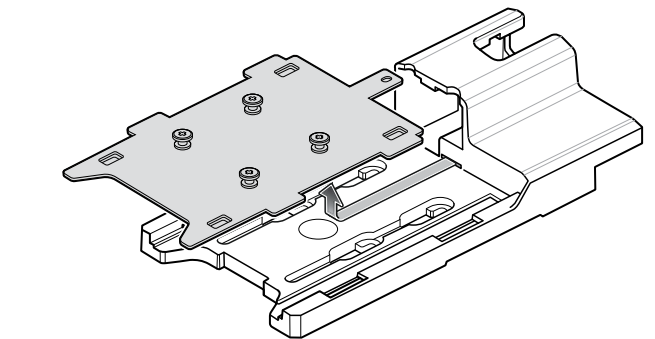


Stampings in down position by default.

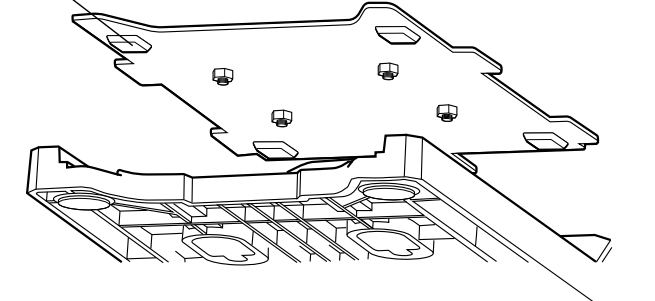


New cradle installations vary from the default configuration.  
if the label on the bottom of the cradle is white, remove the screws, flip the bracket over, and insert the screws with the stampings on the bracket facing upwards as shown in steps 4 and 5.  
if the label on the bottom of the cradle is black, continue to step 6.


3. If required, remove the screws and nuts.

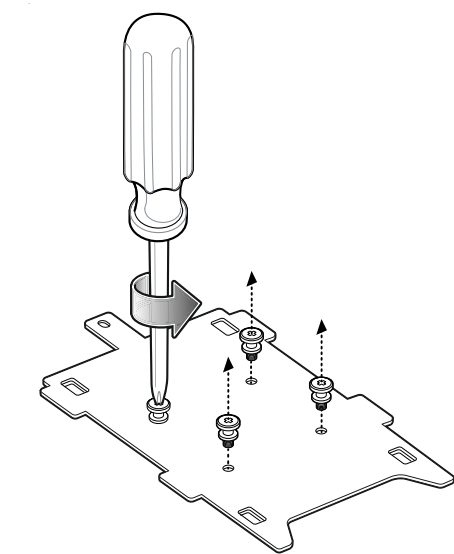


4. If required, flip over the bracket and re-insert and secure the screws.  
(Recommended Torque: 1.6 KGF-CM)

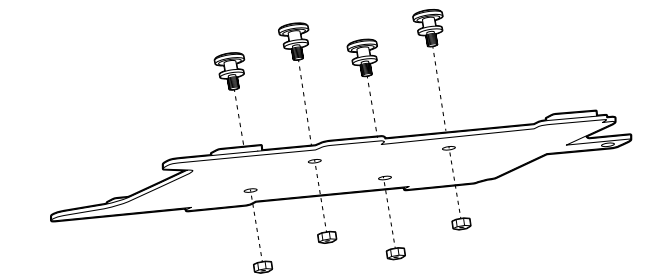


5. Place the cradle on the bracket and push forward to lock in place.

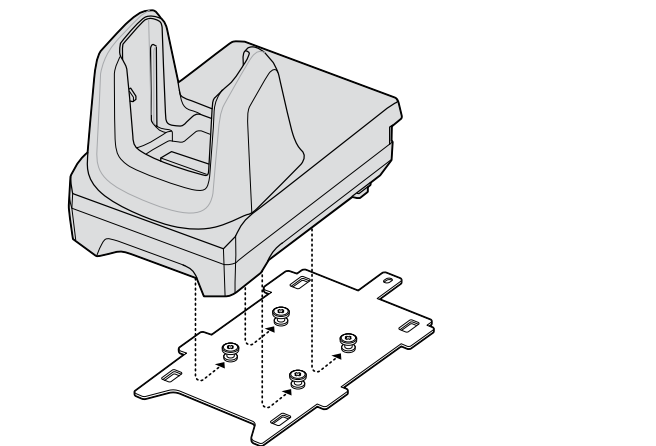

6. Place cradle with the bracket onto base and slide forward.

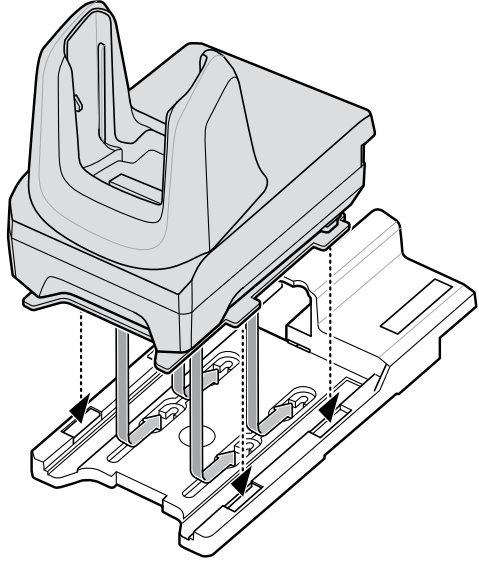

7. Push cradle into base.

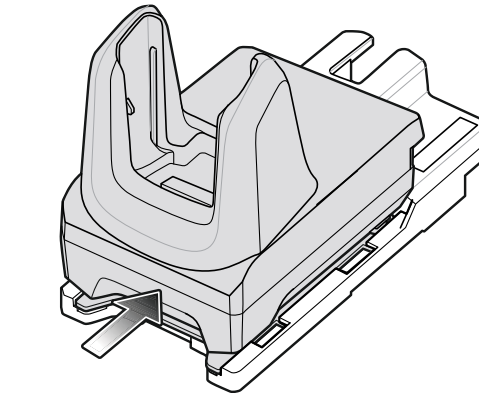

8. Insert screw to secure the bracket to the assembly. (Recommended Torque: 1.6 KGF-CM)

