



# TC70x/TC75x

Touch Computer

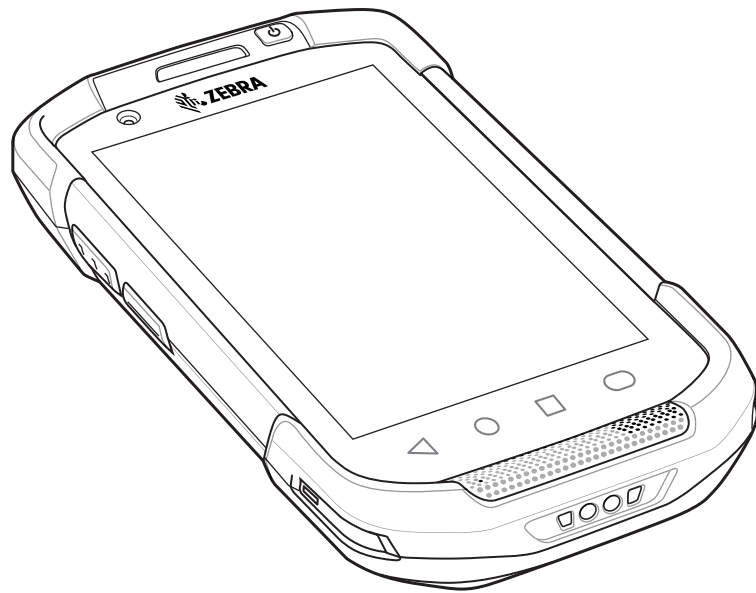

**Integrator Guide**  
for Android™ 7.1.2 Nougat

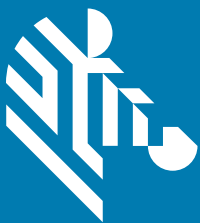

**ZEBRA**

## Copyright

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. Google, Android, Google Play and other marks are trademarks of Google LLC. All other trademarks are the property of their respective owners. ©2019 Zebra Technologies Corporation and/or its affiliates. All rights reserved.

COPYRIGHTS & TRADEMARKS: For complete copyright and trademark information, go to [www.zebra.com/copyright](http://www.zebra.com/copyright).

WARRANTY: For complete warranty information, go to [www.zebra.com/warranty](http://www.zebra.com/warranty).

END USER LICENSE AGREEMENT: For complete EULA information, go to [www.zebra.com/eula](http://www.zebra.com/eula).

---

## Terms of Use

- **Proprietary Statement**

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

- **Product Improvements**

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

- **Liability Disclaimer**

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

- **Limitation of Liability**

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

---

## Revision History

Changes to the original guide are listed below:

Change	Date	Description
-01 Rev A	10/2017	Initial release.
-02 Rev. A	1/2018	Add TC75x information.
-03 Rev. A	4/2018	Update approved cleanser active ingredients.

Change	Date	Description
-04 Rev A	7/2018	Added note in Maintenance and Troubleshooting. SmartMU section only applies to LifeGuard 8 or earlier.
-05 Rev A	11/2018	Add step to Remapping a Button. If remapping Back, Home, Search, or Menu button, perform a Soft Reset.
-06 Rev A	8/2019	Remove Imager as Camera from DataWedge chapter. Add note to battery installation instructions warning against putting anything inside the battery well.

# Table of Contents

Terms of Use .....	2
Revision History .....	2

<b>Table of Contents.....</b>	<b>4</b>
-------------------------------	----------

## About This Guide

Introduction .....	12
Documentation Set .....	12
Configurations .....	12
Software Versions .....	13
Chapter Descriptions .....	14
Notational Conventions .....	14
Related Documents .....	14
Service Information .....	15
Provide Documentation Feedback .....	15

## Getting Started

Introduction .....	16
Setup .....	16
Installing the SIM Card .....	16
Installing the SAM Card .....	17
Installing a microSD Card .....	18
Installing the Hand Strap and Battery .....	19
Installing the Battery .....	21
Charging the Battery .....	21
Charging Indicators .....	22
Replacing the Battery .....	23
Replacing the SIM or SAM Card .....	25
Replacing the microSD Card .....	27
Resetting the Device .....	28
Performing a Soft Reset .....	28
Performing a Hard Reset .....	29



## Accessories

Introduction .....	30
Accessories .....	30
2-Slot Charge Only Cradle .....	33
Setup .....	34
Charging the Device .....	34
Charging the Spare Battery .....	35
Battery Charging .....	36
Main Battery Charging .....	36
Spare Battery Charging .....	36
Charging Temperature .....	36
2-Slot USB/Ethernet Cradle .....	37
Setup .....	38
Charging the Device .....	38
Charging the Spare Battery .....	39
Battery Charging .....	40
Main Battery Charging .....	40
Spare Battery Charging .....	40
Charging Temperature .....	41
USB/Ethernet Communication .....	41
Ethernet LED Indicators .....	41
Ethernet Settings .....	41
Configuring Ethernet Proxy Settings .....	42
Configuring Ethernet Static IP Address .....	42
5-Slot Charge Only Cradle .....	44
Setup .....	44
Charging the Device .....	45
Battery Charging .....	46
Main Battery Charging .....	46
Charging Temperature .....	46
Installing the Four Slot Battery Charger .....	47
Removing the 4-Slot Battery Charger .....	51
5-Slot Ethernet Cradle .....	52
Setup .....	53
Daisy-chaining Ethernet Cradles .....	53
Ethernet Settings .....	54
Configuring Ethernet Proxy Settings .....	54
Configuring Ethernet Static IP Address .....	55
LED Indicators .....	56
Charging the Device .....	56
Battery Charging .....	58
Main Battery Charging .....	58
Spare Battery Charging .....	58
Charging Temperature .....	59
Establishing Ethernet Connection .....	59
Installing the 4-Slot Battery Charger .....	59
Removing the 4-Slot Battery Charger .....	64
4-Slot Battery Charger .....	65
Setup .....	65
Charging Spare Batteries .....	65
Battery Charging .....	66

## Table of Contents

Spare Battery Charging .....	66
Charging Temperature .....	66
Trigger Handle .....	67
Installing the Attachment Plate to Trigger Handle .....	67
Installing the Trigger Handle Plate .....	67
Inserting the Device into the Trigger Handle .....	68
Removing the Device from the Trigger Handle .....	70
Hand Strap Replacement .....	72
 <b>USB Communication</b>	
Introduction .....	75
Connecting to a Host Computer via USB .....	75
Transferring Files using Media Transfer Protocol .....	75
Transferring Files using Photo Transfer Protocol .....	76
Disconnect from the Host Computer .....	76
 <b>DataWedge</b>	
Introduction .....	77
Basic Scanning .....	77
Profiles .....	77
Profile0 .....	78
Plug-ins .....	78
Input Plug-ins .....	78
Process Plug-ins .....	79
Output Plug-ins .....	79
Profiles Screen .....	80
Profile Context Menu .....	80
Options Menu .....	81
Disabling DataWedge .....	81
Creating a New Profile .....	81
Profile Configuration .....	82
Associating Applications .....	83
Data Capture Plus .....	85
Bar Code Input .....	88
Enabled .....	88
Scanner Selection .....	88
Decoders .....	88
Decoder Params .....	90
Codabar .....	90
<b>Code 11</b> .....	<b>91</b>
Code128 .....	91
Code39 .....	92
Code93 .....	92
Composite AB .....	93
Discrete 2 of 5 .....	93
GS1 DataBar Limited .....	93
<b>HAN XIN</b> .....	<b>93</b>
Interleaved 2 of 5 .....	93
Matrix 2 of 5 .....	94

## Table of Contents

MSI .....	94
Trioptic 39 .....	94
UK Postal .....	94
UPCA .....	95
UPCE0 .....	95
UPCE1 .....	95
US Planet .....	96
Decode Lengths .....	96
UPC EAN Params .....	96
Reader Params .....	98
Scan Params .....	100
UDI Params .....	101
Keep enabled on suspend .....	101
Simulscan Input .....	101
Keystroke Output .....	102
Intent Output .....	104
Intent Overview .....	104
IP Output .....	105
Usage .....	106
Using IP Output with IPWedge .....	107
Using IP Output without IPWedge .....	108
Generating Advanced Data Formatting Rules .....	109
Configuring ADF Plug-in .....	109
Creating a Rule .....	110
Defining a Rule .....	110
Defining Criteria .....	111
Defining an Action .....	113
Deleting a Rule .....	114
Order Rules List .....	114
Deleting an Action .....	115
ADF Example .....	116
DataWedge Settings .....	118
Importing a Configuration File .....	119
Exporting a Configuration File .....	120
Importing a Profile File .....	120
Exporting a Profile .....	120
Restoring DataWedge .....	120
Configuration and Profile File Management .....	121
Enterprise Folder .....	121
Auto Import .....	121
Programming Notes .....	121
Overriding Trigger Key in an Application .....	121
Capture Data and Taking a Photo in the Same Application .....	121
Disable DataWedge on Device and Mass Deploy .....	122
Soft Scan Feature .....	122
Sample .....	122
Scanner Input Plugin .....	122
Function Prototype .....	123
Parameters .....	123
Return Values .....	123
Example .....	123

## Table of Contents

Comments .....	124
Enumerate Scanners .....	124
Function Prototype .....	124
Parameters .....	124
Return Values .....	124
Example .....	125
Comments .....	125
Set Default Profile .....	125
Default Profile Recap .....	125
Usage Scenario .....	126
Function Prototype .....	126
Parameters .....	126
Return Values .....	126
Example .....	127
Comments .....	127
Reset Default Profile .....	128
Function Prototype .....	128
Parameters .....	128
Return Values .....	128
Example .....	128
Comments .....	128
Switch To Profile .....	129
Profiles Recap .....	129
Usage Scenario .....	129
Function Prototype .....	129
Parameters .....	129
Return Values .....	130
Example .....	130
Comments .....	130
Notes .....	131
 <b>Settings</b>	
Introduction .....	132
WWAN Configuration .....	132
Default SIM Slot Configuration .....	132
WLAN Configuration .....	133
Configuring a Secure Wi-Fi Network .....	133
Manually Adding a Wi-Fi Network .....	134
Configuring for a Proxy Server .....	135
Configuring the Device to Use a Static IP Address .....	136
Advanced Wi-Fi Settings .....	137
Additional Wi-Fi Settings .....	138
Screen Unlock Settings .....	140
Set Screen Unlock Using PIN .....	141
Set Screen Unlock Using Password .....	142
Set Screen Unlock Using Pattern .....	142
Passwords .....	143
Button Remapping .....	144
Remapping a Button .....	144
Accounts .....	145

## Table of Contents

Language Usage .....	145
Changing the Language Setting .....	146
Adding Words to the Dictionary .....	146
Keyboard Settings .....	146
PTT Express Configuration .....	146
RxLogger .....	146
RxLogger Configuration .....	147
ANR Module .....	148
Kernal Module .....	148
Logcat Module .....	149
LTS Module .....	150
Ramoops Module .....	150
Resource Module .....	150
Snapshot Module .....	151
TCPDump Module .....	152
Tombstone Module .....	152
Configuration File .....	152
Enabling Logging .....	152
Disabling Logging .....	152
Extracting Log Files .....	152
RxLogger Utility .....	153
App View .....	153
Viewing Logs .....	153
Backup .....	154
Archiving .....	155
Overlay View .....	155
Removing the Main Chat Head .....	155
Viewing Logs .....	155
Removing a Sub Chat Head Icon .....	157
Backup .....	157
About Phone .....	157

### Application Deployment

Introduction .....	159
Security .....	159
Secure Certificates .....	159
Installing a Secure Certificate .....	159
Configuring Credential Storage Settings .....	160
Development Tools .....	160
Android .....	160
EMDK for Android .....	162
StageNow .....	162
ADB USB Setup .....	162
Enabling USB Debugging .....	162
Application Installation .....	163
Installing Applications Using the USB Connection .....	163
Installing Applications Using the Android Debug Bridge .....	165
Installing Applications Using a microSD Card .....	165
Uninstalling an Application .....	166
Performing a System Update .....	167

Download the System Update Package .....	167
Using microSD Card .....	167
Using ADB .....	168
Verify System Update Installation .....	169
Performing an Enterprise Reset .....	169
Download the Enterprise Reset Package .....	169
Using microSD Card .....	169
Using ADB .....	170
Performing a Factory Reset .....	171
Download the Factory Reset Package .....	171
Using microSD Card .....	171
Using ADB .....	171
Storage .....	172
Random Access Memory .....	172
Internal Storage .....	173
External Storage .....	175
Formatting a microSD Card .....	177
Format as Internal Memory .....	179
Enterprise Folder .....	181
Application Management .....	181
Viewing Application Details .....	182
Managing Downloads .....	183

## Maintenance and Troubleshooting

Introduction .....	184
Maintaining the TC70x/TC75x .....	184
Battery Safety Guidelines .....	184
Cleaning Instructions .....	185
Approved Cleanser Active Ingredients .....	185
Harmful Ingredients .....	186
Cleaning Instructions .....	186
Special Cleaning Notes .....	186
Cleaning Materials Required .....	186
Cleaning Frequency .....	186
Cleaning the TC70x/TC75x .....	187
Housing .....	187
Display .....	187
Camera and Exit Window .....	187
Connector Cleaning .....	187
Cleaning Cradle Connectors .....	187
Troubleshooting .....	189
SmartMU .....	189
Camera Preview .....	189
Home Screen .....	190
Scan List .....	191
Networking Tools .....	195
TC70x/TC75x .....	198
2-Slot Charge Only Cradle .....	201
2-Slot USB/Ethernet Cradle .....	202
5-Slot Charge Only Cradle Troubleshooting .....	203

## Table of Contents

5-Slot Ethernet Cradle Troubleshooting .....	204
4-Slot Battery Charger Troubleshooting .....	204

### Technical Specifications

Introduction .....	206
TC70x/TC75x .....	206
SE4750-SR Decode Distances .....	209
I/O Connector Pin-Outs .....	210
2-Slot Charge Only Cradle Technical Specifications .....	211
2-Slot USB/Ethernet Cradle Technical Specifications .....	211
5-Slot Charge Only Cradle Technical Specifications .....	212
5-Slot Ethernet Cradle Technical Specifications .....	212
4-Slot Battery Charger Technical Specifications .....	213
Charge Only Vehicle Cradle Technical Specifications .....	214
Trigger Handle Technical Specifications .....	214
Charging Cable Cup Technical Specifications .....	215
Snap-On USB Cable Technical Specifications .....	215
Snap-On Serial Cable Technical Specifications .....	215
DEX Cable Technical Specifications .....	216

### Index

# About This Guide

---

## Introduction

This guide provides information about using the TC70x and TC75x touch computers and accessories.



**NOTE:** Screens and windows pictured in this guide are samples and can differ from actual screens.

---

## Documentation Set

The documentation set provides information for specific user needs, and includes:

- TC70x/TC75x Quick Start Guide - describes how to get the TC70x/TC75x up and running.
- TC70x/TC75x User Guide for Android Version 7.1.2 - describes how to use the TC70x and TC75x.
- TC70x/TC75x Integrator Guide for Android Version 7.1.2 - describes how to set up the TC70x and TC75x and accessories.

---

## Configurations

This guide covers the following configurations:





Configuration	Radios	Display	Memory	Data Capture Options	Operating System
TC700K	WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy	4.7" High Definition (1280 x 720) LCD	2 GB RAM/16 GB Flash	2D imager, camera, or integrated NFC	Android 7.1.2
TC75EK	WWAN: HSPA+/LTE/CDMA WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy	4.7" High Definition (1280 x 720) LCD	2 GB RAM/16 GB Flash (SLC High Reliability Flash)	2D imager, camera, or integrated NFC	Android 7.1.2
TC75FK	WWAN: HSPA+/LTE WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy	4.7" High Definition (1280 x 720) LCD	2 GB RAM/16 GB Flash (SLC High Reliability Flash)	2D imager, camera and integrated NFC	Android 7.1.2
TC75GK	WWAN: HSPA+/LTE WLAN: 802.11 a/b/g/n/d/h/i/r WPAN: Bluetooth v4.0 Low Energy	4.7" High Definition (1280 x 720) LCD	2 GB RAM/16 GB Flash (SLC High Reliability Flash)	2D imager, camera and integrated NFC	Android 7.1.2

## Software Versions

To determine the current software versions touch  >  **About phone**.

- **Model number**- Displays the model number.
- **Android version** - Displays the operating system version.
- **Kernel version** - Displays the kernel version number.
- **Build number** - Displays the software build number.

To determine the device serial number touch  >  **About phone** > **Status**.

- **Serial number** - Displays the serial number.

---

## Chapter Descriptions

Topics covered in this guide are as follows:

- [Getting Started](#) provides information on getting the TC70x/TC75x up and running for the first time.
- [Accessories](#) describes the available accessories and how to use them with the TC70x/TC75x.
- [USB Communication](#) describes how to connect the TC70x/TC75x to a host computer using USB.
- [DataWedge](#) describes how to use and configure the DataWedge application.
- [Settings](#) provides the settings for configuring the TC70x/TC75x.
- [Application Deployment](#) provides information for developing and managing applications.
- [Maintenance and Troubleshooting](#) includes instructions on cleaning and storing the TC70x/TC75x, and provides troubleshooting solutions for potential problems during TC70x/TC75x operation.
- [Technical Specifications](#) provides the technical specifications for the TC70x/TC75x.

---

## Notational Conventions

The following conventions are used in this document:

- **Bold** text is used to highlight the following:
  - Dialog box, window and screen names
  - Drop-down list and list box names
  - Check box and radio button names
  - Icons on a screen
  - Key names on a keypad
  - Button names on a screen.
- Bullets (•) indicate:
  - Action items
  - Lists of alternatives
  - Lists of required steps that are not necessarily sequential.
- Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

---

## Related Documents

- TC70x/TC75x Quick Start Guide for Android Version 6.0.1, p/n MN-002879-xx.
- TC70x Regulatory Guide, p/n MN-002960-xx.
- TC75x Regulatory Guide, p/n MN-002880-xx.
- TC70x/TC75x User Guide for Android Version 7.1.2, p/n MN-002881-xx.

For the latest version of this guide and all guides, go to: [www.zebra.com/support](http://www.zebra.com/support)


---

### Service Information

If you have a problem with the equipment, contact Customer Support in the region. Contact information is available at: <http://www.zebra.com/support>.

When contacting support, please have the following information available:

- Serial number of the unit (found on manufacturing label)
- Model number or product name (found on manufacturing label)
- Software type and version number
- IMEI number

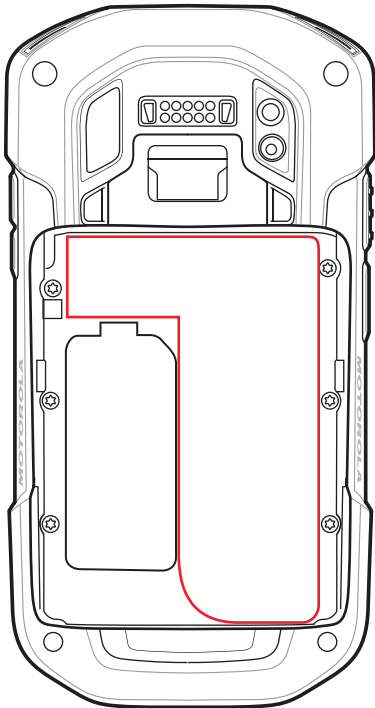

Customer Support responds to calls by email or telephone within the time limits set forth in support agreements.

If the problem cannot be solved by Customer Support, the user may need to return the equipment for servicing and will be given specific directions. We are not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty. Remove the SIM card and/or microSD card from the device before shipping for service.

If the device was purchased from a business partner, contact that business partner for support.

---

### Provide Documentation Feedback

If you have comments, questions, or suggestions about this guide, send an email to [EVM-Techdocs@zebra.com](mailto:EVM-Techdocs@zebra.com).

# Getting Started

---

## Introduction

This chapter provides information for getting the device up and running for the first time.

---

## Setup

Perform this procedure to start using the TC70x/TC75x for the first time.

- Install a SIM card (TC75x only).
- Install a SAM card.
- Install a micro secure digital (SD) card (optional).
- Install hand strap (optional).
- Install the battery.
- Charge the TC70x/TC75x.
- Power on the TC70x/TC75x.

## Installing the SIM Card



**NOTE:** TC75x only.




**CAUTION:** For proper electrostatic discharge (ESD) precautions to avoid damaging the SIM card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.



**NOTE:** The TC75x may contain one mini SIM slot and two nano SIM slots. If using a micro SIM card, a third-party SIM adapter is required. By default, use a nano SIM card in slot 1.


1. Remove access cover.

**Figure 1** TC75x SIM Slot Locations

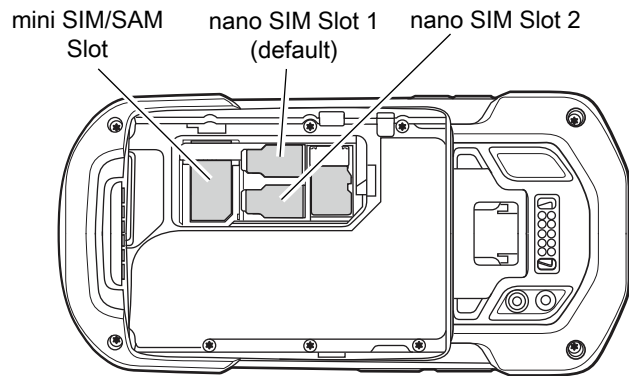


2. Insert a SIM card into the SIM slot with the cut edge toward the middle of the device and the contacts facing down.

**Figure 2** nano SIM Card Installation

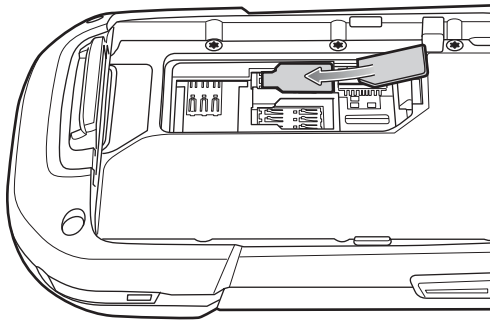

**Figure 3** Mini SIM Card Installation

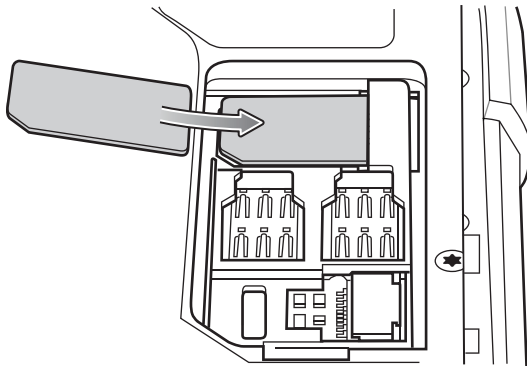

3. Ensure that the SIM card is seated properly.

## Installing the SAM Card




**CAUTION:** For proper electrostatic discharge (ESD) precautions to avoid damaging the SIM card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.



**NOTE:** The TC70x/TC75x contains one slot for a mini SAM card. If using a micro SAM card, a third-party adapter is required. On the TC75x, when using a SAM card, only a nano SIM card can be used.

1. Remove access cover.
2. Insert a SAM card into the SAM slot with the cut edge toward the middle of the device and the contacts facing down.

**Figure 4** SAM Card Installation

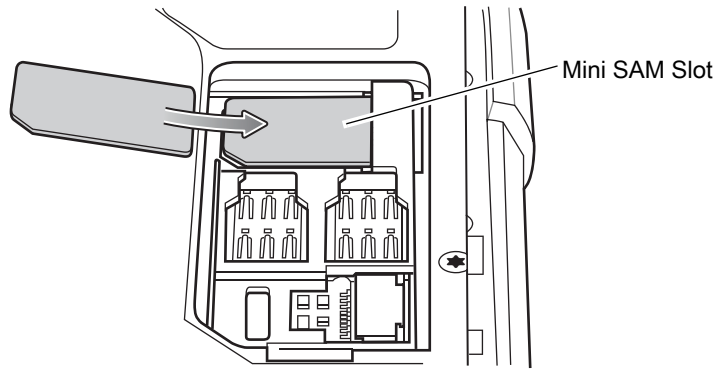

3. Ensure that the SAM card is seated properly.

## Installing a microSD Card


The microSD card slot provides secondary non-volatile storage. The slot is located under the battery pack. Refer to the documentation provided with the card for more information, and follow the manufacturer's recommendations for use.



**CAUTION:**For proper electrostatic discharge (ESD) precautions to avoid damaging the SIM card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.


1. Remove the hand strap, if installed.
2. Lift the access door.

**Figure 5** Lift Access Door

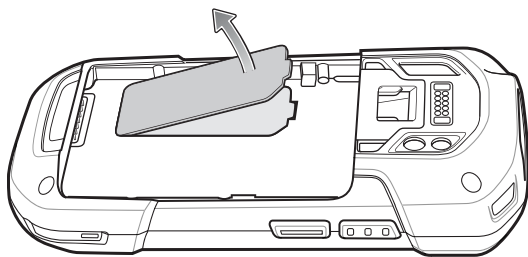

3. Insert the microSD card into the card holder door ensuring that the card slides into the holding tabs on each side of the door.

**Figure 6** Insert microSD Card in Holder

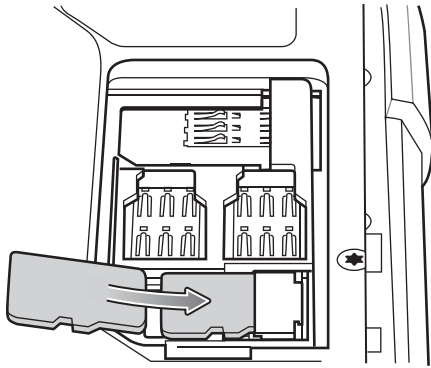

4. Re-install the access door.

---

## Installing the Hand Strap and Battery


- ✓ **NOTE:** User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.

To install the hand strap and battery:

- ✓ **NOTE:** Installation of the hand strap is optional. Skip this section if not installing the hand strap.


1. Remove the hand strap filler from the hand strap slot. Store the hand strap filler in a safe place for future replacement.

**Figure 7** Remove Filler

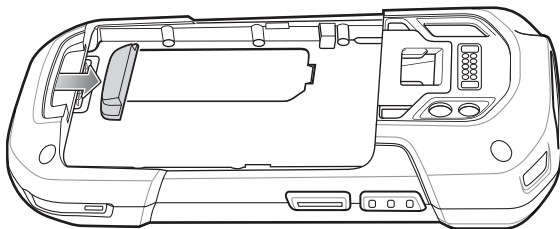


2. Insert the hand strap plate into the hand strap slot.

**Figure 8** Insert Hand Strap

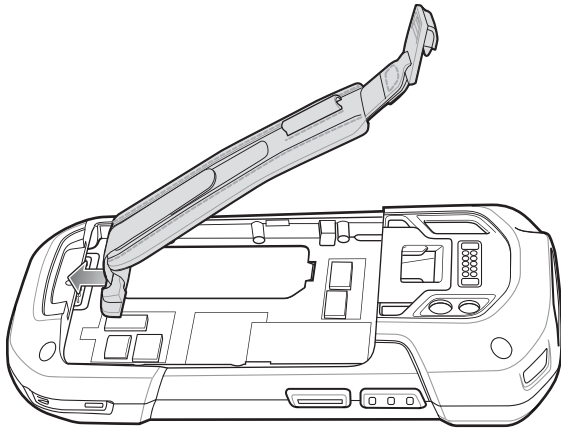


3. Insert the battery, bottom first, into the battery compartment in the back of the TC70x/TC75x.

**Figure 9** Insert Bottom of Battery into Battery Compartment

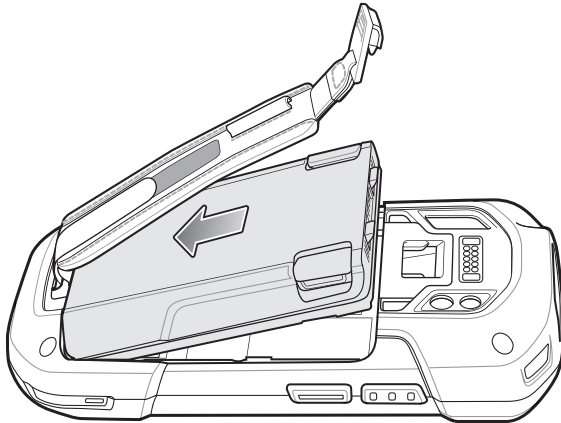

4. Press the battery down into the battery compartment until the battery release latches snap into place.


**Figure 10** Press Down on Battery

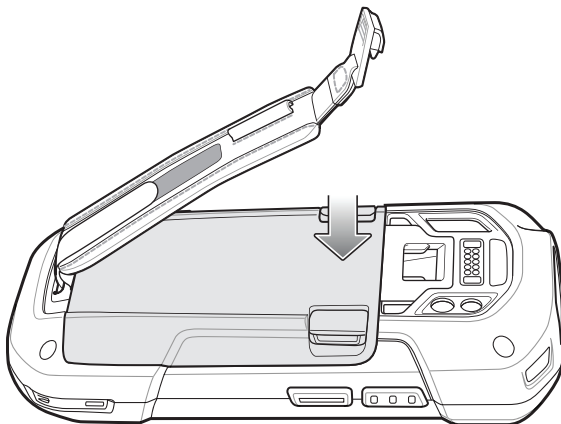

5. Place hand strap clip into hand strap mounting slot and pull down until it snaps into place.



**Figure 11** Secure Hand Strap Clip

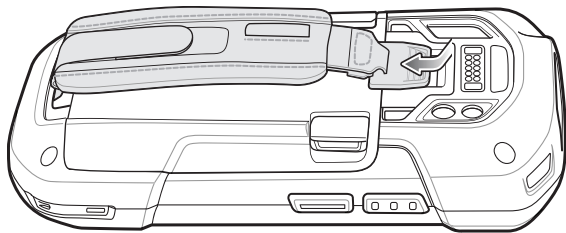

## Installing the Battery




**NOTE:** User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.

To install the battery:


1. Insert the battery, bottom first, into the battery compartment in the back of the TC70x/TC75x.

**Figure 12** Insert Bottom of Battery into Battery Compartment

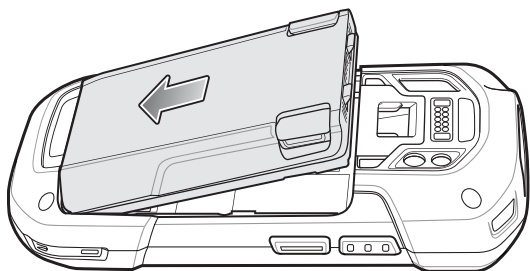

2. Press the battery down into the battery compartment until the battery release latches snap into place.

**Figure 13** Press Down on Battery

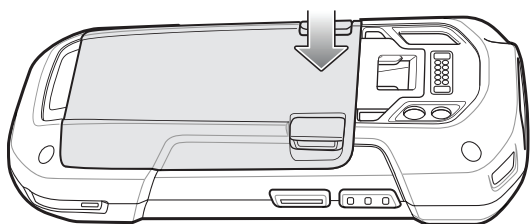

## Charging the Battery

Before using the TC70x/TC75x for the first time, charge the main battery until the green Charging/Notification light emitting diode (LED) remains lit. To charge the TC70x/TC75x, use a cable or a cradle with the appropriate power supply. For information about the accessories available for the TC70x/TC75x, see [Accessories](#) for more information.

- Snap-On USB Cable
- Charging Cable Cup

- 2-Slot Charge Only Cradle
- 2-Slot USB/Ethernet Cradle
- 5-Slot Charge Only Cradle
- 5-Slot Ethernet Cradle
- Charge Only Vehicle Cradle
- Auto Charging Cable Cup.
- Serial Cable Cup

The 4,620 mAh battery fully charges in less than five hours at room temperature.

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The TC70x/TC75x or accessory always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the TC70x/TC75x or accessory may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The TC70x/TC75x or accessory indicates when charging is disabled due to abnormal temperatures via its LED.

1. To charge the main battery, connect the charging accessory to the appropriate power source.
2. Insert the TC70x/TC75x into a cradle or attach to a cable. The TC70x/TC75x turns on and begins charging. The Charging/Notification LED blinks amber while charging, then turns solid green when fully charged.

## Charging Indicators

**Table 1** Charging/Notification LED Charging Indicators

State	Indication
Off	The device is not charging. The device is not inserted correctly in the cradle or connected to a power source. Charger/cradle is not powered.
Slow Blinking Amber (1 blink every 4 seconds)	The device is charging.
Solid Green	Charging complete.
Fast Blinking Amber (2 blinks/second)	Charging error, e.g.: <ul style="list-style-type: none"> <li>• Temperature is too low or too high.</li> <li>• Charging has gone on too long without completion (typically eight hours).</li> </ul>
Slow Blinking Red (1 blink every 4 seconds)	The device is charging but the battery is at end of useful life.
Solid Red	Charging complete but the battery is at end of useful life.
Fast Blinking Red (2 blinks/second)	Charging error but the battery is at end of useful life., e.g.: <ul style="list-style-type: none"> <li>• Temperature is too low or too high.</li> <li>• Charging has gone on too long without completion (typically eight hours).</li> </ul>

## Replacing the Battery




**NOTE:** User modification of the device, particularly in the battery well, such as labels, asset tags, engravings, stickers, etc., may compromise the intended performance of the device or accessories. Performance levels such as sealing (Ingress Protection (IP)), impact performance (drop and tumble), functionality, temperature resistance, etc. could be effected. DO NOT put any labels, asset tags, engravings, stickers, etc. in the battery well.



**CAUTION:** Do not add or remove SIM, SAM or microSD card during battery replacement.


1. Remove any accessory attached to the device.
2. For devices with the Battery Swap mode feature:
  - a. Press the Power button until the menu appears.
  - b. Touch **Battery Swap**.
  - c. Follow the on-screen instructions.
  - d. Wait for the LED to turn off.
3. For devices without Battery Swap mode feature:
  - a. Press the Power button until the menu appears.
  - b. Touch **Power off**.
  - c. Touch **OK**.
4. If hand strap is attached, slide the hand strap clip up toward the top of the TC70x/TC75x and then lift.

**Figure 14** Remove Hand Strap Clip

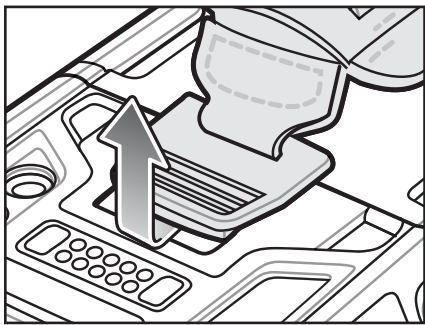


5. Press the two battery latches in.

**Figure 15** Press Battery Latches

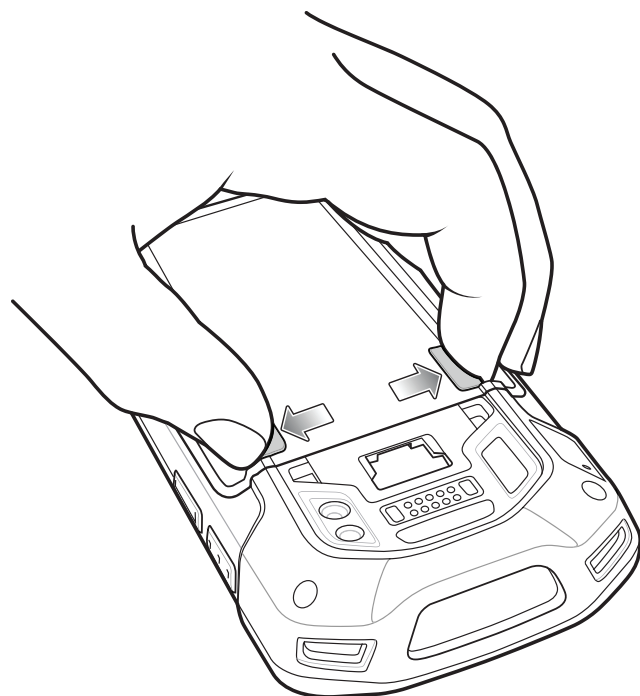

6. Lift the battery from the TC70x/TC75x.

**Figure 16** Lift the Battery

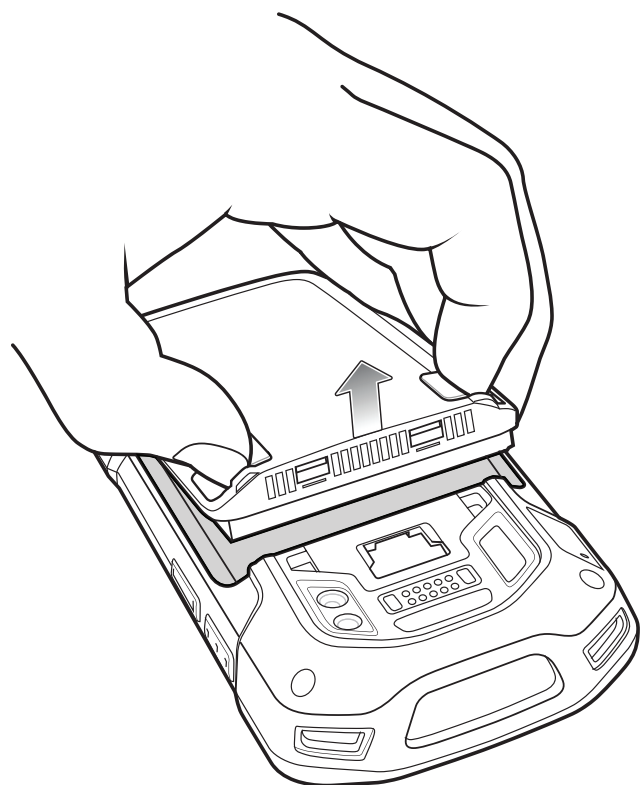

**CAUTION:** Replace the battery within two minutes. After two minutes the device reboots and data may be lost.

7. Insert the replacement battery, bottom first, into the battery compartment in the back of the TC70x/TC75x.
8. Press the battery down until the battery release latch snaps into place.
9. Replace the hand strap, if required.
10. Press and hold the Power button to turn on the TC70x/TC75x.

---

## Replacing the SIM or SAM Card




**NOTE:** SIM replacement applies to TC75x only.

To replace the SIM or SAM card:


1. Press and hold the Power button until the menu appears.
2. Touch **Power off**.
3. Touch **OK**.
4. If hand strap is attached, slide the hand strap clip up toward the top of the TC70x/TC75x and then lift.

**Figure 17** Remove Hand Strap Clip

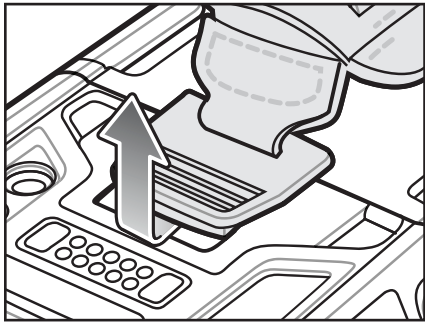


5. Press the two battery latches in.
6. Lift the battery from the TC70x/TC75x.
7. Lift the access door.

**Figure 18** Remove Access Door

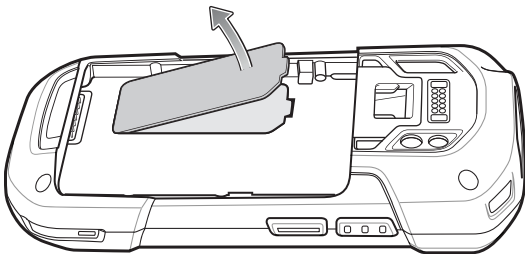


8. Remove card from holder.

**Figure 19** Remove Mini SIM/SAM Card

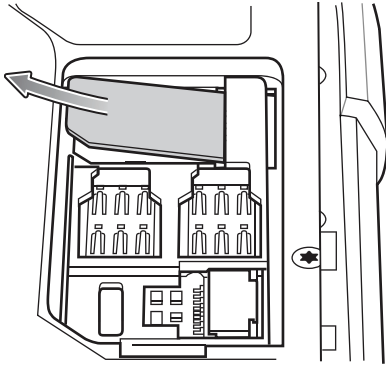


**Figure 20** Remove Nano SIM Card

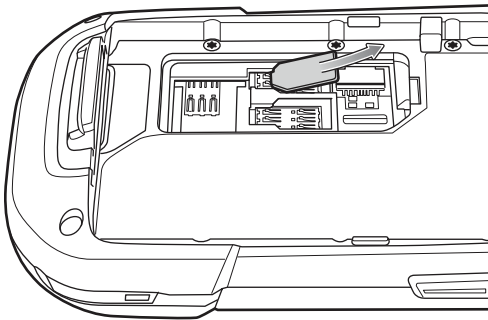


9. Insert the replacement card.

**Figure 21** Insert Mini SIM/SAM Card

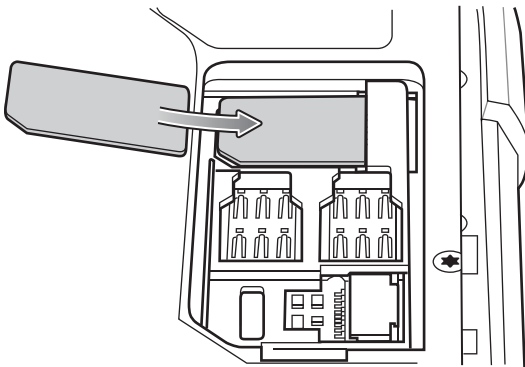


**Figure 22** Insert Nano SIM Card

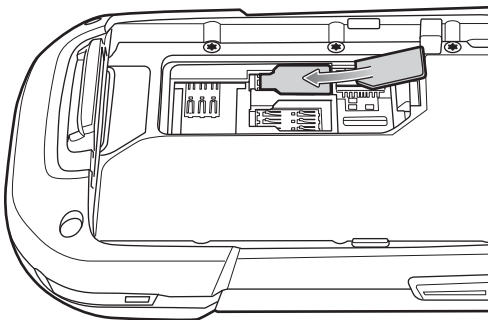

10. Replace the access door.

**Figure 23** Replace Access Door

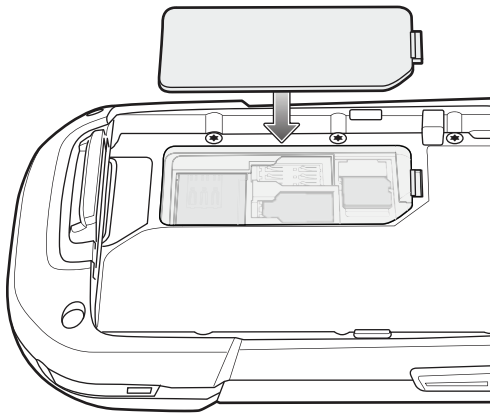

11. Press the access door down and ensure that it is properly seated.
12. Insert the battery, bottom first, into the battery compartment in the back of the TC70x/TC75x.
13. Press the battery down until the battery release latch snaps into place.
14. Replace the hand strap, if required.
15. Press and hold the Power button to turn on the TC70x/TC75x.


---

## Replacing the microSD Card

To replace the microSD card:


1. Press the Power button until the menu appears.
2. Touch **Power off**.
3. Touch **OK**.
4. If hand strap is attached, slide the hand strap clip up toward the top of the TC70x/TC75x and then lift.

**Figure 24** Remove Hand Strap Clip

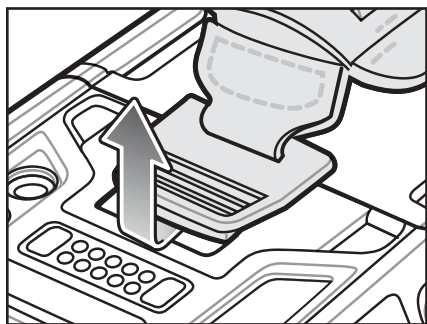


5. Press the two battery latches in.
6. Lift the battery from the TC70x/TC75x.
7. Lift the access door.

**Figure 25** Remove Access Door

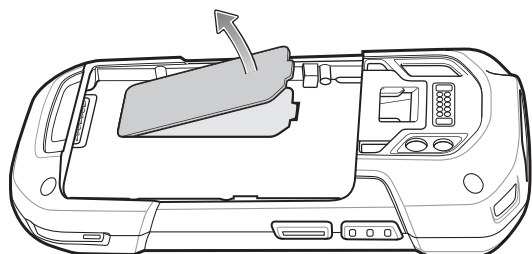

8. Remove microSD card from holder.
9. Press the access door down and ensure that it is properly seated.
10. Insert the replacement microSD card.
11. Replace the access door.

**Figure 26** Replace Access Door

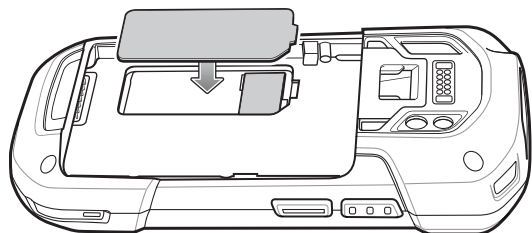

12. Insert the battery, bottom first, into the battery compartment in the back of the TC70x/TC75x.
13. Press the battery down until the battery release latch snaps into place.
14. Replace the hand strap, if required.
15. Press and hold the Power button to turn on the TC70x/TC75x.

---

## Resetting the Device

There are four reset functions:

- Soft reset
- Hard reset
- Enterprise reset. See [Performing an Enterprise Reset on page 169](#).
- Factory reset. See [Performing a Factory Reset on page 171](#).

### Performing a Soft Reset

Perform a soft reset if applications stop responding.

1. Press and hold the Power button until the menu appears.
2. Touch **Reset**.
3. The device reboots.



### Performing a Hard Reset



**CAUTION:** Performing a hard reset with a SD card installed in the TC70x/TC75x may cause damage or data corruption to the SD card.

Perform a hard reset if the TC70x/TC75x stops responding.

1. Simultaneously press the Power, Scan and Volume Up buttons for at least four seconds.
2. When the screen turns off, release the buttons.
3. The TC70x/TC75x reboots.

# Accessories

## Introduction

This chapter provides information for using the accessories for the device.

## Accessories

This table lists the accessories available for the TC70x/TC75x.

**Table 2** Accessories

Accessory	Part Number	Description
<b>Cradles</b>		
2-Slot Charge Only Cradle	CRD-TC7X-SE2CPP-01	Provides device and spare battery charging. Use with power supply, p/n PWRS-14000-148R.
2-Slot USB/Ethernet Cradle	CRD-TC7X-SE2EPP-01	Provides device and spare battery charging and USB communication with a host computer and Ethernet communication with a network. Use with power supply, p/n PWRS-14000-148R.
5-Slot Charge Only Cradle	CRD-TC7X-SE5C1-01	Charges up to five devices. Use with power supply, p/n PWRS-14000-241R and DC line cord, p/n 50-16002-029R. Can accommodate one 4-Slot Battery Charger using the Battery Adapter Cup.
5-Slot Ethernet Cradle	CRD-TC7X-SE5EU1-01	Provides device charging and provides Ethernet communication for up to five devices. Use with power supply, p/n PWRS-14000-241R and DC line cord, p/n 50-16002-029R. Can accommodate one 4-Slot Battery Charger using the Battery Adapter Cup.
Cradle Mount	BRKT-SCRD-SMRK-01	Mounts the 5-Slot Charge Only Cradle, 5-Slot Ethernet Cradle, and 4-Slot Battery Charger to a wall or rack.
<b>Batteries and Chargers</b>		
4,620 mAh PowerPrecision+ battery	BTRY-TC7X-46MPP-01	Replacement battery (single pack).
	BTRY-TC7X-46MPP-10	Replacement battery (10-pack).

**Table 2** Accessories (Continued)

Accessory	Part Number	Description
4-Slot Spare Battery Charger	SAC-TC7X-4BTYPP-01	Charges up to four battery packs. Use with power supply, p/n PWRS-14000-148R.
Battery Charger Adapter Cup	CUP-SE-BTYADP1-01	Allows for one 4-Slot Battery Charger to be charged and docked on the left most slot of the 5-Slot cradles (maximum one per cradle).
Vehicle Solutions		
Charging Cable Cup	CHG-TC7X-CLA1-01	Provides power to the device from a cigarette lighter socket.
Charge Only Vehicle Cradle	CRD-TC7X-CVCD1-01	Charges and securely holds the device. Requires power cable CHG-AUTO-CLA1-01 or CHG-AUTOHWIRE1-01, sold separately.
Cigarette Light Adapter Auto Charge Cable	CHG-AUTO-CLA1-01	Provides power to the Vehicle Cradle from a cigarette lighter socket.
Hard-wire Auto Charge Cable	CHG-AUTO-HWIRE1-01	Provides power to the Vehicle Cradle from the vehicle's power panel.
RAM Mount	RAM-B-166U	Provides window mounting option for the Vehicle Cradle. RAM Twist Lock Suction Cup with Double Socket Arm and Diamond Base Adapter. Overall Length: 6.75".
RAM Mount Base	RAM-B-238U	RAM 2.43" x 1.31" Diamond Ball base with 1" ball.
Charge and Communication Cables		
Charging Cable Cup	CHG-TC7X-CBL1-01	Provides power to the device. Use with power supply, p/n PWRS-14000-249R, sold separately.
Snap-On USB Cable	CBL-TC7X-CBL1-01	Provides power to the device and USB communication with a host computer. Use with power supply, p/n PWRS-14000-249R, sold separately.
Snap-On Serial Cable	CBL-TC7X-SERL1-01	Provides power and serial communication with a host computer. Use with power supply, p/n PWRS-14000-249R, sold separately.
Snap-On DEX Cable	CBL-TC7X-DEX1-01	Provides electronic data exchange with devices such as vending machines.
Audio Accessories		
Premium Headset	RCH51	Premium Rugged headset.
3.5 mm Audio Adapter	ADP-TC7X-AUD35-01	Snaps onto the device and provides audio to a wired headset with 3.5 mm plug.
3.5 mm Headset	HDST-35MM-PTVP-01	Use for PTT and VoIP calls.
3.5 mm Quick Disconnect Adapter Cable	ADP-35M-QDCBL1-01	Provides connection to the 3.5 mm Headset.

**Table 2** Accessories (Continued)

Accessory	Part Number	Description
Scanning		
Trigger Handle	TRG-TC7X-SNP1-01	Adds gun-style handle with a scanner trigger for comfortable and productive scanning.
Carrying Solutions		
Soft Holster	SG-TC7X-HLSTR1-01	TC7X soft holster.
Rigid Holster	SG-TC7X-RHLSTR1-01	TC7X rigid holster.
Hand Strap	SG-TC7X-HSTRP1-03	Replacement hand strap with hand strap mounting clip (3-pack).
Stylus and Coiled Tether	SG-TC7X-STYLUS-03	TC7X stylus with coiled tether (3-pack).
Power Supplies		
Power Supply	PWRS-14000-249R	Provides power to the device using the Snap-On USB Cable, Snap-on Serial Cable or Charging Cable Cup. Requires AC line cord.
Power Supply	PWRS-14000-148R	Provides power to the 2-Slot cradles and 4-Slot Spare Battery Charger. Requires AC line cord.
Power Supply	PWRS-14000-241R	Provides power to the 5-Slot Charge Only cradle and the 5-Slot Ethernet Cradle. Requires DC Line Cord, p/n 50-16002-029R and country specific three wire grounded AC line cord sold separately.
DC Line Cord	50-16002-029R	Provides power from the power supply to the 5-Slot Charge Only Cradle and 5-Slot Ethernet Cradle.


---

## 2-Slot Charge Only Cradle

The 2-Slot Charge Only Cradle:


- Provides 5 VDC power for operating the device.
- Charges the device's battery.
- Charges a spare battery.

**Figure 27** 2-Slot Charge Only Cradle

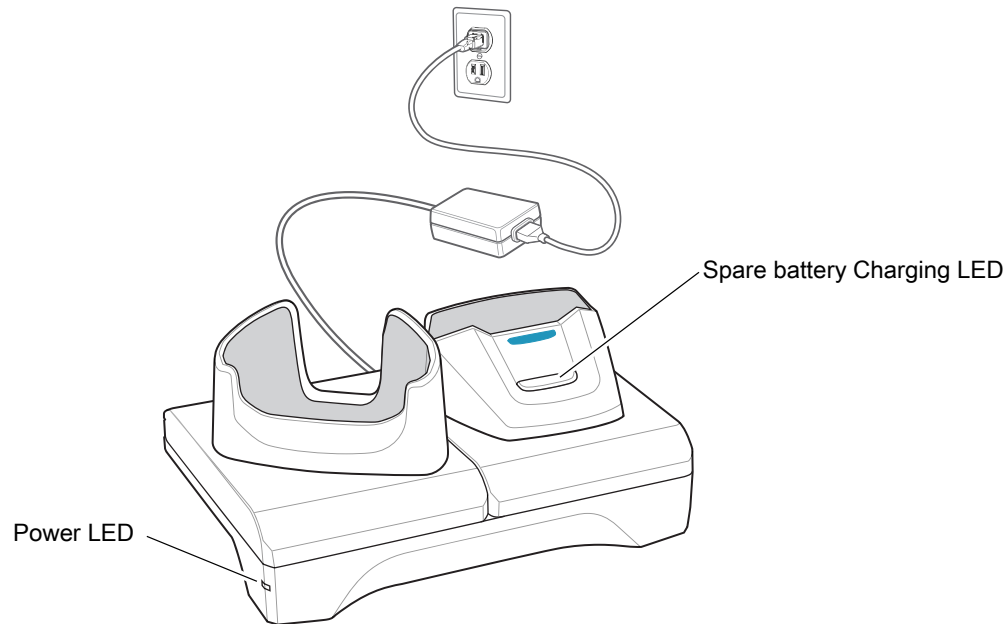

## Setup


**Figure 28** 2-Slot Charge Only Cradle

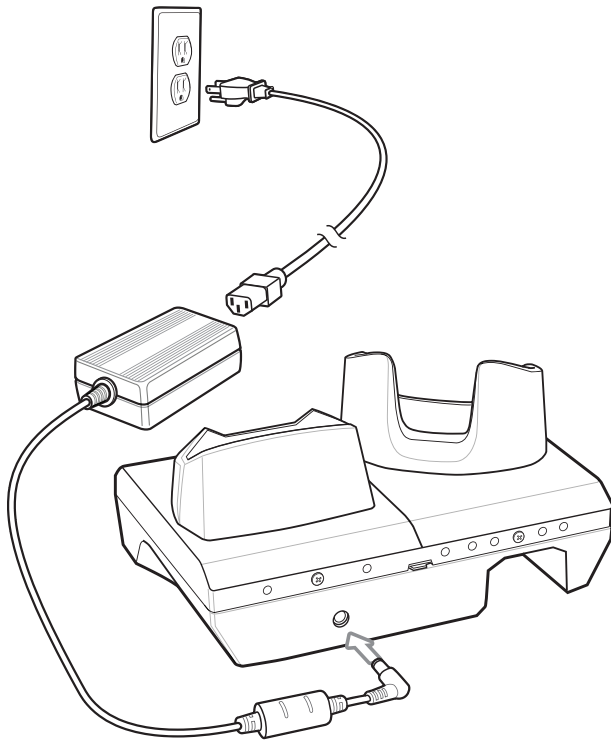

## Charging the Device

1. Insert the device into the slot to begin charging.

**Figure 29** Battery Charging

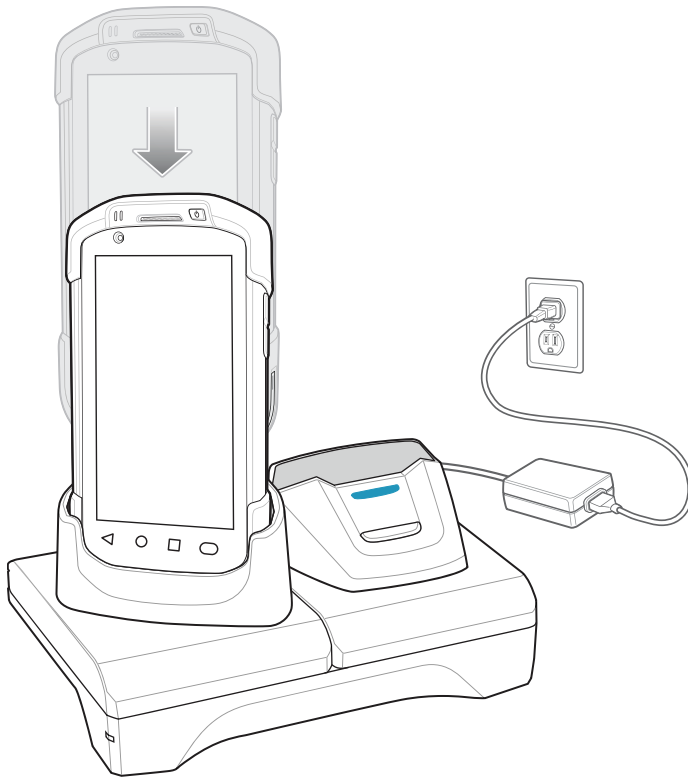


2. Ensure the device is seated properly.

## Charging the Spare Battery

1. Insert the battery into the right slot to begin charging.

**Figure 30** Spare Battery Charging

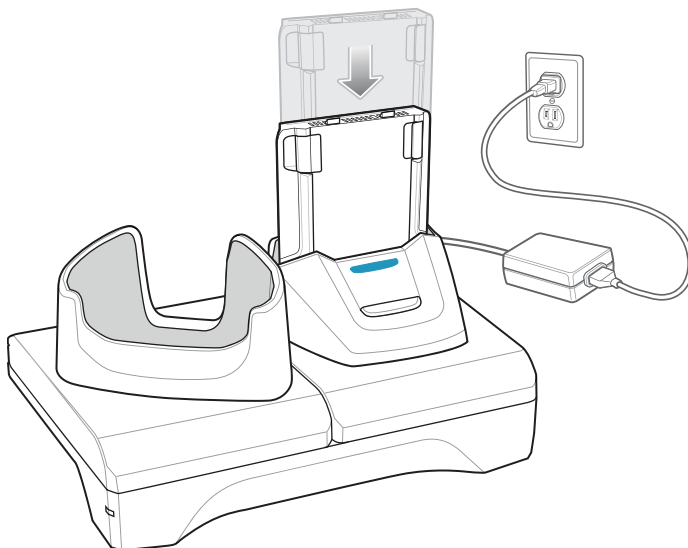

2. Ensure the battery is seated properly.

## Battery Charging

### Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

### Spare Battery Charging

The Spare battery Charging LED on the cup indicates the status of the spare battery charging.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

**Table 3** Spare Battery Charging LED Indicators

LED	Indication
Slow Blinking Amber	Spare battery is charging.
Solid Green	Charging complete.
Fast Blinking Amber	Error in charging; check placement of spare battery.
Slow Blinking Red	Spare battery is charging and battery is at the end of useful life.
Solid Red	Charging complete and battery is at the end of useful life.
Fast Blinking Red	Error in charging; check placement of spare battery and battery is at the end of useful life.
Off	No spare battery in slot; spare battery not placed correctly; cradle is not powered.

## Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.



## 2-Slot USB/Ethernet Cradle


The 2-Slot USB/Ethernet Cradle:

- Provides 5.0 VDC power for operating the device.
- Charges the device's battery.
- Charges a spare battery.
- Connects the device to an Ethernet network.
- Provides communication to a host computer using a USB cable.




**NOTE:** Remove all attachments on the device, except the hand strap, before place onto the cradle.

**Figure 31** 2-Slot USB/Ethernet Cradle

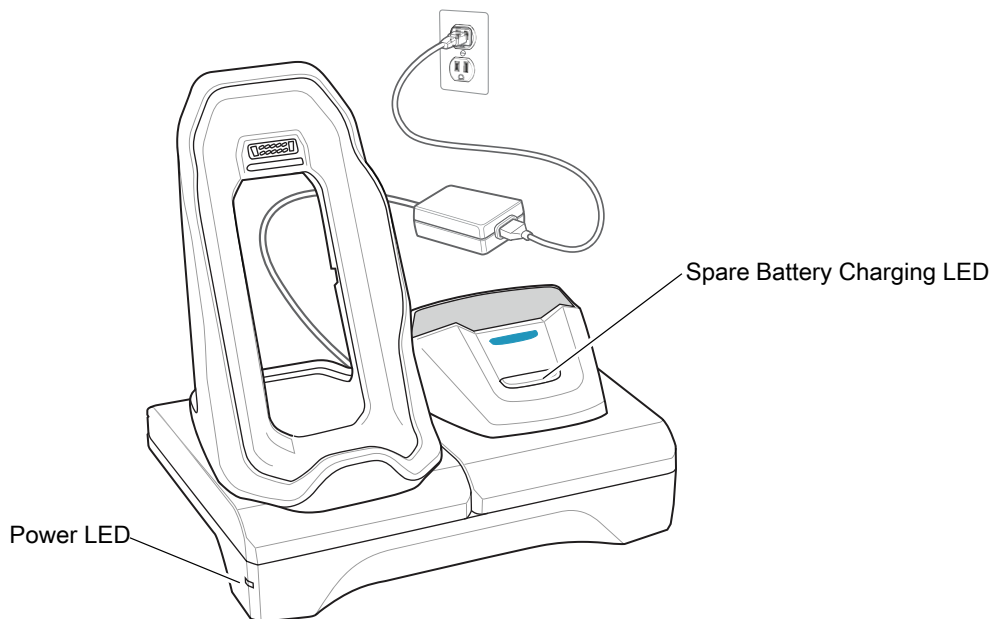

## Setup


**Figure 32** 2-Slot USB/Ethernet Cradle

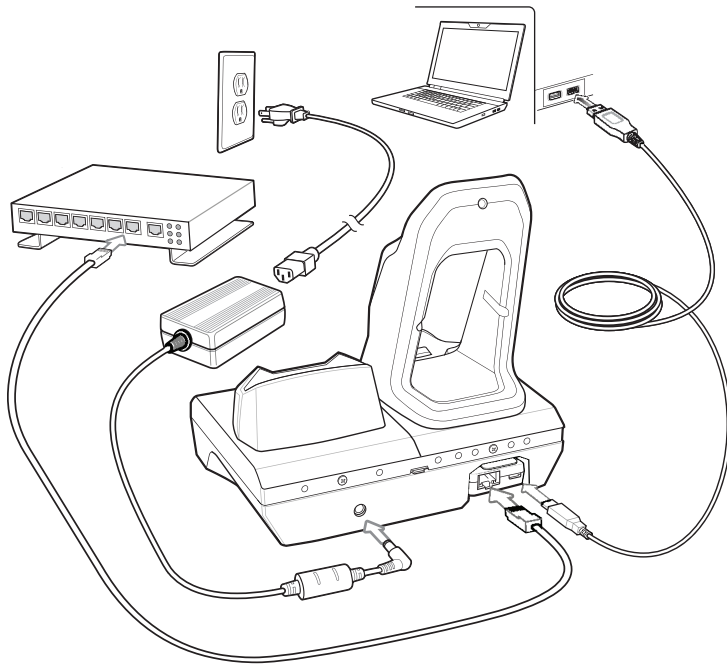

## Charging the Device

1. Place the bottom of the device into the base.


**Figure 33** Battery Charging

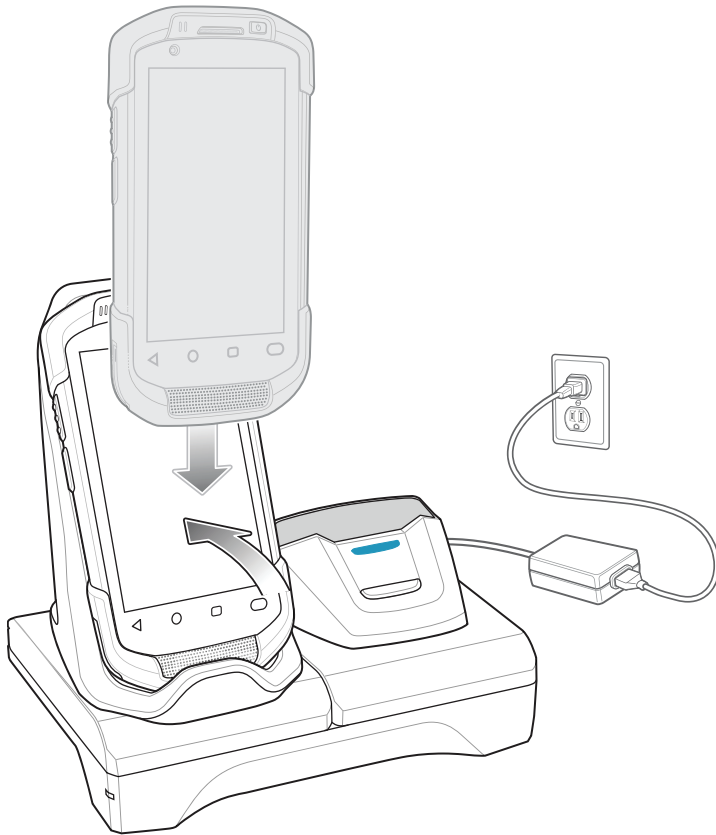

2. Rotate the top of the device until the connector on the back of the device mates with the connector on the cradle.
3. Ensure the device is connected properly. The charging Charging/Notification LED on the device begins blinking amber indicating that the device is charging.

## Charging the Spare Battery

1. Insert the battery into the right slot to begin charging.

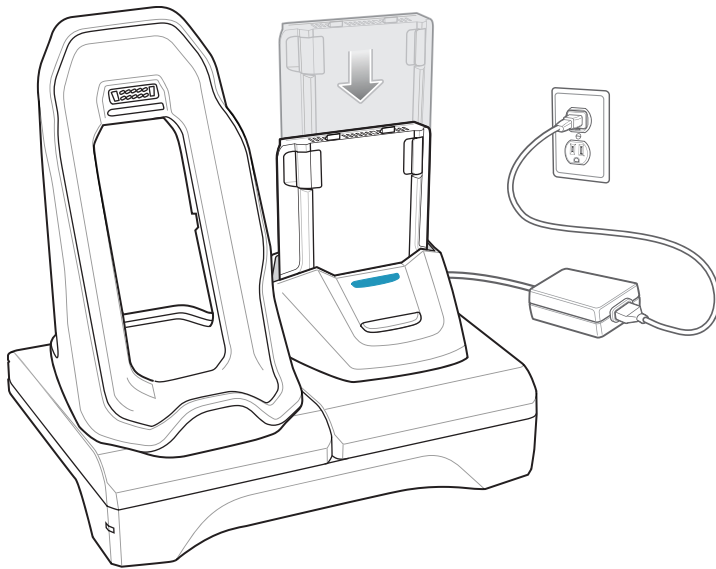**Figure 34** Spare Battery Charging

2. Ensure the battery is seated properly.

## Battery Charging

### Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

### Spare Battery Charging

The Spare battery Charging LED on the cup indicates the status of the spare battery charging.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

**Table 4** Spare Battery Charging LED Indicators

LED	Indication
Slow Blinking Amber	Spare battery is charging.
Solid Green	Charging complete.
Fast Blinking Amber	Error in charging; check placement of spare battery.
Slow Blinking Red	Spare battery is charging and battery is at the end of useful life.
Solid Red	Charging complete and battery is at the end of useful life.
Fast Blinking Red	Error in charging; check placement of spare battery and battery is at the end of useful life.
Off	No spare battery in slot; spare battery not placed correctly; cradle is not powered.

## Charging Temperature


Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.

## USB/Ethernet Communication


The 2-Slot USB/Ethernet Cradle provides both Ethernet communication with a network and USB communication with a host computer. Prior to using the cradle for Ethernet or USB communication. Ensure that the switch on the USB/Ethernet module is set properly.


Turn the cradle over to view the module.

**Figure 35** 2-Slot USB/Ethernet Cradle Module Switch

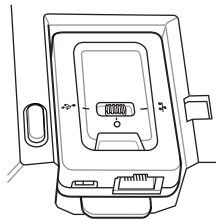

For Ethernet communication, slide the switch to the  position.


For USB communication, slide the switch to the  position.

Place the switch in the center position  to disable communications.

## Ethernet LED Indicators

There are two LEDs on the USB/Ethernet Module RJ-45 connector. The green LED lights to indicate that the transfer rate is 100 Mbps. When the LED is not lit the transfer rate is 10 Mbps. The yellow LED blinks to indicate activity, or stays lit to indicate that a link is established. When it is not lit it indicates that there is no link.

**Figure 36** LED Indicators

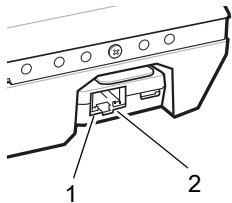

**Table 5** USB/Ethernet Module LED Data Rate Indicators

Data Rate	(1) Amber LED	(2) Green LED
100 Mbps	On/Blink	On
10 Mbps	On/Blink	Off



## Ethernet Settings

The following settings can be configured when using Ethernet communication:


- Proxy Settings
- Static IP.


## Configuring Ethernet Proxy Settings

The TC70x/TC75x includes Ethernet cradle drivers. After inserting the TC70x/TC75x, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Ethernet**.
3. Place the TC70x/TC75x into the Ethernet cradle slot.
4. Slide the switch to the **ON** position.
5. Touch and hold **Eth0** until the menu appears.
6. Touch **Modify Proxy**.
7. Touch the **Proxy** drop-down list and select **Manual**.

**Figure 37** Ethernet Proxy Settings

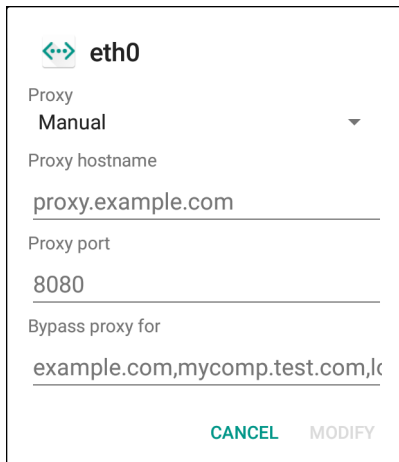

 **eth0**

Proxy  
Manual

Proxy hostname  
proxy.example.com

Proxy port  
8080


Bypass proxy for  
example.com,mycomp.test.com,lc

CANCEL MODIFY

8. In the **Proxy hostname** field, enter the proxy server address.
9. In the **Proxy port** field, enter the proxy server port number.





**NOTE:** When entering proxy addresses in the Bypass proxy for field, do not use spaces or carriage returns between addresses.

10. In the **Bypass proxy for** text box, enter addresses for web sites that do not require to go through the proxy server. Use the separator “|” between addresses.
11. Touch **MODIFY**.
12. Touch .

## Configuring Ethernet Static IP Address

The TC70x/TC75x includes Ethernet cradle drivers. After inserting the TC70x/TC75x, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Ethernet**.

3. Place the TC70x/TC75x into the Ethernet cradle slot.
4. Slide the switch to the **ON** position.
5. Touch **Eth0**.
6. Touch **Disconnect**.
7. Touch **Eth0**.
8. Touch and hold the IP settings drop-down list and select **Static**.

**Figure 38** Static IP Settings

eth0

Proxy  
None

IP settings  
Static

IP address  
192.168.1.128

Gateway  
192.168.1.1

Netmask  
255.255.255.0

DNS 1  
8.8.8.8

DNS 2  
10.61.1.249

CANCEL DISCONNECT


9. In the **IP** address field, enter the proxy server address.
10. If required, in the **Gateway** field, enter a gateway address for the device.
11. If required, in the **Netmask** field, enter the network mask address
12. If required, in the **DNS address** fields, enter a Domain Name System (DNS) addresses.
13. Touch **CONNECT**.
14. Touch **O**.

## 5-Slot Charge Only Cradle

The 5-Slot Charge Only Cradle:


- Provides 5 VDC power for operating the TC70x/TC75x.
- Simultaneously charges up to five devices and up to four devices and on 4-Slot Battery Charger using the Battery Charger Adapter. See the TC70x/TC75x Integrator Guide for information on installing the 4-Slot Battery Charger onto the cradle.
- Consists of a cradle base and cups that can be configured for various charging requirements.

**Figure 39** 5-Slot Charge Only Cradle

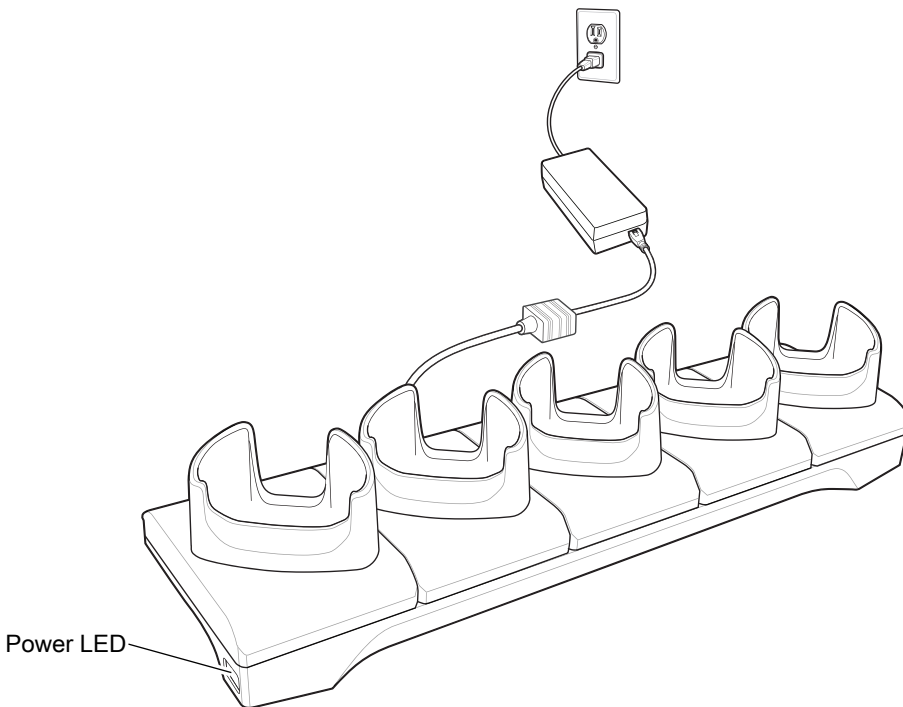

## Setup

**Figure 40** 5-Slot Charge Only Cradle

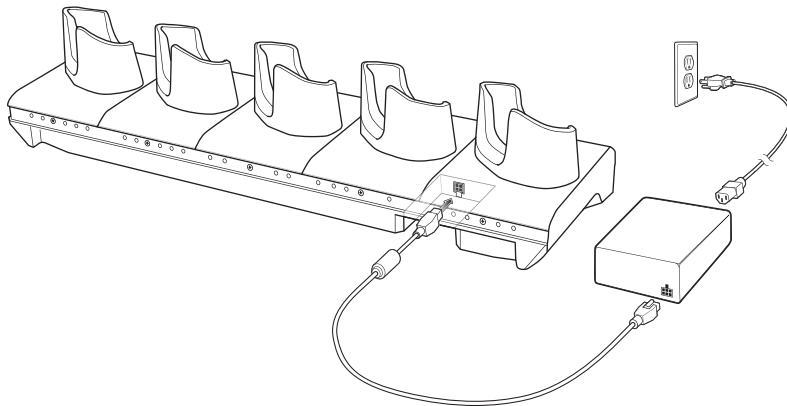





## Charging the Device

1. Insert the TC70x/TC75x into a slot to begin charging.

**Figure 41** Battery Charging

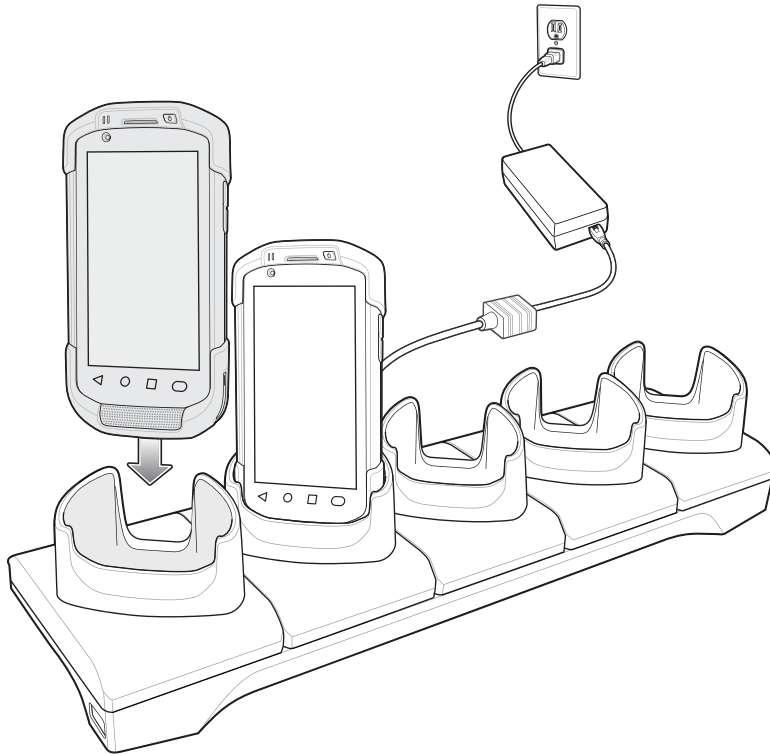

**Figure 42** 5-Slot Charge Only Cradle with Four Slot Battery Charger

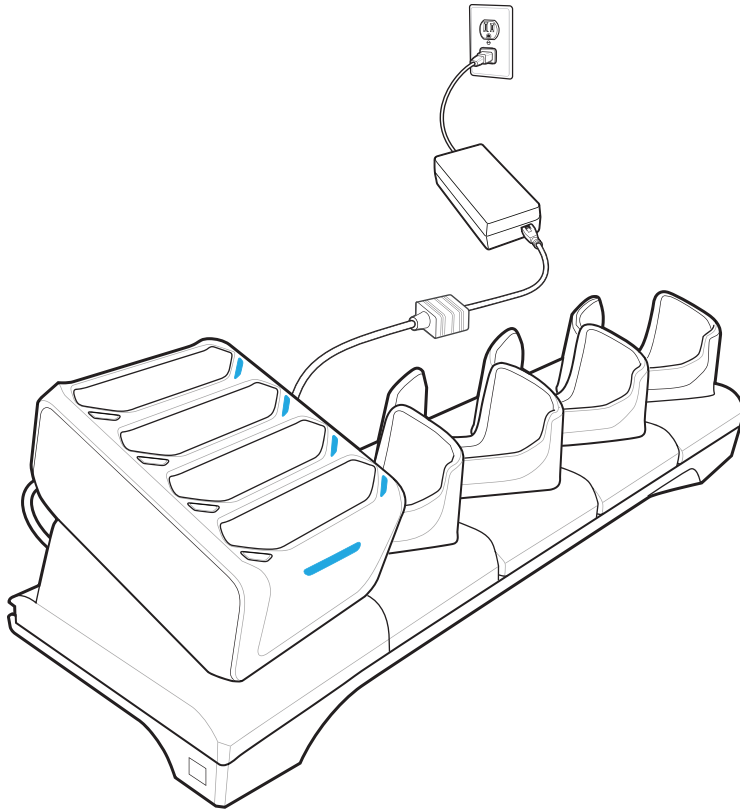

2. Ensure the TC70x/TC75x is seated properly.

## Battery Charging

### Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

## Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device indicates when charging is disabled due to abnormal temperatures via its LED.


## Installing the Four Slot Battery Charger



**NOTE:** The Battery Charger must be installed in the first slot only.


1. Remove power from the cradle.

**Figure 43** Remove Power from Cradle

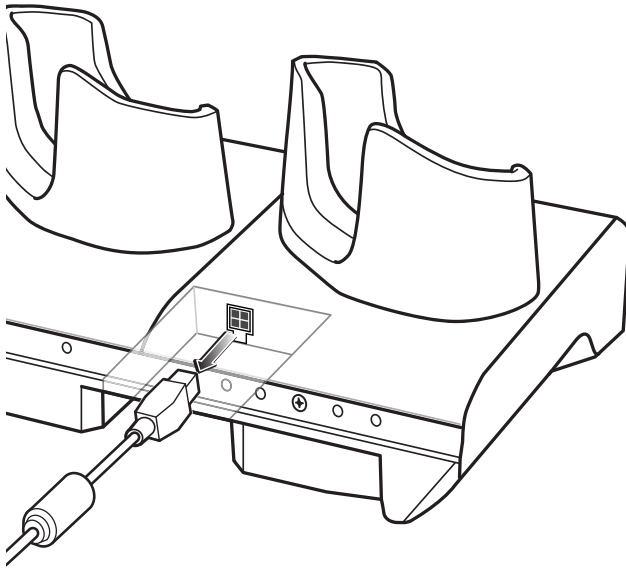


2. Using a Phillips screwdriver, remove the screw securing the cup to the cradle base.

**Figure 44** Remove Screw

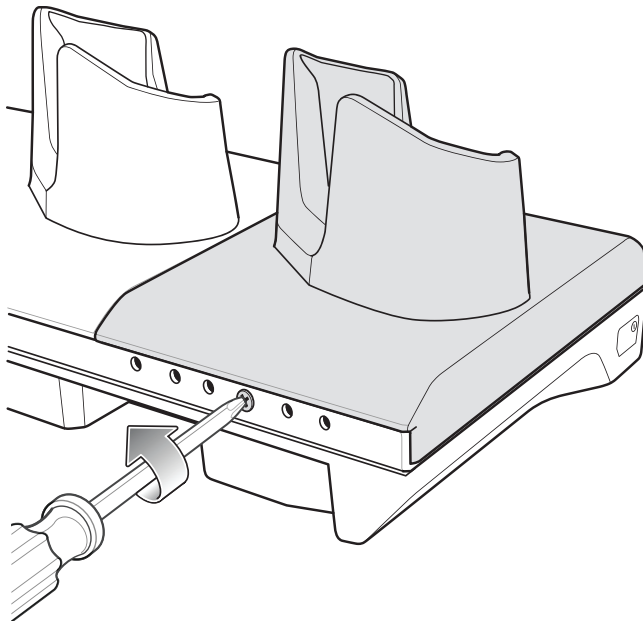


3. Slide the cup to the front of the cradle.

**Figure 45** Remove Cup

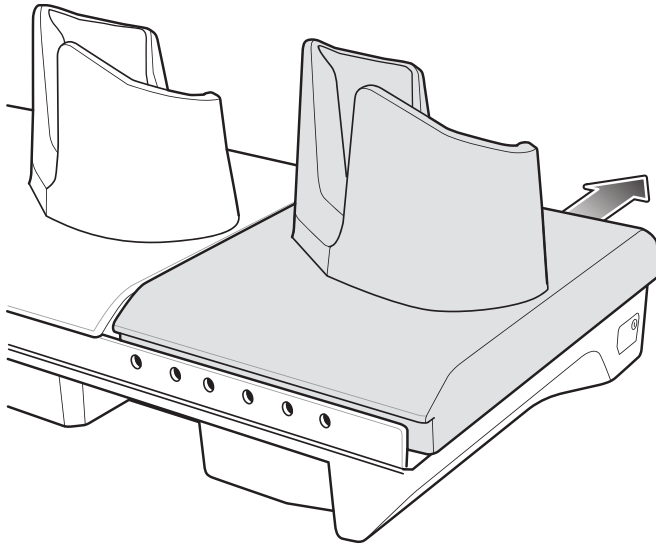

4. Carefully lift the cup up to expose the cup power cable.
5. Disconnect the cup power cable.


**Figure 46** Disconnect Cup Power Cable

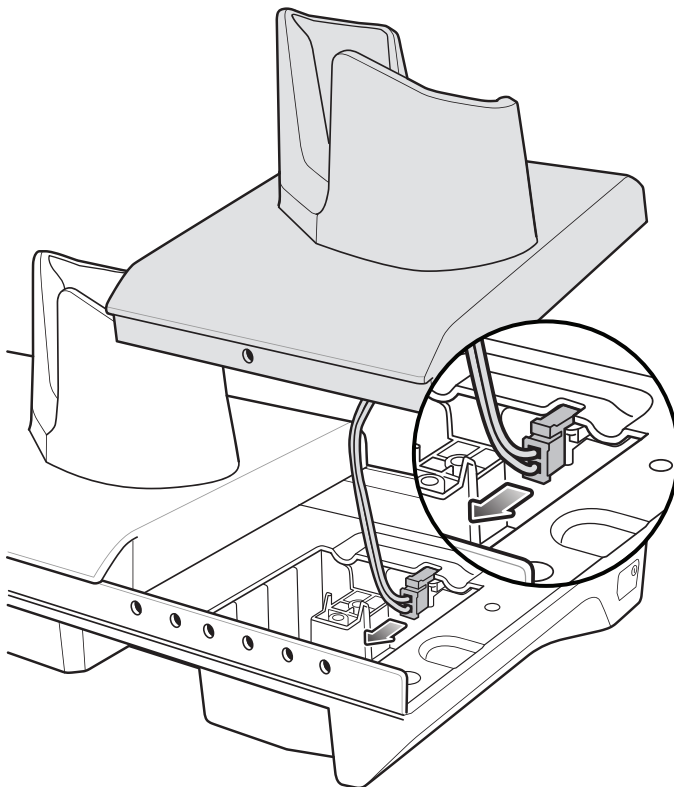

**NOTE:** Place power cable into adapter to avoid pinching cable.


6. Connect the Battery Adapter power cable to the connector on the cradle.

**Figure 47** Connect Adapter Power Cable

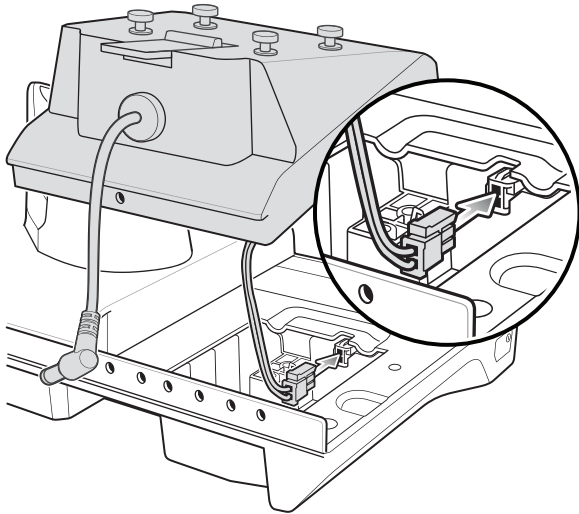


7. Place adapter onto cradle base and slide toward rear of cradle.

**Figure 48** Install Adapter

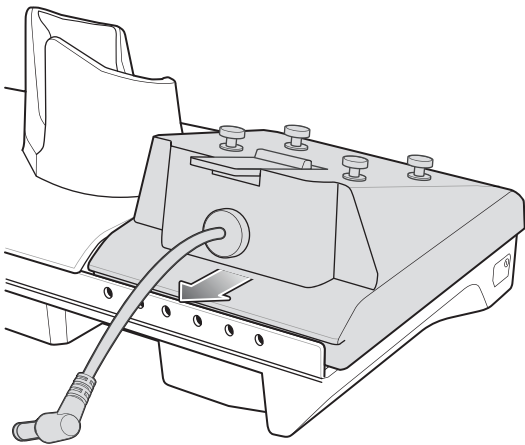


8. Using a Phillips screwdriver, secure adapter to cradle base with screw.

**Figure 49** Secure adapter to Cradle

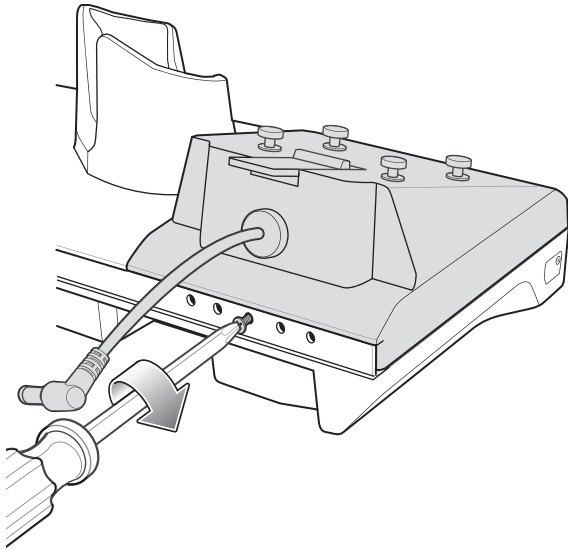


9. Align mounting holes on the bottom of the Four Slot Battery Charger with the stubs on the Battery Adapter.

**Figure 50** Install Four Slot Battery Charger

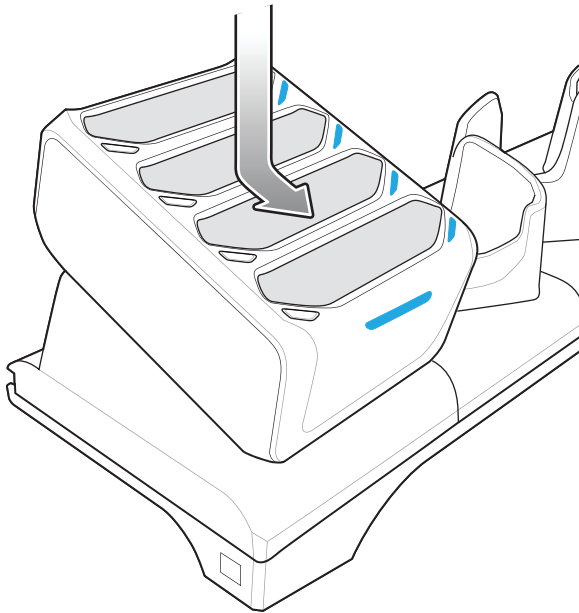

10. Slide the Four Slot battery Charger down toward the front of the cradle.
11. Connect the output power plug into the power port on the Four Slot Battery Charger.


**Figure 51** Connect Adapter Power Cable

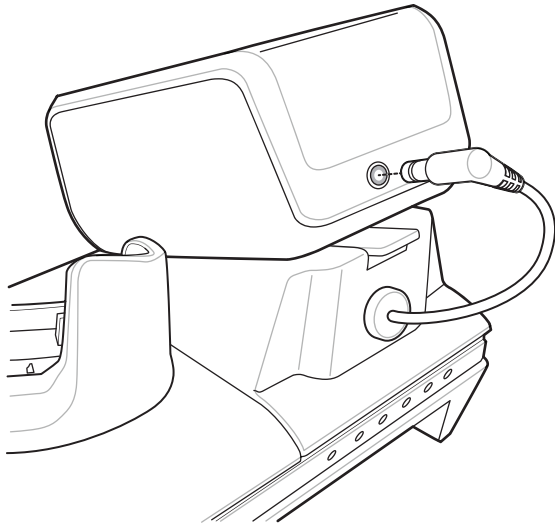

## Removing the 4-Slot Battery Charger

1. Disconnect the output power plug from the 4-Slot Battery Charger.
2. At the back of the cup, press down on the release latch.

**Figure 52** Press Release Latch

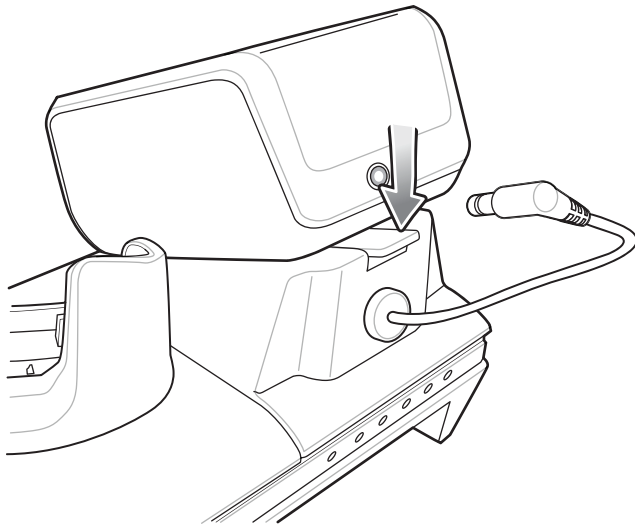

3. Slide the 4-Slot Battery Charger toward the front of the cradle.
4. Lift the 4-Slot off the cradle cup.

## 5-Slot Ethernet Cradle




**CAUTION:** Ensure that you follow the guidelines for battery safety described in [Battery Safety Guidelines on page 184](#).

The 5-Slot Ethernet Cradle:

- Provides 5.0 VDC power for operating the device.
- Connects the device (up to five) to an Ethernet network.
- Simultaneously charges up to five devices or up to four devices and one 4-Slot Battery Charger using the Battery Charger Adapter.

**Figure 53** 5-Slot Ethernet Cradle

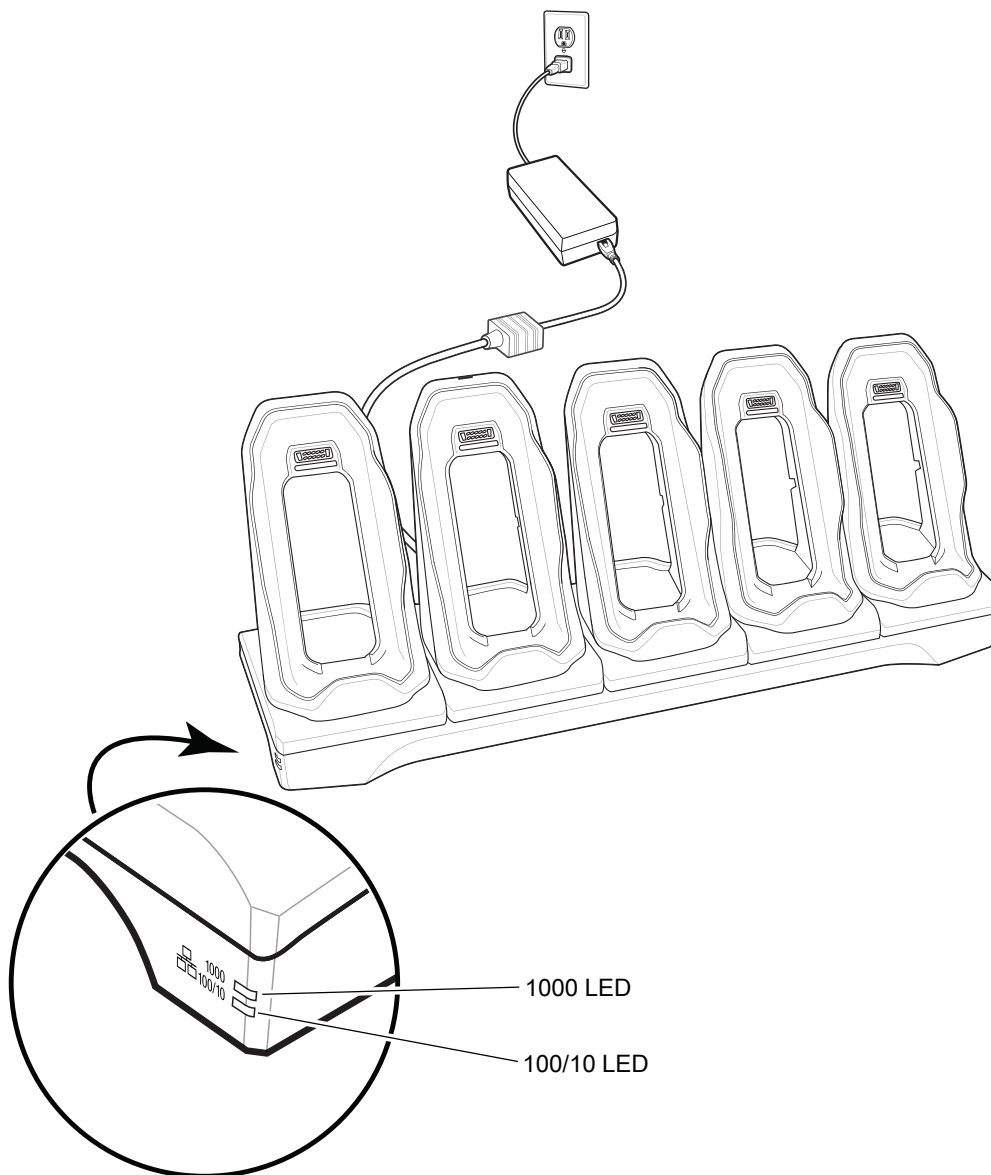




## Setup

Connect the 5-Slot Ethernet cradle to a power source.

**Figure 54** 5-Slot Ethernet Cradle Setup

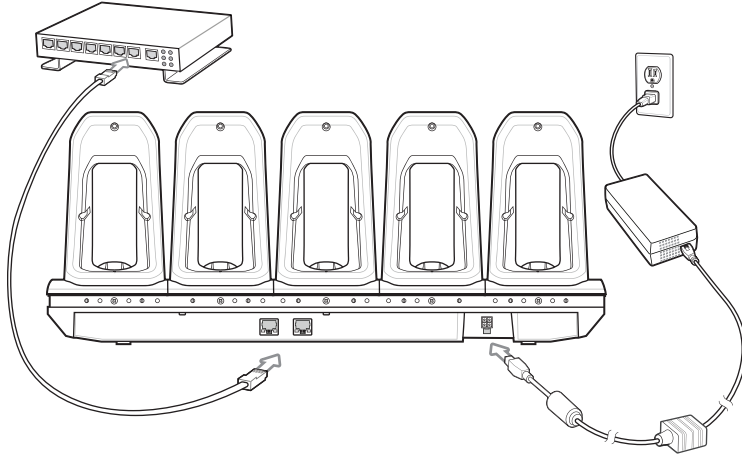


## Daisy-chaining Ethernet Cradles

Daisy-chain up to ten 5-Slot Ethernet cradles to connect several cradles to an Ethernet network. Use either a straight or crossover cable. Daisy-chaining should not be attempted when the main Ethernet connection to the first cradle is 10 Mbps as throughput issues will almost certainly result.

To daisy-chain 5-Slot Ethernet cradles:

1. Connect power to each 5-Slot Ethernet cradle.
2. Connect an Ethernet cable to the one of the ports on the back of the first cradle and to the Ethernet switch.
3. Connect the other end of the Ethernet cable to one of the ports of the back of the second 5-Slot Ethernet cradle.

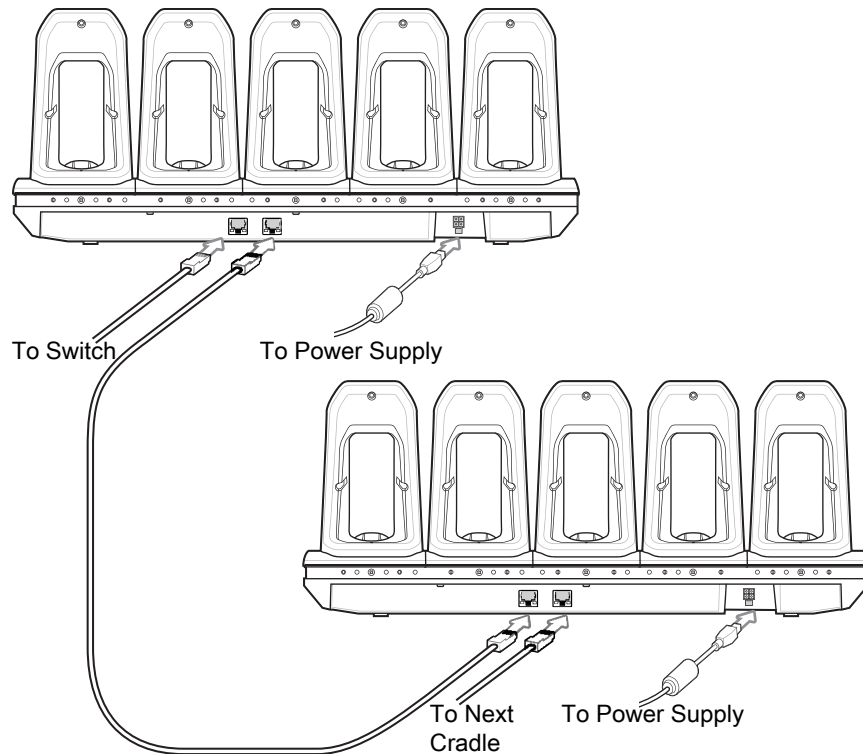**Figure 55** Daisy-chaining 5-Slot Ethernet Cradles

4. Connect additional cradles as described in step 2 and 3.



## Ethernet Settings

The following settings can be configured when using Ethernet communication:

- Proxy Settings
- Static IP.

## Configuring Ethernet Proxy Settings

The TC70x/TC75x includes Ethernet cradle drivers. After inserting the TC70x/TC75x, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Ethernet**.
3. Place the TC70x/TC75x into the Ethernet cradle slot.
4. Slide the switch to the **ON** position.
5. Touch and hold **Eth0** until the menu appears.
6. Touch **Modify Proxy**.
7. Touch the **Proxy** drop-down list and select **Manual**.

**Figure 56** Ethernet Proxy Settings

eth0

Proxy  
Manual

Proxy hostname  
proxy.example.com

Proxy port  
8080

Bypass proxy for  
example.com,mycomp.test.com,k

CANCEL MODIFY

8. In the **Proxy hostname** field, enter the proxy server address.
9. In the **Proxy port** field, enter the proxy server port number.



**NOTE:** When entering proxy addresses in the Bypass proxy for field, do not use spaces or carriage returns between addresses.

10. In the **Bypass proxy for** text box, enter addresses for web sites that do not require to go through the proxy server. Use the separator “|” between addresses.
11. Touch **MODIFY**.
12. Touch .

## Configuring Ethernet Static IP Address

The TC70x/TC75x includes Ethernet cradle drivers. After inserting the TC70x/TC75x, configure the Ethernet connection:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch **Ethernet**.
3. Place the TC70x/TC75x into the Ethernet cradle slot.
4. Slide the switch to the **ON** position.
5. Touch **Eth0**.
6. Touch **Disconnect**.
7. Touch **Eth0**.
8. Touch and hold the IP settings drop-down list and select **Static**.

**Figure 57** Static IP Settings

**eth0**

Proxy  
None

IP settings  
Static

IP address  
192.168.1.128


Gateway  
192.168.1.1

Netmask  
255.255.255.0

DNS 1  
8.8.8.8

DNS 2  
10.61.1.249

CANCEL DISCONNECT

9. In the **IP** address field, enter the proxy server address.
10. If required, in the **Gateway** field, enter a gateway address for the device.
11. If required, in the **Netmask** field, enter the network mask address
12. If required, in the **DNS address** fields, enter a Domain Name System (DNS) addresses.
13. Touch **CONNECT**.
14. Touch .

## LED Indicators

There are two green LEDs on the side of the cradle. These green LEDs light and blink to indicate the data transfer rate.


**Table 6** LED Data Rate Indicators

Data Rate	1000 LED	100/10 LED
1 Gbps	On/Blink	Off
100 Mbps	Off	On/Blink
10 Mbps	Off	On/Blink


## Charging the Device

1. Insert the TC70x/TC75x into a slot to begin charging.

**Figure 58** Battery Charging

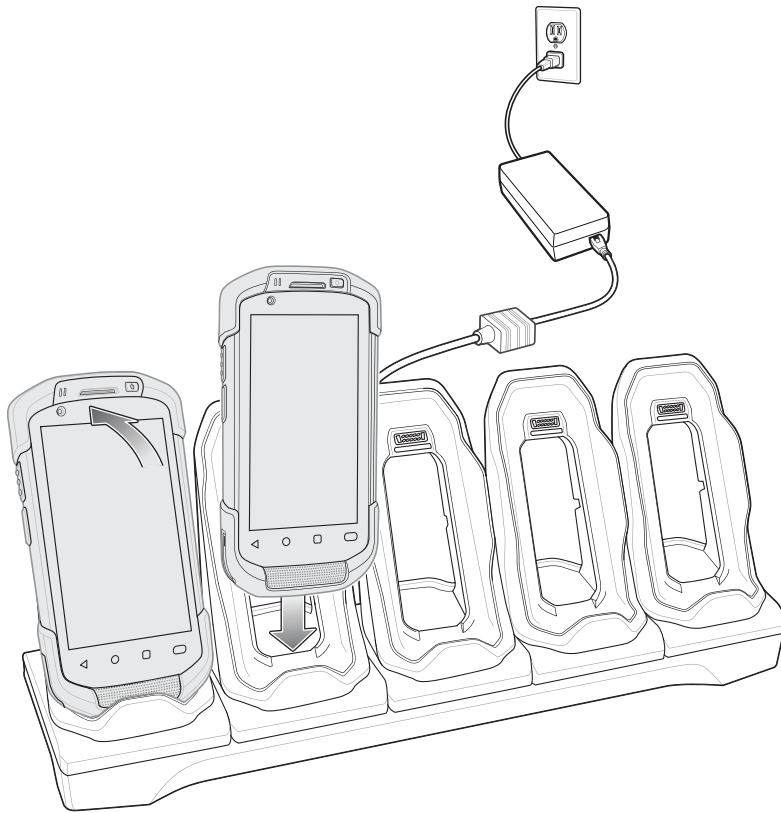

2. Ensure the TC70x/TC75x is seated properly.

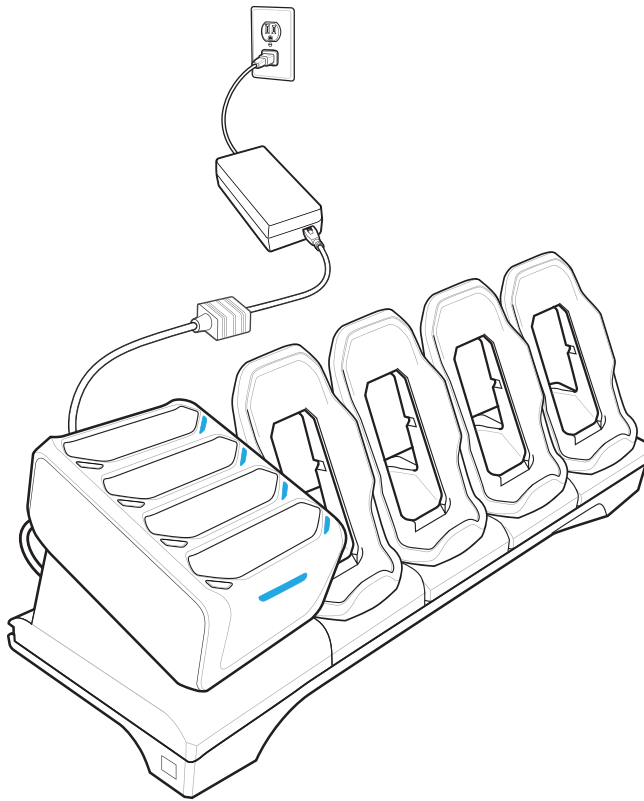**Figure 59** 5-Slot Ethernet Cradle with 4-Slot Battery Charger

## Battery Charging

### Main Battery Charging

The device's Charging/Notification LED indicates the status of the battery charging in the device.

The 4,620 mAh battery fully charges in less than sixfive hours at room temperature.

### Spare Battery Charging

The Spare battery Charging LED on the cup indicates the status of the spare battery charging.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

**Table 7** Spare Battery Charging LED Indicators

LED	Indication
Slow Blinking Amber	Spare battery is charging.
Solid Green	Charging complete.
Fast Blinking Amber	Error in charging; check placement of spare battery.
Slow Blinking Red	Spare battery is charging and battery is at the end of useful life.
Solid Red	Charging complete and battery is at the end of useful life.



**Table 7** Spare Battery Charging LED Indicators (Continued)

LED	Indication
Fast Blinking Red	Error in charging; check placement of spare battery and battery is at the end of useful life.
Off	No spare battery in slot; spare battery not placed correctly; cradle is not powered.

## Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The device or cradle always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the device or cradle may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The device and cradle indicates when charging is disabled due to abnormal temperatures via its LED.

## Establishing Ethernet Connection


1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch **Ethernet**.
3. Insert the device into a slot.
4. Slide the Ethernet switch to the **ON** position.  
The  icon appears in the Status bar.
5. Touch **Eth0** to view Ethernet connection details.

## Installing the 4-Slot Battery Charger

✓ **NOTE:** The Battery Charger must be installed in the first slot only.


1. Remove power from the cradle.

**Figure 60** Remove Power from Cradle

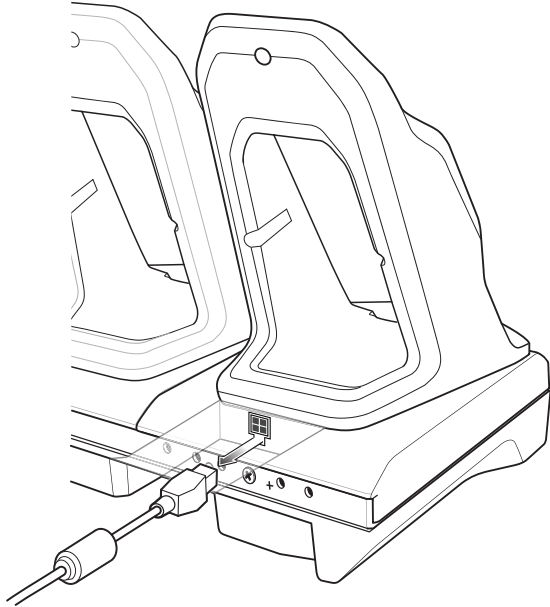

2. Using a Phillips screwdriver, remove the screw securing the cup to the cradle base.


**Figure 61** Remove Screw

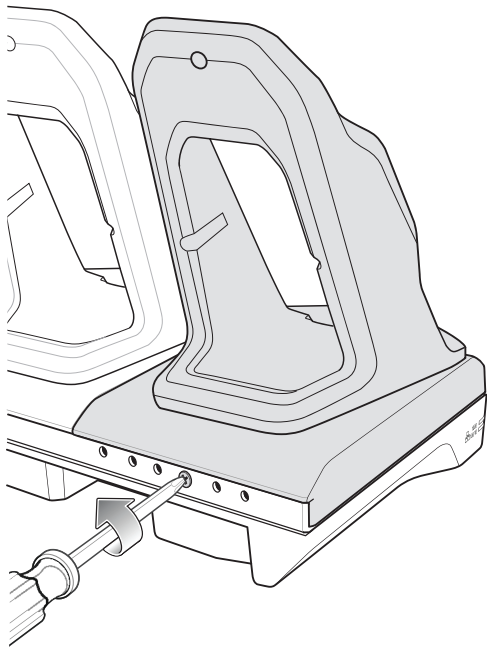

3. Slide the cup to the front of the cradle.




**Figure 62** Remove Cup

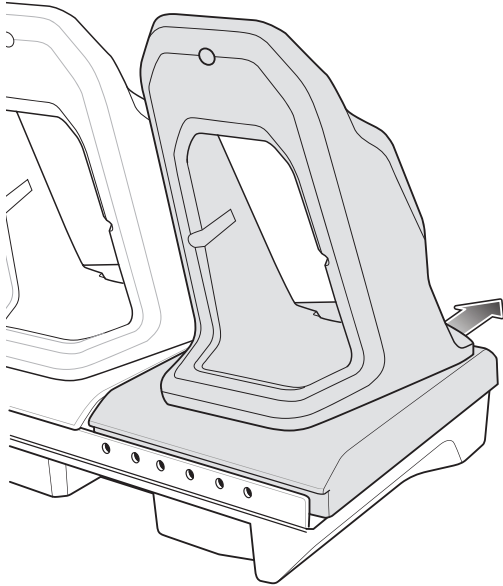

4. Carefully lift the cup up to expose the cup power cable.
5. Disconnect the cup power cable and USB cable.


**Figure 63** Disconnect Cup Cables

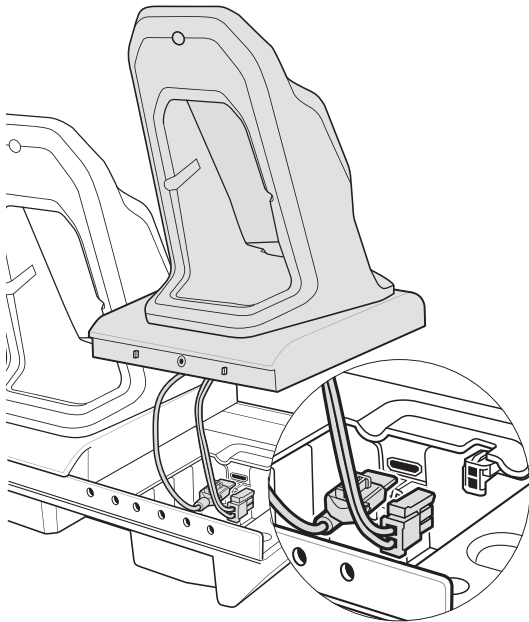

**NOTE:** Place power cable into adapter to avoid pinching cable.


6. Connect the Battery Adapter power cable to the connector on the cradle.

**Figure 64** Connect Adapter Power Cable

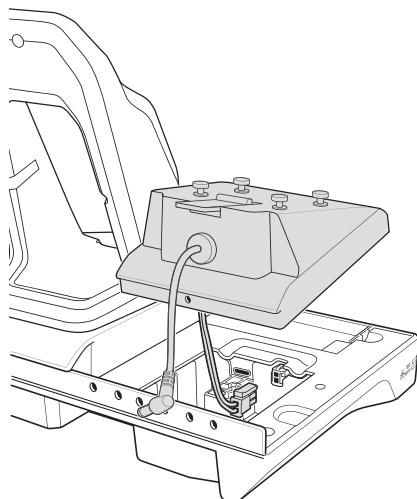


7. Place adapter onto cradle base and slide toward rear of cradle.

**Figure 65** Install Adapter

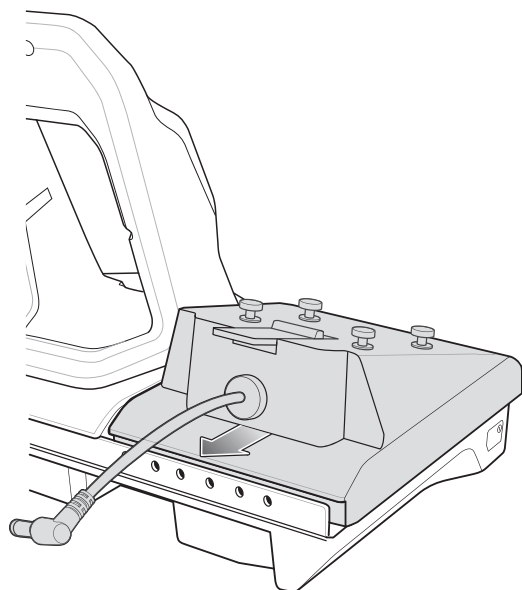


8. Using a Phillips screwdriver, secure adapter to cradle base with screw.

**Figure 66** Secure adapter to Cradle

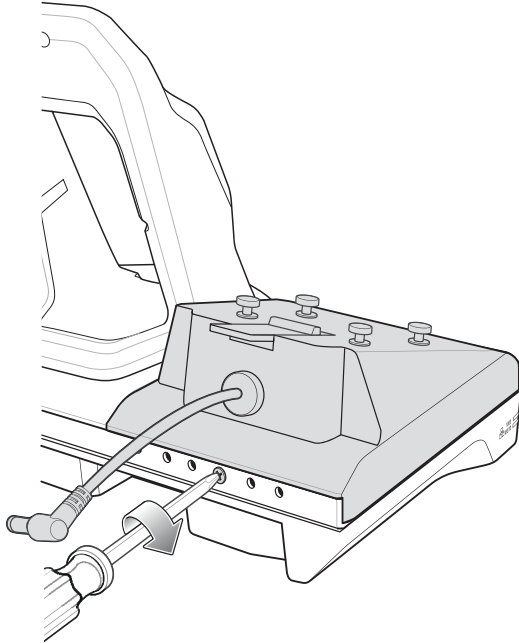


9. Align mounting holes on the bottom of the 4-Slot Battery Charger with the stubs on the Battery Adapter.

**Figure 67** Install 4-Slot Battery Charger

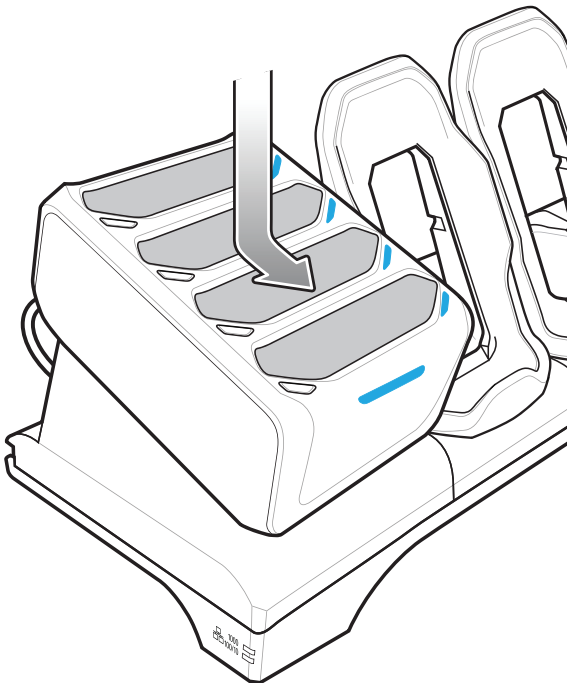

10. Slide the 4-Slot battery Charger down toward the front of the cradle.
11. Connect the output power plug into the power port on the 4-Slot Battery Charger.


**Figure 68** Connect Adapter Power Cable

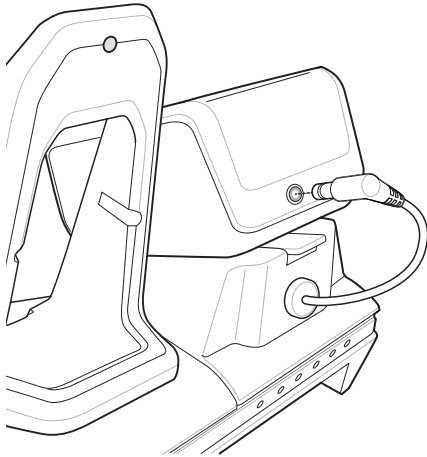

## Removing the 4-Slot Battery Charger

1. Disconnect the output power plug from the 4-Slot Battery Charger.
2. At the back of the cup, press down on the release latch.

**Figure 69** Press Release Latch

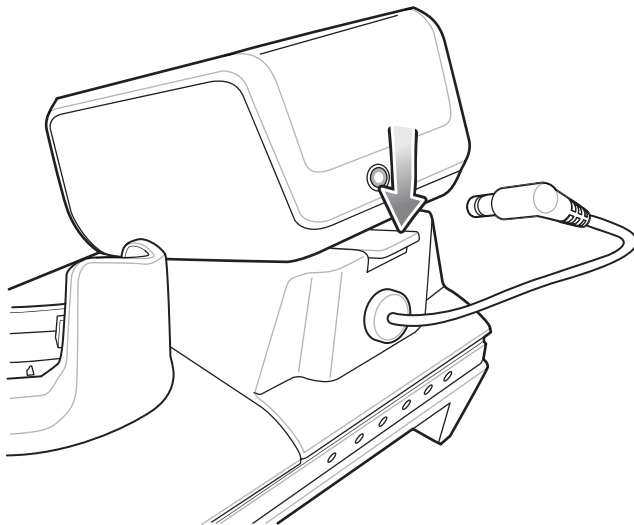


3. Slide the 4-Slot Battery Charger toward the front of the cradle.
4. Lift the 4-Slot off the cradle cup.

## 4-Slot Battery Charger

This section describes how to use the 4-Slot Battery Charger to charge up to four TC70x/TC75x batteries.

### Setup


**Figure 70** Four Slot Battery Charger Power Setup

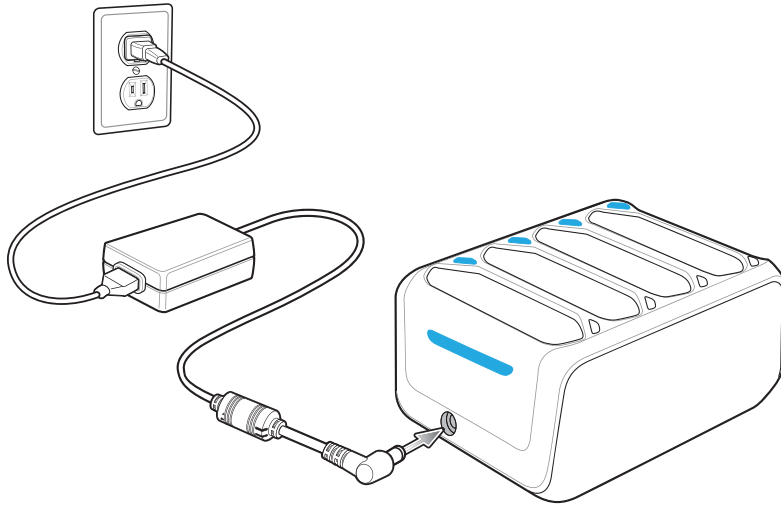

### Charging Spare Batteries

1. Connect the charger to a power source.
2. Insert the battery into a battery charging well and gently press down on the battery to ensure proper contact.

**Figure 71** Four Slot Battery Charger

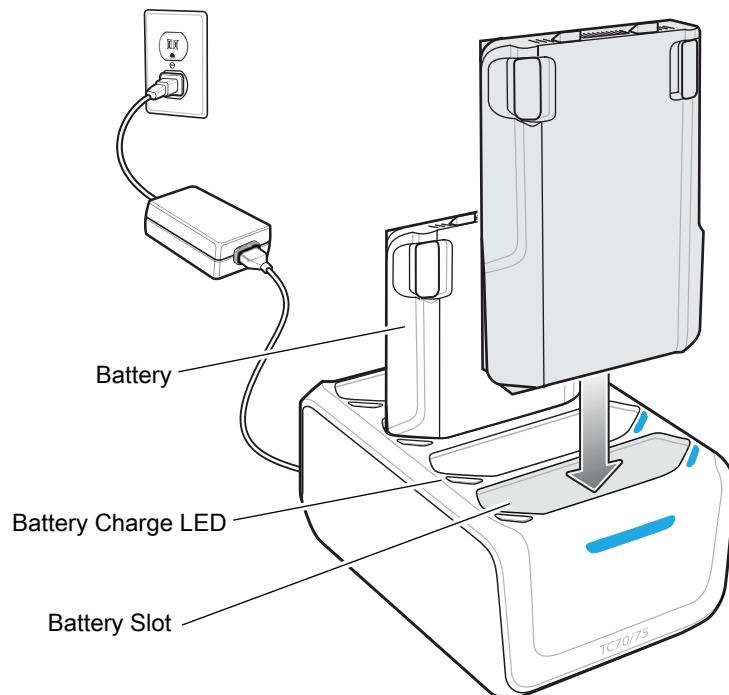

## Battery Charging

### Spare Battery Charging

Each Battery Charging LED indicates the status of the battery charging in each slot. The table below describes the Battery Charging LED status.

The 4,620 mAh battery fully charges in less than five hours at room temperature.

**Table 8** Battery LED Charging Indicators

LED	Indication
Slow Blinking Amber	Spare battery is charging.
Solid Green	Charging complete.
Fast Blinking Amber	Error in charging; check placement of spare battery.
Slow Blinking Red	Spare battery is charging and battery is at the end of useful life.
Solid Red	Charging complete and battery is at the end of useful life.
Fast Blinking Red	Error in charging; check placement of spare battery and battery is at the end of useful life.
Off	No spare battery in slot; spare battery not placed correctly; cradle is not powered.


## Charging Temperature

Charge batteries in temperatures from 0 °C to 40 °C (32 °F to 104 °F). The battery charger always performs battery charging in a safe and intelligent manner. At higher temperatures (e.g. approximately +37 °C (+98 °F)) the battery charger may for small periods of time alternately enable and disable battery charging to keep the battery at acceptable temperatures. The battery charger indicates when charging is disabled due to abnormal temperatures via its LED.

## Trigger Handle

The Trigger Handle adds a gun-style handle with a scanning trigger to the device. It increases comfort when using the device in scan-intensive applications for extended periods of time.

**Figure 72** Trigger Handle

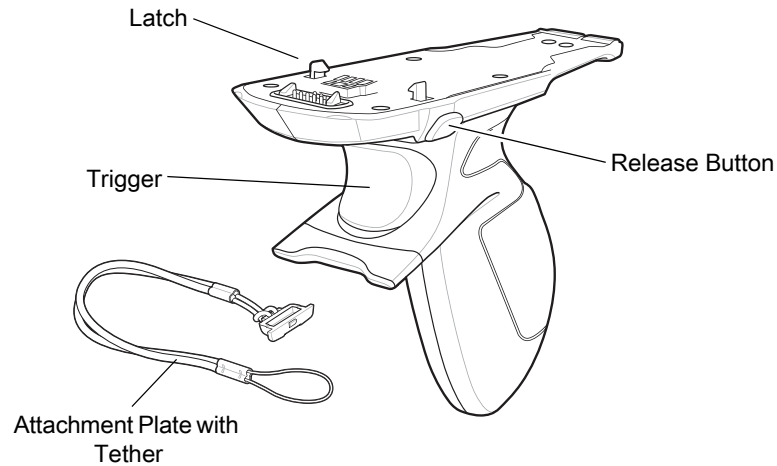


### Installing the Attachment Plate to Trigger Handle

To install the attachment plate to the Trigger Handle:

1. Insert the loop end of the tether into the slot on the bottom of the handle.
2. Feed the attachment plate through the loop.

**Figure 73** Install Attachment Plate to Handle

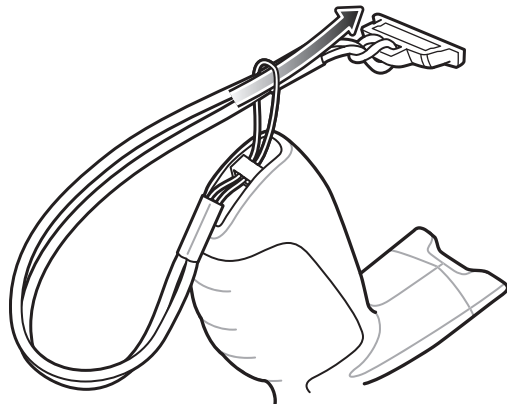


3. Pull the attachment plate until the loop tightens on the tether.

### Installing the Trigger Handle Plate

1. Press and hold the **Power** button until the menu appears.
2. Touch **Power off**.
3. Touch **OK**.


4. Press in the two battery latches.
5. Lift the battery from the device.
6. Remove the hand strap filler plate from the hand strap slot. Store the hand strap filler plate in a safe place for future replacement.

**Figure 74** Remove Hand Strap Plate

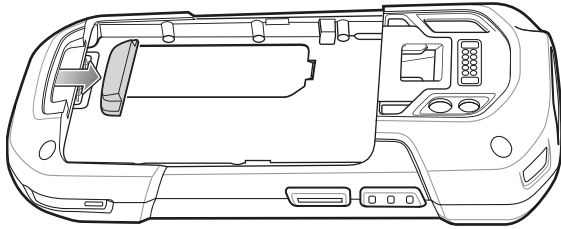

7. Insert the attachment plate into the hand strap slot.

**Figure 75** Insert Trigger Handle Plate

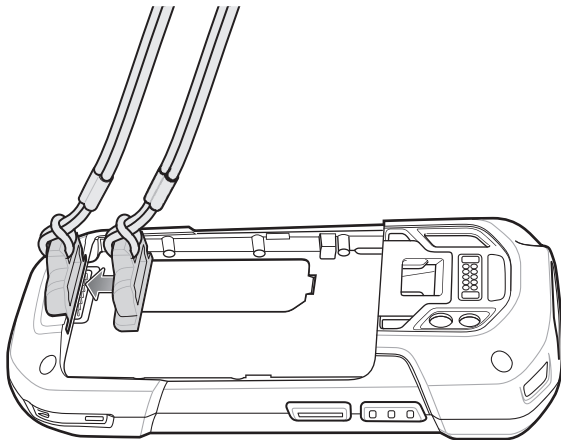


8. Insert the battery, bottom first, into the battery compartment in the back of the device.
9. Rotate the top of the battery into the battery compartment.
10. Press the battery down into the battery compartment until the battery release latches snap into place.

### Inserting the Device into the Trigger Handle

1. Align the back of the Trigger handle with the Trigger Mounting Plate.




**Figure 76** Connect Device to Trigger Handle

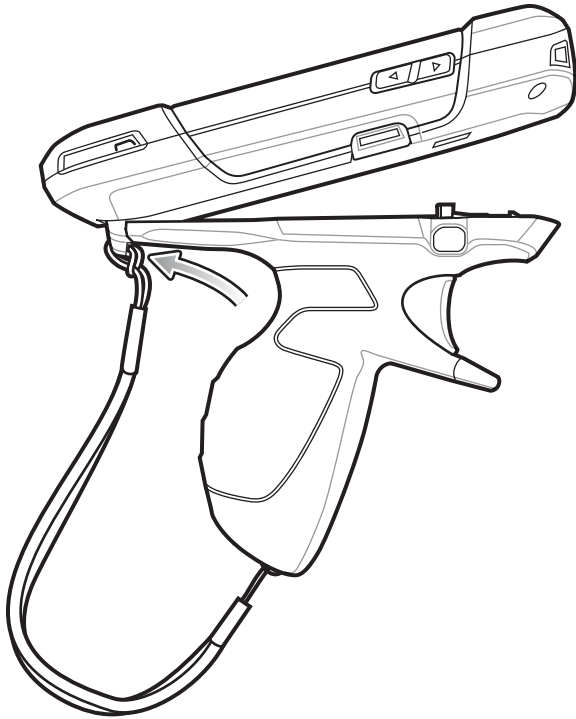

2. Press the two release latches.
3. Rotate the device down and press down until it snaps into place.


**Figure 77** Rotate Device onto Trigger Handle

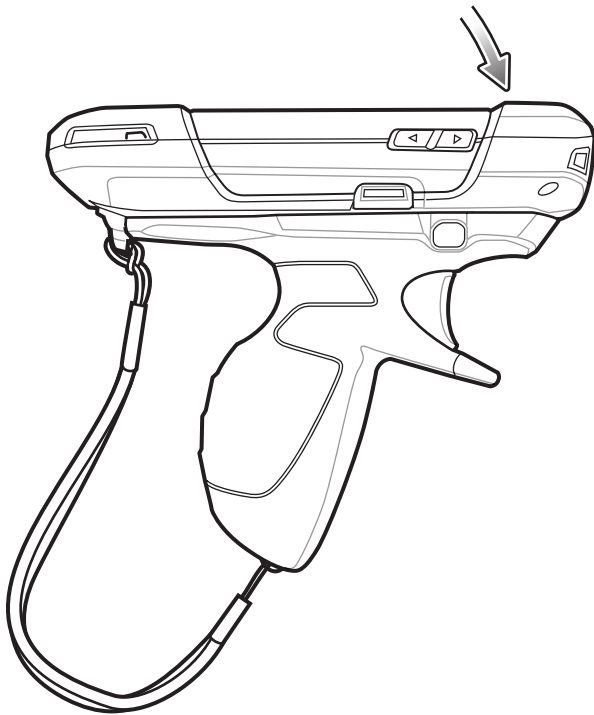

## Removing the Device from the Trigger Handle


1. Press both Trigger Handle release latches.

**Figure 78** Press Release Latches

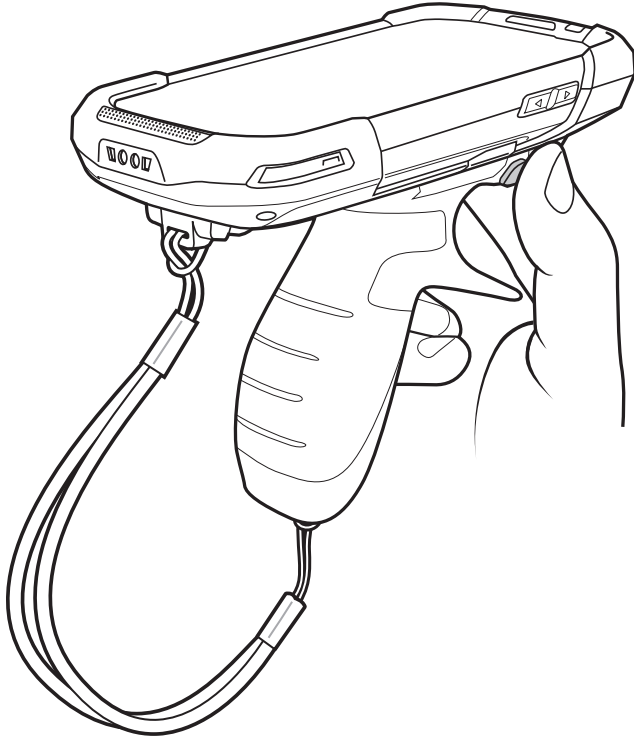

2. Rotate the device up and remove from the Trigger handle.
3. Rotate the device down and press down until it snaps into place.

**Figure 79** Rotate Device onto Trigger Handle

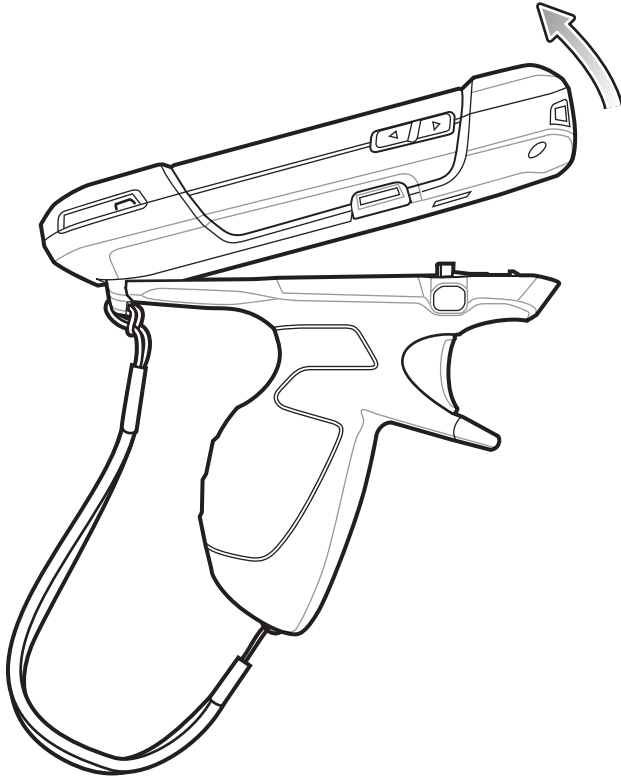


## Hand Strap Replacement



**CAUTION:** Close all running applications prior to replacing the hand strap.

1. Press and hold the **Power** button until the menu appears.
2. Touch **Power Off**.
3. Touch **OK**.
4. Remove the hand strap clip from the hand strap mounting slot.

**Figure 80** Remove Hand Strap Clip

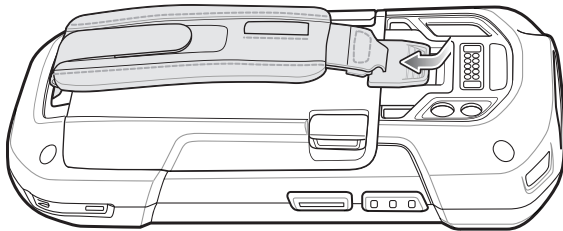


5. Press the two battery latches in.

**Figure 81** Press Battery Latches




6. Lift the battery from the TC70x/TC75x.

**Figure 82** Lift the Battery

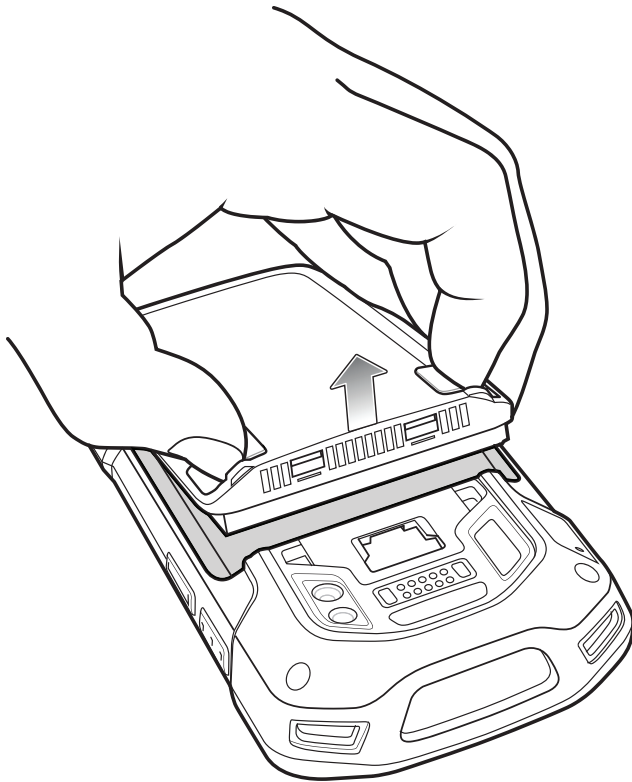


7. Remove the battery.
8. Remove the hand strap plate from the hand strap slot.
9. Insert the replacement hand strap plate into the hand strap slot.

**Figure 83** Insert Hand Strap

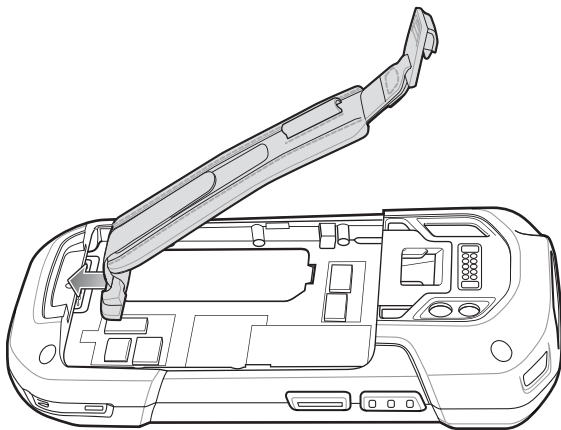


10. Insert the battery, bottom first, into the battery compartment.

**Figure 84** Insert Bottom of Battery into Battery Compartment

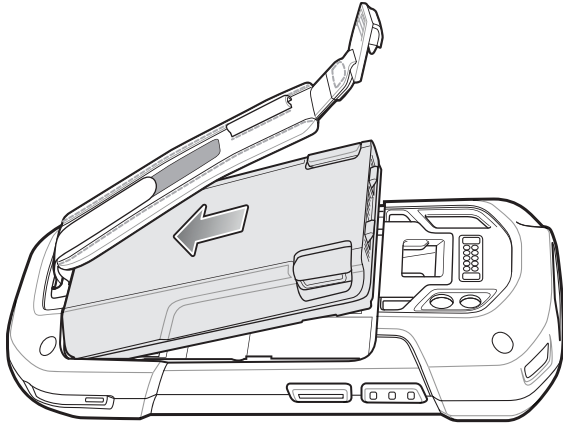


11. Rotate the top of the battery into the battery compartment.
12. Press the battery down into the battery compartment until the battery release latches snap into place.

**Figure 85** Press Down on Battery

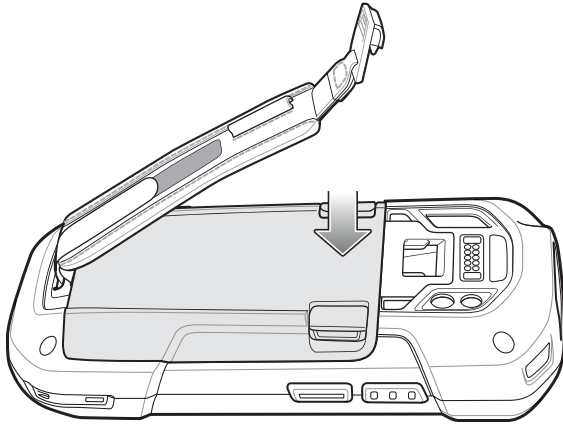

13. Place hand strap clip into hand strap mounting slot and pull down until it snaps into place.

**Figure 86** Secure Hand Strap Clip

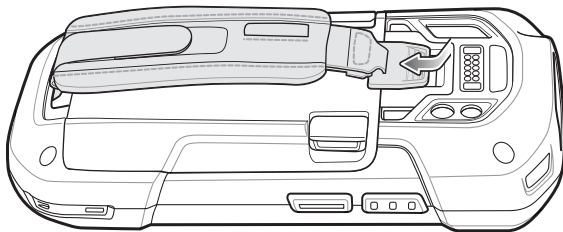

# USB Communication

---

## Introduction

This chapter provides information for transferring files between the device and a host computer.

---

## Connecting to a Host Computer via USB

Connect the TC70x/TC75x to a host computer using the USB Charging cable to transfer files between the TC70x/TC75x and the host computer.


When connecting the TC70x/TC75x to a host computer, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

## Transferring Files using Media Transfer Protocol

✓ **NOTE:** Use Media Transfer Protocol (MTP) to copy files between the TC70x/TC75x (internal memory or microSD card) and the host computer.

1. Connect the USB Charge cable to the TC70x/TC75x and then to the host computer.
2. Pull down the Notification panel and touch **USB charging this device**.

**Figure 87** Use USB Dialog Box

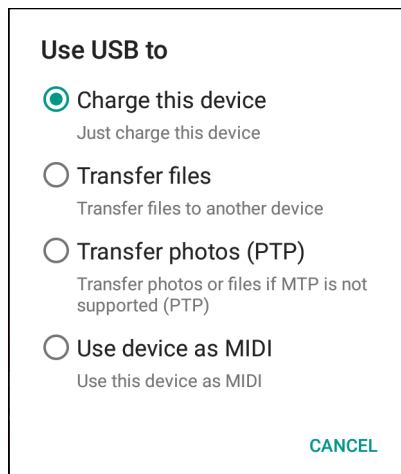

3. Touch **Transfers files**.

4. On the host computer, open a file explorer application.
5. Locate the TC70x/TC75x as a portable device.
6. Open the **SD card** or the **Internal storage** folder.
7. Copy or delete files as required.


## Transferring Files using Photo Transfer Protocol



**NOTE:** Use Photo Transfer Protocol (PTP) to copy photos from either the microSD card or internal memory to the host computer.

1. Connect the USB Charge cable to the TC70x/TC75x and then to the host computer.
2. Pull down the Notification panel and touch **USB charging this device**.

**Figure 88** Use USB Dialog Box

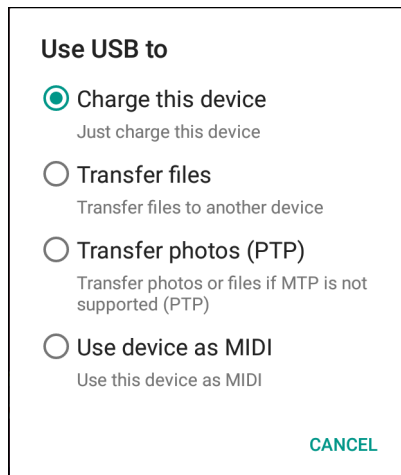

3. Touch **Transfer photos (PTP)**.
4. On the host computer, open a file explorer application.
5. Open the **SD card** or the **Internal storage** folder.
6. Copy or delete photos as required.

## Disconnect from the Host Computer



**CAUTION:** Carefully follow the host computer's instructions to unmount the microSD card and disconnect USB devices correctly to avoid losing information.

1. On the host computer, unmount the device.
2. Remove the USB Charging cable from the device.



# DataWedge

---

## Introduction

This chapter applies to DataWedge on Android devices. DataWedge is an application that reads data, processes the data and sends the data to an application.


---

## Basic Scanning

To capture bar code data:

1. Ensure that an application is open on the TC70x/TC75x and a text field is in focus (text cursor in text field).
2. Aim the exit window at a bar code.
3. Press and hold the a Scan button. The red laser aiming pattern turns on to assist in aiming. Ensure that the bar code is within the area formed by the aiming pattern. The Data Capture LED lights red to indicate that data capture is in process.

**Figure 89** TC70x/TC75x Data Capture

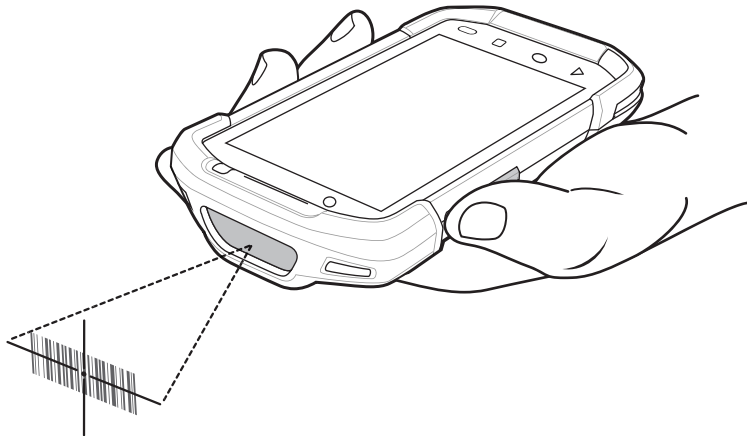

4. The Data Capture LED lights green, a beep sounds and the TC70x/TC75x vibrates, by default, to indicate the bar code was decoded successfully. The captured data appears in the text field.

---

## Profiles

DataWedge is based on profiles and plug-ins. A profile contains information on how DataWedge should behave with different applications.

Profile information consists of:

- Associated application
- data capture plus configurations
- Input plug-in configurations
- Output plug-in configurations
- Process plug-in configurations.

Using profiles, each application can have a specific DataWedge configuration. For example, each user application can have a profile which outputs scanned data in the required format when that application comes to the foreground. DataWedge can be configured to process the same set of captured data differently based on the requirements of each application.

DataWedge includes the following pre-configured profiles which support specific built-in applications:

- **Profile0** - created automatically the first time DataWedge runs. Generic profile used when there are no user created profiles associated with an application.
- **Launcher** - enables scanning when the Launcher is in foreground. Note: to save battery power, disable this profile when not required.
- **DWDemo** - provides support for the DWDemo application.

Some Zebra applications are capable of capturing data by scanning. DataWedge is pre-loaded with private and hidden profiles for this purpose. There is no option to modify these private profiles.

## Profile0

**Profile0** can be edited but cannot be associated with an application. That is, **DataWedge** allows manipulation of plug-in settings for **Profile0** but it does not allow assignment of a foreground application. This configuration allows **DataWedge** to send output data to any foreground application other than applications associated with user-defined profiles when **Profile0** is enabled.

**Profile0** can be disabled to allow **DataWedge** to only send output data to those applications which are associated in user-defined profiles. For example, create a profile associating a specific application, disable **Profile0** and then scan. **DataWedge** only sends data to the application specified in the user-created profile. This adds additional security to **DataWedge** enabling the sending of data only to specified applications.

---

## Plug-ins

A plug-in is a software module utilized in DataWedge to extend its functionality to encompass technologies such as bar code scanning. The plug-ins can be categorized into three types based on their operations:

- Input Plug-ins
- Output Plug-ins
- Process Plug-ins.

## Input Plug-ins

An Input Plug-in supports an input device, such as a bar code scanner contained in, or attached to the device. **DataWedge** contains base plug-ins for these input devices.

- **Bar Code Scanner Input Plug-in** – The Bar Code Scanner Input Plug-in is responsible for reading data from the integrated bar code scanner and supports different types of bar code readers including laser,

imager and internal camera. Raw data read from the bar code scanner can be processed or formatted using Process Plug-ins as required. **DataWedge** has built-in feedback functionality for the bar code scanner to issue user alerts. The feedback settings can be configured according to user requirement.

## Process Plug-ins

Process Plug-ins are used in **DataWedge** to manipulate the received data according to the requirement, before sending to the foreground application via the Output Plug-in.


- **Advanced Data Formatting Process Plug-in**– The Advanced Data Formatting Plug-in allows **DataWedge** to apply rules (actions to be performed based on defined criteria) to the data received via an input plug-in before passing it to an Output Plug-in.
- **Basic Data Formatting Process Plug-in**– The Basic Data Formatting Plug-in allows **DataWedge** to add a prefix and/or a suffix to the captured data before passing it to an Output Plug-in.

## Output Plug-ins

Output Plug-ins are responsible for sending the data from Input Plug-ins to a foreground application on the device.

- **Keystroke Output Plug-in** – The Keystroke Output Plug-in collects and sends data received from the Input Plug-in to the foreground applications by emulating keystrokes.
- **Intent Output Plug-in** – The Intent Output Plug-in collects and sends data received from the Input Plug-ins to foreground applications using the Android Intent mechanism.
- **IP Output Plug-in** – The IP Output Plug-in collects and sends data received from the Input Plug-ins to a host computer via a network connection. Captured data can be sent over an IP network to a specified IP address and port using either TCP or UDP transport protocols.


## Profiles Screen

To launch DataWedge, swipe up from the bottom of the screen and touch . By default, three profiles appear:

- **Profile0**
- **Launcher**
- **DWDemo.**

Profile0 is the default profile and is used when no other profile can be applied.

**Figure 90** DataWedge Profiles Screen

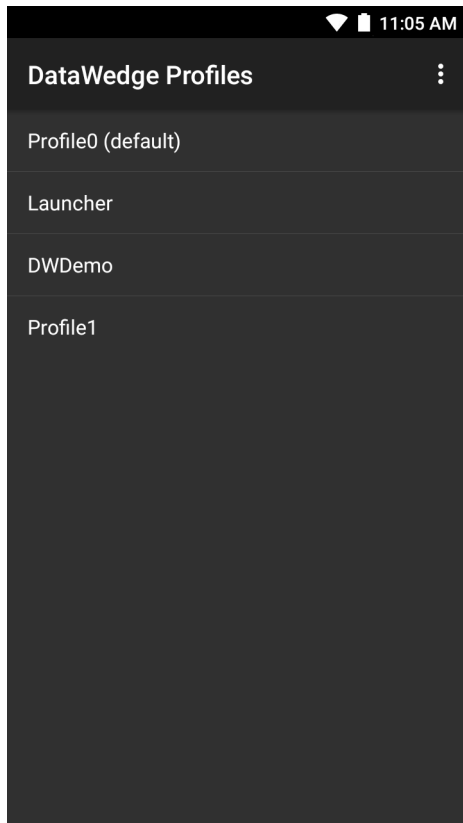


Profile names are color coded. Enabled profiles are white and disabled profiles are gray.

To configure a profile touch the profile name.


## Profile Context Menu

Touch and hold a profile to open a context menu that allows additional actions to be performed on the selected profile.

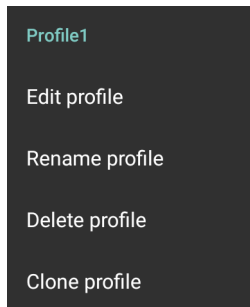**Figure 91** Profile Context Menu



The profile context menu allows the profile to be edited (same as just tapping on a profile), renamed or deleted.
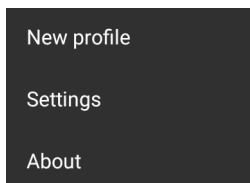
## Options Menu

**Figure 92** DataWedge Options Menu

The menu provides options to create a new profiles, access to general DataWedge settings and DataWedge version information.



## Disabling DataWedge


1. Swipe up from the bottom of the screen and touch .
2. Touch .
3. Touch **Settings**.
4. Touch **DataWedge enabled**.

The blue check disappears from the checkbox indicating that DataWedge is disabled.

---

## Creating a New Profile

5. Swipe up from the bottom of the screen and touch .
6. Touch .
7. Touch **New profile**.
8. In the **New profile** dialog box, enter a name for the new profile. It is recommended that profile names be unique and made up of only alpha-numeric characters (A-Z, a-z, 0-9).

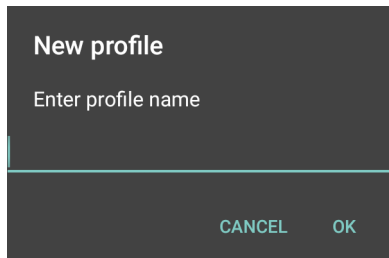**Figure 93** New Profile Name Dialog Box


9. Touch **OK**.<sup>5</sup>

The new profile name appears in the **DataWedge profile** screen.

---

## Profile Configuration

To configure the Profile0 or a user-created profile, touch the profile name.

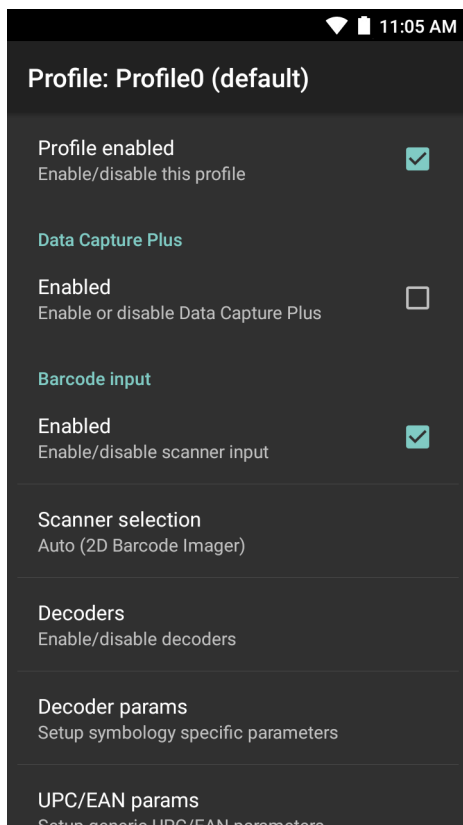**Figure 94** Profile Configuration Screen

The configuration screen lists the following sections:

- Profile enabled
- Applications
- Data Capture panel (DCP)
- Barcode Input
- SimulScan Input

- Keystroke output
- Intent Output
- IP Output.

## Associating Applications


Use Applications option to associate applications with this profile. User created profiles should be associated with one or more applications and its activities.

1. Touch **Associated apps**. A list of applications/activities associated with the profile displays. Initially the list does not contain any applications/activities.

**Figure 95** Associated Apps Screen




2. Touch .
3. Touch **New app/activity**.

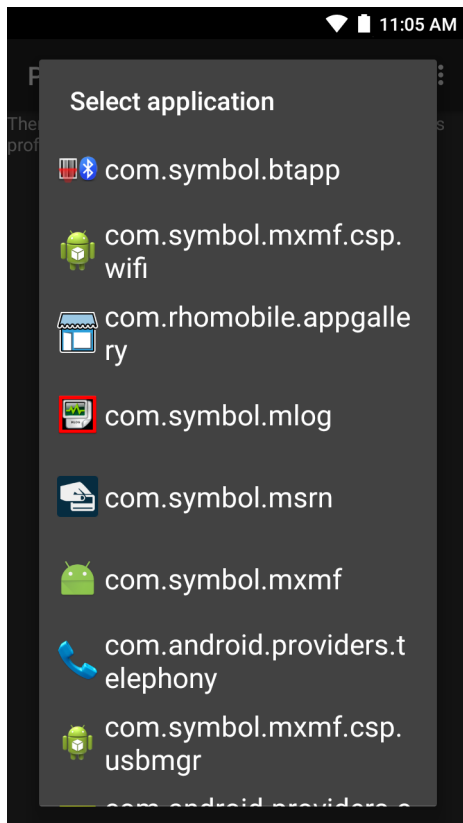**Figure 96** Select Application Menu


4. In the **Select application** screen, select the desired application from the list.
5. In the **Select activity** menu, selecting the activity adds that application/activity combination to the associated application list for that profile. Selecting \* as the activity results in all activities within that application being associated to the profile. During operation, DataWedge tries to match the specific application/activity combinations with the foreground application/activity before trying to match the general application/\* combinations.
6. Touch ◀.

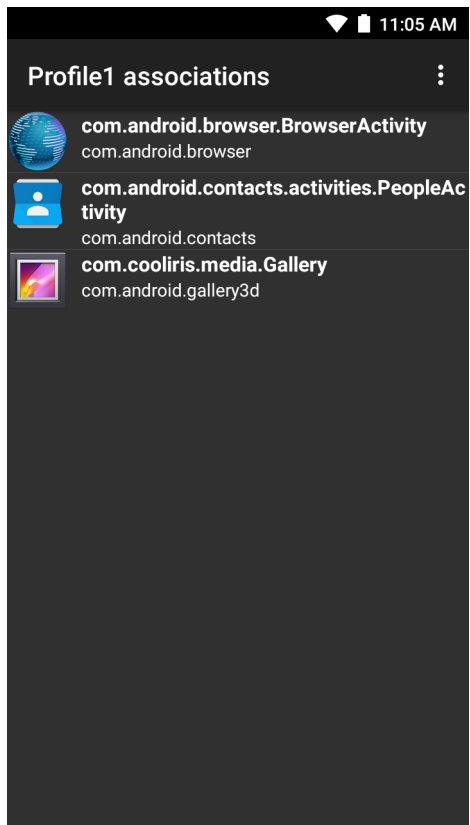


**Figure 97** Selected Application/Activity

## Data Capture Plus

Data Capture Plus (DCP) is a DataWedge feature that enables the user to initiate data capture by touching a designated part of the screen. A variable screen overlay acts like a scan button.

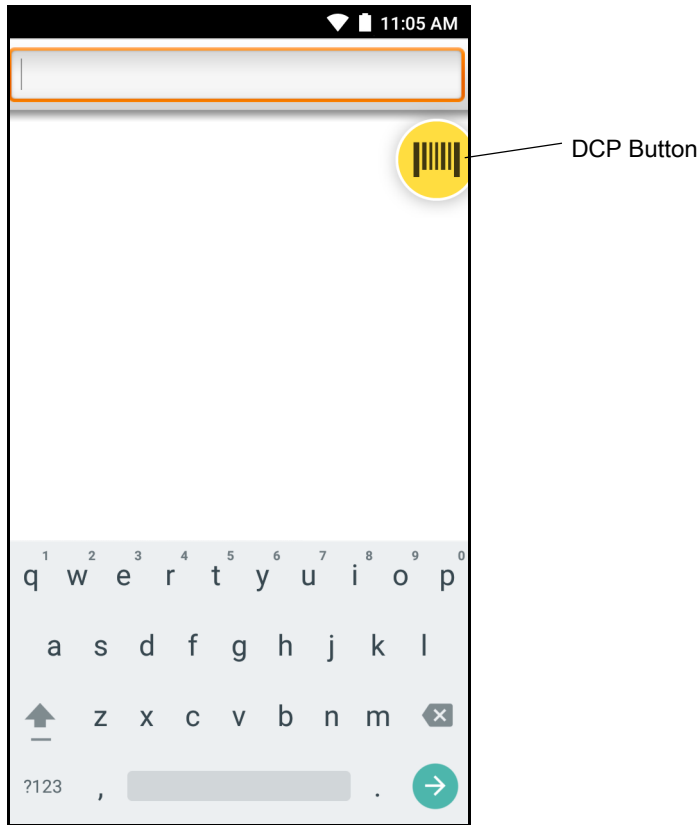**Figure 98** Minimized Data Capture Panel

The DataWedge profile configuration screen allows the user to configure how the DCP appears on the screen once the particular profile is enabled. The DCP is hidden by default. Enabling DCP option displays seven additional configuration parameters.

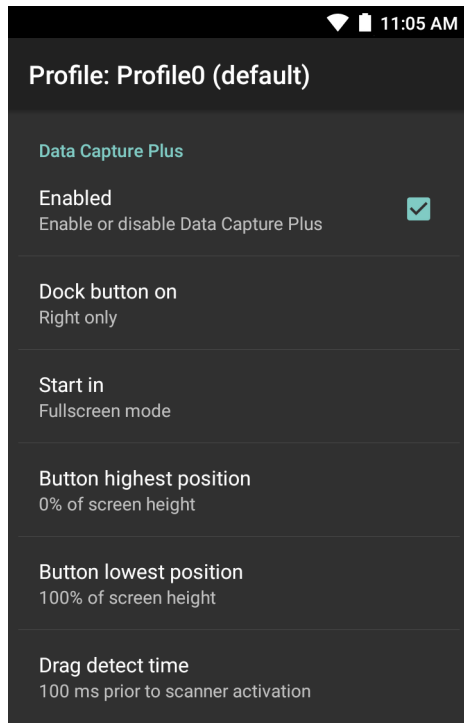
**Figure 99** Data Capture Panel Settings

- **Enable** - Select to enable Data Capture Plus (default - disabled).
- **Dock button on** - Select position of the button.
  - **Left or right** - Allows user to place the button on either the right or left edge of the screen.
  - **Left only** - Places the button on left edge of the screen.
  - **Right only** - Places the button on the right edge of the screen.
- **Start in** - Select the initial DCP state.
  - **Fullscreen mode** - DCP covers the whole screen.
  - **Button mode** - DCP displays as a circular button on the screen and can be switched to fullscreen mode.
  - **Button only mode** - DCP displays as a circular button on the screen and cannot be switched to fullscreen mode.
- **Button highest position** - Select the top of the range the user is allowed to move the DCP, given as a percent of the screen height (default - 0).
- **Button lowest position** - Select the bottom of the range the user is allowed to move the DCP, given as a percent of the screen height (default - 100).
- **Drag detect time** - Select the time in milliseconds that the scanner waits before activating scanner. This allows the user to drag the button without initiating scanner (default - 100 ms, maximum 1000 ms).



**NOTE:** The DCP does not appear if the scanner is disabled in the profile even though the **Enabled** option is set.

In Button mode, the user can place DCP in full screen mode by dragging the button over **Fullscreen mode**. The overlay covers the screen.

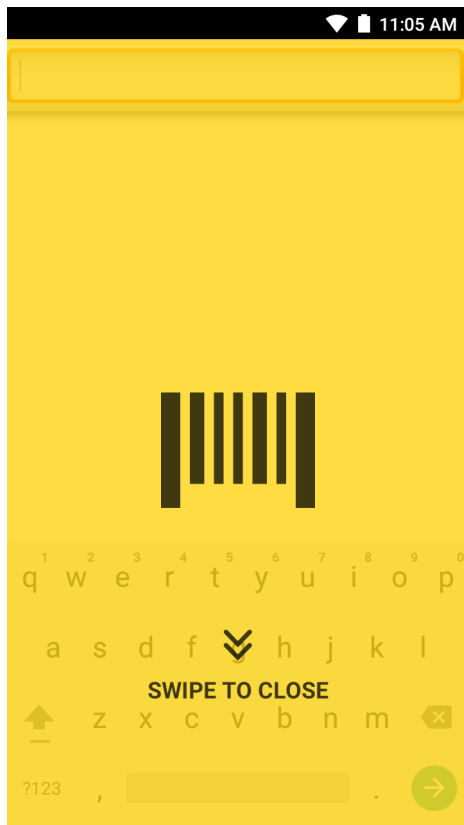**Figure 100** Maximized DCP

Swipe down to return to button mode.

## Bar Code Input

Use the **Bar Code Input** options to configure the Bar Code Scanner Input Plug-in for the profile.

### Enabled

Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled.

### Scanner Selection

Configures which scanning device to use for bar code data capture when the profile is active.

- **Auto** - The software automatically determines the best scanning device.
- **2D Barcode Imager** - Scanning is performed using the 2D Imager.
- **Bluetooth Scanner** - Scanning is performed using the option Bluetooth scanner.
- **RS6000 Bluetooth Scanner** - Scanning is performed using the RS6000 Bluetooth scanner.
- **DS3678 Bluetooth Scanner** - Scanning is performed using the DS3678 Bluetooth scanner.

## Decoders

Configures which bar code decoders are enabled or disabled. For best performance disable all unnecessary decoders.

Touch **Decoders**. The **Barcode input** screen appears. A check in the checkbox indicates that the decoder is enabled. By default the most commonly used decoders are enabled (shown below with an asterisk). The supported decoders are:




**NOTE:** DataWedge supports the decoders listed below but not all are validated on this device.

**Table 9** Supported Decoders

Decoders	Imager	RS507	RS6000
Australian Postal	Disabled	Disabled	Disabled
Aztec	Enabled	Enabled	Enabled
Canadian Postal	Disabled	Not supported	Disabled
Chinese 2 of 5	Disabled	Disabled	Disabled
Codabar	Enabled	Enabled	Enabled
Code 11	Disabled	Disabled	Disabled
Code 128	Enabled	Enabled	Enabled
Code 39	Enabled	Enabled	Enabled
Code 93	Disabled	Disabled	Disabled
Composite AB	Disabled	Disabled	Disabled
Composite C	Disabled	Disabled	Disabled
Discrete 2 of 5	Disabled	Disabled	Disabled
Datamatrix	Enabled	Enabled	Enabled
Dutch Postal	Disabled	Disabled	Disabled
EAN-13	Enabled	Enabled	Enabled
EAN-8	Enabled	Enabled	Enabled
GS1 DataBar	Enabled	Enabled	Enabled
GS1 DataBar Expanded	Enabled	Enabled	Enabled
GS1 DataBar Limited	Disabled	Disabled	Disabled
HAN XIN	Disabled	Not supported	Disabled
Interleaved 2 of 5	Disabled	Disabled	Disabled
Japanese Postal	Disabled	Disabled	Disabled
Korean 3 of 5	Disabled	Disabled	Disabled
MAIL MARK	Enabled	Not supported	Enabled
Matrix 2 of 5	Disabled	Disabled	Disabled
Maxicode	Enabled	Enabled	Enabled

**Table 9** Supported Decoders (Continued)

Decoders	Imager	RS507	RS6000
MicroPDF	Disabled	Disabled	Disabled
MicroQR	Disabled	Disabled	Disabled
MSI	Disabled	Disabled	Disabled
PDF417	Enabled	Enabled	Enabled
QR Code	Enabled	Enabled	Enabled
Decoder Signature	Disabled	Disabled	Disabled
TLC 39	Disabled	Disabled	Disabled
Trioptic 39	Disabled	Disabled	Disabled
UK Postal	Disabled	Disabled	Disabled
UPC-A	Enabled	Enabled	Enabled
UPC-E0	Enabled	Enabled	Enabled
UPC-E1	Disabled	Disabled	Disabled
US4state	Disabled	Disabled	Disabled
US4state FICS	Disabled	Disabled	Disabled
US Planet	Disabled	Disabled	Disabled
US Postnet	Disabled	Disabled	Disabled

Touch  to return to the previous screen.

## Decoder Params

Use **Decode Params** to configure individual decoder parameters.

### Codabar

- **CLSI Editing** - Enable this parameter to strip the start and stop characters and insert a space after the first, fifth, and tenth characters of a 14-character Codabar symbol. Enable this feature if the host system requires this data format (default - disabled).
- **Length1** - Use to set decode lengths (default - 6). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths (default - 55). See [Decode Lengths on page 96](#) for more information.
- **NOTIS Editing** - Enable this parameter to strip the start and stop characters from a decoded Codabar symbol. Enable this feature if the host system requires this data format (default - disabled).
- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - enabled).

## Code 11

- **Length1** - Use to set decode lengths (default - 4). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths (default - 55). See [Decode Lengths on page 96](#) for more information.
- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - enabled).
- **Report Check Digit** - Transmit Code 11 data with or without the check digit. A check in the checkbox indicates to send Code 11 data with check digit (default - disabled).
- **Verify Check Digit** - Check the integrity of all Code 11 symbols to verify that the data complies with the specified check digit algorithm. This selects the check digit mechanism for the decoded Code 11 bar code.
  - **No Check Digit** - Do not verify check digit.
  - **1 Check Digit** - Bar code contains one check digit (default).
  - **2 Check Digits** - Bar code contains two check digits.

## Code128

- **Code128 Reduced Quiet Zone** - Enables decoding of margin-less Code 128 bar codes (default - disabled) (Imager and RS6000 only).
- **Ignore Code128 FNC4** - When enabled, and a Code 128 bar code has an embedded FNC4 character, it will be removed from the data and the following characters will not be changed. When the feature is disabled, the FNC4 character will not be transmitted but the following character will have 128 added to it (default - disabled) (Imager and RS6000 only).
- **Check ISBT Table** - The ISBT specification includes a table that lists several types of ISBT bar codes that are commonly used in pairs. If ISBT128 Concat Mode is set, enable Check ISBT Table to concatenate only those pairs found in this table. Other types of ISBT codes are not concatenated. A check in the checkbox indicates that redundancy is enabled (default - disabled).
- **Enable GS1-128** - Set the GS1 128 subtype. A check in the checkbox indicates that the option is enabled (default - enabled).
- **Enable ISBT128** - Set the ISBT128 subtype. A check in the checkbox indicates that the option is enabled (default - enabled).
- **Enable Plain Code 128** - RS6000 and DS3678 only. Enables other (non-EAN or ISBT) Code 128 subtypes. (default-enabled).
- **ISBT128 Concatenation Mode** - Select an option for concatenating pairs of ISBT code types:
  - **Concat Mode Never** - Do not concatenate pairs of ISBT codes encountered (default).
  - **Concat Mode Always** - There must be two ISBT codes in order to decode and perform concatenation. Does not decode single ISBT symbols.
  - **Concat Mode Auto** - Decodes and concatenates pairs of ISBT codes immediately. If only a single ISBT symbol is present, the device must decode the symbol the number of times set via DataWedge Configuration 4 - 11 Redundancy - Code128 before transmitting its data to confirm that there is no additional ISBT symbol.
- **Length1** - Use to set decode lengths (default - 0). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths (default - 55). See [Decode Lengths on page 96](#) for more information.
- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - disabled).
- **Security Level** - The scanner offers four levels of decode security for Code 128 bar codes. Select increasing levels of security for decreasing levels of bar code quality. There is an inverse relationship

between security and scanner aggressiveness, so choose only that level of security necessary for any given application.

- **Security Level 0** - This setting allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding most “in-spec” bar codes.
- **Security Level 1** - This setting eliminates most misdecodes (default).
- **Security Level 2** - Select this option if Security level 1 fails to eliminate misdecodes.
- **Security Level 3** - If Security Level 2 is selected and misdecodes still occur, select this security level. Be advised, selecting this option is an extreme measure against mis-decoding severely out of spec bar codes. Selecting this level of security significantly impairs the decoding ability of the scanner. If this level of security is needed, try to improve the quality of the bar codes.

## Code39

- **Code39 Reduced Quiet Zone** - Enables decoding of margin-less Code 39 bar codes (default - disabled) (imager and RS6000 only).
- **Convert Code39 To Code32** - Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan the appropriate bar code below to enable or disable converting Code 39 to Code 32 (default - disabled).
- **Full ASCII** - Code 39 Full ASCII is a variant of Code 39 that pairs characters to encode the full ASCII character set. To enable or disable Code 39 Full ASCII (default - disabled),
- **Length1** - Use to set decode lengths (default - 0). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths 4 (default - 55). See [Decode Lengths on page 96](#) for more information.
- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - disabled).
- **Report Check Digit** - Transmit Code 39 data with or without the check digit. A check in the checkbox indicates to send Code 39 data with check digit (default - disabled).
- **Report Code32 Prefix** - Scan the appropriate bar code to enable or disable adding the prefix character “A” to all Code 32 bar codes (default - disabled).
- **Security Level** - Options: **Security level 0**, **Security Level 1**, **Security Level 2** and **Security Level 3** (default - Security level 1).
  - **Security Level 0** - This setting allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding most “in-spec” bar codes.
  - **Security Level 1** - This setting eliminates most misdecodes (default).
  - **Security Level 2** - Select this option if Security level 1 fails to eliminate misdecodes.
  - **Security Level 3** - If Security Level 2 is selected and misdecodes still occur, select this security level. Be advised, selecting this option is an extreme measure against mis-decoding severely out of spec bar codes. Selecting this level of security significantly impairs the decoding ability of the scanner. If this level of security is needed, try to improve the quality of the bar codes.
- **Verify Check Digit** - Enable this feature to check the integrity of all Code 39 symbols to verify that the data complies with a specified check digit algorithm. The digital scanner decodes only those Code 39 symbols that include a modulo 43 check digit. Enable this feature only if the Code 39 symbols contain a modulo 43 check digit (default - disabled).

## Code93

- **Length1** - Use to set decode lengths (default - 0). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths (default - 55). See [Decode Lengths on page 96](#) for more information.



- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - disabled).

## Composite AB

- **UCC Link Mode**
  - **Link Flag ignored** - 1D component is transmitted regardless of whether a 2D component is detected.
  - **Always Linked** - 1D and the 2D components are transmitted. If 2D is not present, the 1D component is not transmitted.
  - **Auto Discriminate** - the digital scanner determines if there is a 2D portion, then transmits the 1D component, as well as the 2D portion if present. (default).

## Discrete 2 of 5

- **Length1** - Use to set decode lengths (default - 0). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths (default - 14). See [Decode Lengths on page 96](#) for more information.
- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - enabled).

## GS1 DataBar Limited

- **GS1 Limited Security Level**
  - **GS1 Security Level 1** - This setting allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding most “in-spec” bar codes.
  - **GS1 Security Level 2** - This setting eliminates most misdecodes (default).
  - **GS1 Security Level 3** - Select this option if Security level 2 fails to eliminate misdecodes.
  - **GS1 Security Level 4** - If Security Level 3 is selected and misdecodes still occur, select this security level. Be advised, selecting this option is an extreme measure against mis-decoding severely out of spec bar codes. Selecting this level of security significantly impairs the decoding ability of the scanner. If this level of security is needed, try to improve the quality of the bar codes.

## HAN XIN

- **HAN XIN Inverse** (Imager and RS6000 only)
  - **Disable** - Disables decoding of HAN XIN inverse bar codes (default).
  - **Enable** - Enables decoding of HAN XIN inverse bar codes.
  - **Auto** - Decodes both HAN XIN regular and inverse bar codes.

## Interleaved 2 of 5

- **Check Digit**
  - **No Check Digit** - A check digit is not used. (default)
  - **USS Check Digit** - Select to check the integrity of all Interleaved 2 of 5 symbols to verify the data complies with either the Uniform Symbology Specification (USS) check digit algorithm.
  - **OPCC Check Digit** - Select to check the integrity of all Interleaved 2 of 5 symbols to verify the data complies with either the Optical Product Code Council (OPCC) check digit algorithm.
- **Length1** - Use to set decode lengths (default - 14). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths (default - 10). See [Decode Lengths on page 96](#) for more information.

- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - enabled).
- **Report Check Digit** - Transmit Interleaved 2 of 5 data with or without the check digit. A check in the checkbox indicates to send Interleaved 2 of 5 data with check digit (default - disabled).
- **I2of5 Security Level** - Options: **I2of5 Security level 0**, **I2of5 Security Level 1**, **I2of5 Security Level 2** and **I2of5 Security Level 3** (default - I2of5 Security level 1).
- **Convert ITF-14 To EAN13** - Convert 14-character Interleaved 2 of 5 bar codes to EAN-13, and transmit as EAN-13. The Interleaved 2 of 5 bar code must be enabled and must have a leading zero and a valid EAN-13 check digit. A check in the checkbox indicates that the option is enabled (default - disabled).
- **I2of5 Reduced Quiet Zone** - Enables decoding of margin-less I2of5 bar codes (imager only).

## Matrix 2 of 5

- **Length1** - Use to set decode lengths (default - 10). See [Decode Lengths on page 96](#) for more information.
- **Length2** - Use to set decode lengths (default - 0). See [Decode Lengths on page 96](#) for more information.
- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - disabled).
- **Report Check Digit** - Transmit Matrix 2 of 5 data with or without the check digit. A check in the checkbox indicates to send Matrix 2 of 5 data with check digit (default - enabled).
- **Verify Check Digit** - Enable this feature to check the integrity of all Matrix 2 of 5 symbols to verify that the data complies with a specified check digit algorithm (default - enabled).

## MSI

- **Check Digit** - With MSI symbols, one check digit is mandatory and always verified by the reader. The second check digit is optional.
  - **One Check Digit** - Verify one check digit (default).
  - **Two Check Digits** - Verify two check digits.
- **Check Digit Scheme** - Two algorithms are possible for the verification of the second MSI check digit. Select the algorithm used to encode the check digit.
  - **Mod-11-10** - First check digit is MOD 11 and second check digit is MOD 10 (default).
  - **Mod-10-10** - Both check digits are MOD 10.
- **Length 1** - Use to set decode lengths (default - 4). See [Decode Lengths on page 96](#) for more information.
- **Length 2** - Use to set decode lengths (default - 55). See [Decode Lengths on page 96](#) for more information.
- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - enabled).
- **Report Check Digit** - Transmit MSI data with or without the check digit. A check in the checkbox indicates to send MSI data with check digit (default - disabled).

## Trioptic 39

- **Redundancy** - Sets the reader to read the bar code twice before accepting data. A check in the checkbox indicates that redundancy is enabled (default - enabled) (RS507 and RS6000 only).

## UK Postal

- **Report Check Digit** - Transmit UK Postal data with or without the check digit. A check in the checkbox indicates to send UK Postal data with check digit (default - disabled).

## UPCA

- **Preamble** - Preamble characters are part of the UPC symbol consisting of Country Code and System Character. Select the appropriate option to match the host system.  
There are three options for transmitting a UPCA preamble:
  - **Preamble None** - Transmit no preamble.
  - **Preamble Sys Char** - Transmit System Character only (default).
  - **Preamble Country and Sys Char** - Transmit System Character and Country Code ("0" for USA).  
Select the appropriate option to match the host system.
- **Report Check Digit** - The check digit is the last character of the symbol used to verify the integrity of the data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default - enabled).

## UPCE0

- **Convert UPCE0 To UPCA** - Enable to convert UPCE0 (zero suppressed) decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections. Disable to transmit UPCE0 decoded data as UPCE0 data, without conversion (default - disabled).
- **Preamble** - Preamble characters are part of the UPC symbol consisting of Country Code and System Character. Select the appropriate option to match the host system.  
There are three options for transmitting a UPCE0 preamble:
  - **Preamble Sys Char** - Transmit System Character only.
  - **Preamble Country and Sys Char** - Transmit System Character and Country Code ("0" for USA).
  - **Preamble None** - Transmit no preamble (default).
- **Report Check Digit** - The check digit is the last character of the symbol used to verify the integrity of the data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default - disabled).

## UPCE1

- **Convert UPCE1 To UPCA** - Enable this to convert UPCE1 decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is affected by UPC-A programming selections. Disable this to transmit UPCE1 decoded data as UPCE1 data, without conversion (default - disabled).
- **Preamble** - Preamble characters are part of the UPC symbol consisting of Country Code and System Character. Select the appropriate option to match the host system.  
There are three options for transmitting a UPCE1 preamble:
  - **Preamble Sys Char** - Transmit System Character only.
  - **Preamble Country and Sys Char** - Transmit System Character and Country Code ("0" for USA).
  - **Preamble None** - Transmit no preamble (default).
- **Report Check Digit** - The check digit is the last character of the symbol used to verify the integrity of the data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default - disabled).

## US Planet

- **Report Check Digit** - The check digit is the last character of the symbol used to verify the integrity of the data. Enables or disables this option. A check in the checkbox indicates that the option is enabled (default - disabled).

## Decode Lengths

- The allowable decode lengths are specified by options **Length1** and **Length2** as follows:
- Variable length: Decode symbols containing any number of characters.
  - Set both **Length1** and **Length2** to 0.
- Range: Decode a symbol with a specific length range (from a to b, including a and b).
  - Set **Length1** to a and set **Length2** to b.
- Two Discrete Lengths: Decode only symbols containing either of two selected lengths.
  - Set both **Length1** or **Length2** to the specific lengths. **Length1** must be greater than **Length2**.
- One Discrete Length: Decode only symbols containing a specific length.
  - Set both **Length1** and **Length2** to the specific length.

## UPC EAN Params

Allows the configuration of the parameters that apply to more than one UPC or EAN decoder.

- **Convert DataBar To UPC EAN** - If this is set it converts DataBar bar codes to UPC/EAN format. For this setting to work UPC/EAN symbologies must be enabled. A check in the checkbox indicates that the option is enabled (default - disabled).
- **UPC Reduced Quiet Zone** - Enables decoding of margin-less UPC bar codes (default - disabled) (Imager and RS6000 only).
- **Bookland** - Enable Bookland decoding. A check in the checkbox indicates that the option is enabled (default - disabled).
- **Bookland Format** - If Bookland EAN is enabled, select one of the following formats for Bookland data:
  - **Format ISBN-10** - The decoder reports Bookland data starting with 978 in traditional 10-digit format with the special Bookland check digit for backward-compatibility. Data starting with 979 is not considered Bookland in this mode. (default)
  - **Format ISBN-13** - The decoder reports Bookland data (starting with either 978 or 979) as EAN-13 in 13-digit format to meet the 2007 ISBN-13 protocol.
- **Coupon** - Enables Coupon code decoding. Note that in order to successfully decode Coupon codes, all of the correct decoders must be enabled. A check in the checkbox indicates that the option is enabled (default - disabled).
- **Coupon Report Mode** - Traditional coupon symbols are composed of two bar code: UPC/EAN and Code 128. A new coupon symbol is composed of a single Data Expanded bar code. The new format offers more options for purchase values (up to \$999.999) and supports complex discount offers as a second purchase requirement. An interim coupon symbol also exists that contain both types of bar codes: UPC/EAN and

Databar Expanded. This format accommodates both retailers that do not recognize or use the additional information included in the new coupon symbol, as well as those who can process new coupon symbols.

- **Old Coupon Report Mode** - Scanning an old coupon symbol reports both UPC and Code 128, scanning an interim coupon symbol reports UPC, and scanning a new coupon symbol reports nothing (no decode).
- **New Coupon Report Mode** - Scanning an old coupon symbol reports either UPC or Code 128, and scanning an interim coupon symbol or a new coupon symbol reports Databar Expanded.
- **Both Coupon Report Modes** - Scanning an old coupon symbol reports both UPC and Code 128, and scanning an interim coupon symbol or a new coupon symbol reports Databar Expanded (default).
- **Ean Zero Extended** – Enable this parameter to add five leading zeros to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols. Disable this to transmit EAN-8 symbols as is. Default – disabled.
- **Linear Decode** - This option applies to code types containing two adjacent blocks (e.g., UPC-A, EAN-8, EAN-13). Enable this parameter to transmit a bar code only when both the left and right blocks are successfully decoded within one laser scan. Enable this option when bar codes are in proximity to each other (default - enabled) (RS507 and RS6000 only).
- **Retry Count** - Retry count for auto-discriminating for supplementals. Possible values are 2 to 20 inclusive. Note that this flag is only considered if Supplemental Mode - UPC EAN is set to one of the following values: **Supplementals Auto**, **Supplementals Smart**, **Supplementals 378-379**, **Supplementals 978-979**, **Supplementals 977** or **Supplementals 414-419-434-439** (2 to 20, default 10).
- **Security Level** - The scanner offers four levels of decode security for UPC/EAN bar codes. Select higher security levels for lower quality bar codes. There is an inverse relationship between security and decode speed, so be sure to choose only that level of security necessary for the application.
  - **Level 0** - This default setting allows the scanner to operate fastest, while providing sufficient security in decoding “in-spec” UPC/EAN bar codes (default).
  - **Level 1** - As bar code quality levels diminish, certain characters become prone to misdecodes before others (i.e., 1, 2, 7, 8). If the scanner is misdecoding poorly printed bar codes, and the misdecodes are limited to these characters, select this security level.
  - **Level 2** - If the scanner is misdecoding poorly printed bar codes, and the misdecodes are not limited to characters 1, 2, 7, and 8, select this security level.
  - **Level 3** - If the scanner is still misdecoding, select this security level. Be advised, selecting this option is an extreme measure against misdecoding severely out of spec bar codes. Selecting this level of security can significantly impair the decoding ability of the scanner. If this level of security is necessary, try to improve the quality of the bar codes.
- **Supplemental2** - Enables or disables this option. A check in the checkbox indicates that the option is enabled.
- **Supplemental5** - Enables or disables this option. A check in the checkbox indicates that the option is enabled.
- **Supplemental Mode**
  - **No Supplementals** - the scanner is presented with a UPC/EAN plus supplemental symbol, the scanner decodes UPC/EAN and ignores the supplemental characters (default).
  - **Supplemental Always** - the scanner only decodes UPC/EAN symbols with supplemental characters, and ignores symbols without supplementals.
  - **Supplementals Auto** - the scanner decodes UPC/EAN symbols with supplemental characters immediately. If the symbol does not have a supplemental, the scanner must decode the bar code the

number of times set via UPC/EAN Supplemental Redundancy before transmitting its data to confirm that there is no supplemental.

- **Supplemental Smart** - Enables smart supplementals. In this mode the decoder returns the decoded value of the main block right away if it does not belong to one of the following supplemental types: 378, 379, 977, 978, 979, 414, 419, 434 or 439. If the bar code starts with one of the prefixes it searches the image more aggressively for a supplemental. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main bar code is returned.
- **Supplemental 378-379** - Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 378 or 379. Disables reading of supplementals for any other UPC/EAN bar code not starting with 378 or 379. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main bar code is returned.
- **Supplemental 978-979** - Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 978 or 979. Disables reading of supplementals for another UPC/EAN bar code not starting with 978 or 979. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main bar code is returned.
- **Supplemental 414-419-434-439** - Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 414, 419, 434 or 439. Disables reading of supplementals for another UPC/EAN bar code 4 - 16 not starting with 414, 419, 434 or 439. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main bar code is returned.
- **Supplemental 977** - Enables (auto-discriminate) supplemental for UPC/EAN codes starting with 977. Disables reading of supplementals for another UPC/EAN bar code not starting with 977. Tries to scan the supplemental if it is present. If the supplemental scanning failed, then the main bar code is returned.

## Reader Params

Allows the configuration of parameters specific to the selected bar code reader.

- **1D Quiet Zone Level** - Sets the level of aggressiveness in decoding bar codes with a reduced quiet zone (the area in front of and at the end of a bar code), and applies to symbologies enabled by a Reduced Quiet Zone parameter. Because higher levels increase the decoding time and risk of misdecodes, Zebra strongly recommends enabling only the symbologies which require higher quiet zone levels, and leaving Reduced Quiet Zone disabled for all other symbologies (Imager only).

Options are:

- **0** - The scanner performs normally in terms of quiet zone.
- **1** - The scanner performs more aggressively in terms of quiet zone (default).
- **2** - The scanner only requires one side EB (end of bar code) for decoding.
- **3** - The scanner decodes anything in terms of quiet zone or end of bar code.
- **Aim mode** - Turns the scanner cross-hairs on or off.
  - **On** - Cross-hair is on (default).
  - **Off** - Cross-hair is off.
- **Character Set Selection**
  - **ISO-8859-1** - part of the ISO/IEC 8859 series of ASCII-based standard character encodings. It is generally intended for Western European languages.
  - **Shift\_JIS** - Shift Japanese Industrial Standards (JIS) is a character encoding for the Japanese language.
  - **UTF-8** - A character encoding capable of encoding all possible characters, or code points, defined by Unicode (default).

- **Time Delay to Low Power** - Sets the time the decoder remains active after decoding. After a scan session, the decoder waits this amount of time before entering Low Power Mode. Options: **1 Second** (default), **30 Seconds**, **1 Minute** or **5 Minutes** (RS507 and RS6000 only).
- **Illumination Brightness** - Sets the brightness of the illumination by altering LED power. The default is 10, which is maximum LED brightness. For values from 1 to 10, LED brightness varies from lowest to highest level of brightness (RS507 and RS6000 only).
- **Illumination mode** - Turns imager illumination on and off. This option is only available when **Bluetooth Scanner** is selected in the **Barcode input, Scanner selection** option.
  - **On** - Illumination is on (default).
  - **Off** - Illumination is off.
- **Inverse 1D Mode** - This parameter allows the user to select decoding on inverse 1D bar codes (RS507 and RS6000 only).
  - **Disable** - Disables decoding of inverse 1D bar codes (default).
  - **Enable** - Enables decoding of only inverse 1D bar codes.
  - **Auto** - Allows decoding of both twice positive and inverse 1D bar codes.
- **LCD Mode** - Enables or disables LCD mode. LCD mode enhances the ability of the imager to read bar codes from LCD displays such as cellphones (Imager and RS6000 only).
  - **Disable** - Disables the LCD mode (default).
  - **Enable** - Enables LCD mode.
- **Linear Security Level** - Sets the number of times a barcode is read to confirm an accurate decode.
  - **Security Short or Codabar** - Two times read redundancy if short barcode or Codabar.
  - **Security All Twice** - Two times read redundancy for all barcodes.
  - **Security Long and Short** - Two times read redundancy for long barcodes, three times for short barcodes.
  - **Security All Thrice** - Three times read redundancy for all barcodes.
- **HW Engine Low Power Timeout** - Time of inactivity before scanner enters low-power mode (0 - 1,000 ms in increments of 50ms) (default - 250).
- **Picklist** - Allows the imager to decode only the bar code that is directly under the cross-hair/reticle (+) part of the pattern. This feature is useful in applications where multiple bar codes may appear in the field of view during a decode session and only one of them is targeted for decode.
  - **Disabled** - Disables Picklist mode. Any bar code within the field of view can be decoded (default).
  - **Enabled** - Enables Picklist mode so that only the bar code under the projected reticle can be decoded.
- **Poor Quality Decode Effort** - Enable poor quality bar code decoding enhancement feature (Imager and RS6000 only).
- **Aim Timer** - Sets the maximum amount of time that aiming remains on (0 - 60,000 ms in increments of 100 ms). A value of 0 sets the aim to stay on indefinitely (default - 500).



- **Aim Type** - Set the aiming usage.
  - **Trigger** - A trigger event activates decode processing, which continues until the trigger event ends or a valid decode occurs.
  - **Timed Hold** - A trigger pull and hold activates the laser for aiming, which continues until the trigger is released, a valid decode, or the decode session time-out is expired.
  - **Timed Release** - A trigger pull activates the laser for aiming, which continues until a valid decode or the remaining decode session time has expired.
  - **Press and Release** - A trigger pull and release activates the laser for aiming, which continues until a trigger is pressed again, a valid decode, or the decode session time-out is expired.
  - **Continuous Read** - When the imager detects an object in its field of view, it triggers and attempt to decode.
- **Beam Timer** - Sets the maximum amount of time that the reader remains on (0 - 60,000 ms in increments of 100 ms). A value of 0 sets the reader to stay on indefinitely (default - 5000).
- **Different Symbol Timeout** - Controls the time the scanner is inactive between decoding different symbols. Programmable in 500 msec increments from 0 to 5 seconds. (default - 500).
- **Same Symbol Timeout** - Controls the time the scanner is inactive between decoding same symbols. Programmable in 500 msec increments from 0 to 5 seconds. (default - 500).
- **Scanning Modes** - Scanning options available on the device. Available on builds BSP 19-01.4 and above.
  - **Single** - Set to scan general barcodes.
  - **UDI** - Set to scan healthcare specific barcodes.

## Scan Params

Allows the configuration of Code ID and decode feedback options.

- **Code ID Type** - A Code ID character identifies the code type of a scanned bar code. This is useful when the reader is decoding more than one code type. Select a code ID character to insert between the prefix and the decoded symbol.
  - **Code ID Type None** - No prefix (default)
  - **Code ID Type AIM** - Insert AIM Character prefix.
  - **Code ID Type Symbol** - Insert Symbol character prefix.
- **Engine Decode LED** - Use to turn on scanner red LED when the scan beam is emitting either by scanner trigger or using soft scan button (RS507 only).
- **BT Disconnect On Exit** - Bluetooth connection is disconnected when data capture application is closed (RS507 and RS6000 only).
- **Connection Idle Time** - Set connection idle time. The Bluetooth connection disconnects after being idle for set time (RS507 and RS6000 only).
- **Decode Haptic Feedback** - Enable the device to vibrate upon a good decode (default - enabled).
- **Display BT Address Barcode** - Enable or disable displaying Bluetooth Address bar code if there is no Bluetooth scanner being paired when application tries to enable the Bluetooth scanner (RS507 and RS6000 only).
- **Establish Connection Time** - The timeout which the device will try to enable or reconnect to the Bluetooth scanner when the Bluetooth scanner is not in the vicinity or not paired (RS507 and RS6000 only).



- **Audio Feedback Mode** - Select good decode audio indication (RS507 and RS6000 only).
  - **Local Audio Feedback** - Good decode audio indication on TC70x/TC75x only.
  - **Remote Audio Feedback** - Good decode audio indication on Bluetooth scanner only.
  - **Both** - Good decode audio indication on TC70x/TC75x and Bluetooth scanner.
  - **Disable** - No good decode audio indication on either TC70x/TC75x or Bluetooth scanner (default).
- **LED Feedback Mode** - Select good decode LED indication (RS507 and RS6000 only).
  - **Local LED Feedback** - Good decode LED indication on TC70x/TC75x only.
  - **Remote LED Feedback** - Good decode LED indication on Bluetooth scanner only.
  - **Both** - Good decode LED indication on TC70x/TC75x and Bluetooth scanner (default).
  - **Disable** - No good decode LED indication on either TC70x/TC75x or Bluetooth scanner.
- **Decode Audio Feedback** - Select an audio tone to sound upon a good decode.
- **Decoding LED Notification** - Enable the device to light the red Data Capture LED when data capture is in progress. (default - disabled).
- **Decode Feedback LED Timer** - Set the amount of time (in milliseconds) that the green Data Capture LED stays lit after a good decode. (default - 75 msec.)
- **Beep Volume Channel** - Set the good decode beep to a system or other sound. This allows for independent control of the good beep volume.



**NOTE:** Not all ringtones are fully supported as decode tones and those of longer length may be truncated when used as a decode tone. The recommendation is to test the selected tone for operation before deployment to a customer site.

- **Media** - Set the good decode beep to the media sound.
- **Ringer** - Set the good decode beep to the ringer sound.
- **Notifications** - Set the good decode beep to the notification sound (default).
- **Alarms** - Set the good decode beep to the alarm sound.

## UDI Params

Allows the configuration of parameters specific to healthcare barcodes.

- **Enable UDI-GSI** - Enable UDI using GS1 standards.
- **Enable UDI-HIBCC** - Enable UDI using HIBCC standards.
- **Enable UDI-ICCBBA** - Enable UDI using ICCBBA standards.

## Keep enabled on suspend

Keep Bluetooth scanner enabled after suspend (default-disabled).

## Simulscan Input

Use the **SimulScan Input** to configure the SimulScan Input Plug-in. Simulscan is available on builds BSP 19-01.4 and above.



**NOTE:** Simulscan supports devices with an SE4710 or SE4750 imager only.

- **Enabled** - Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled.
- **Device Selection** - Configures which scanning device to use for data capture when the profile is active.
  - **Camera** - Scanning is performed with the rear-facing camera.
  - **Imager** - Scanning is performed using the integrated 2D Imager.
  - **Default** - Scanning is performed with the default selected scanning device (default).
- **Template Selection** - Select template to use.
  - **Default - BankCheck.xml** – Use this template to read the MICR E-13B font (length between 19 and 40 characters) on bank checks.
  - **Default - Barcode 1.xml** – Use this template to read a single supported bar code.
  - **Default - Barcode 10.xml** – Use this template to read up to 10 supported bar codes.
  - **Default - Barcode 2.xml** – Use this template to read two supported bar codes.
  - **Default - Barcode 4.xml** – Use this template to read up to supported four bar codes.
  - **Default - Barcode 5.xml** – Use this template to read up to supported five bar codes.
  - **Default - BookNumber.xml** – Use this template to read the OCR-B ISBN 10 or 13 digit book numbers.
  - **Default - DocCap + Optional Barcode.xml** – Use this template to capture a full page image and decode any supported bar codes that are in the form. The captured area is the largest rectangular region in the field of view defined by the solid border or contrast of background. Any OCR or OMR content will not be decoded in this mode. The captured area is further processed to correct, de-skew and sharpen and returned as a picture(default).
  - **Default - DocCap + Required Barcode.xml** – Use this template to capture a full page image and decode of any supported bar codes that are present in the form. The captured area is the largest rectangular region in the field of view defined by the solid border or contrast of background. Any OCR or OMR content will not be decoded in this mode. The captured area is further processed to correct, de-skew and sharpen and returned as a picture.
  - **Default - TravelDoc.xml** – Use this template to read passport and Visa travel documents with OCR-B types A and B fonts.
  - **Default - Unstructured Multi-Line.xml** – Use this template to read up to seven lines of text.
  - **Default - Unstructured Single Line.xml** – Use this template to read a single line of text.
- **Region separator** - Use to configure a separator character for SimulScan region data. When there are multiple text regions the region separator will be inserted between two data strings. By default no separator will be set. Possible values for region separator are **None**, **Tab**, **Line feed** and **Carriage return**. Region separator can be used with the Keystrokes plug-in Action key character setting to dispatch SimulScan region data to separate text fields.
- **Log directory** - Select a folder for storing log files to help debug a template. The folders are named based on the timestamp of the session and the debug data saved includes logs, templates, frame data, etc.
- **Timestamp** - Enable to capture the time when the data was captured and processed in case of a successful SimulScan session.

## Keystroke Output

Use to configure the Keystroke Output Plug-in for the profile.

- **Enabled** — Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled (default - enabled).

- **Action key character** - Enables decoding of a special character embedded within a bar code data for use in native Android applications. This feature is helpful when populating or executing a form.
  - **None** - Action key character feature is disabled (default).
  - **Tab** - Tab character code in a bar code is processed. When DataWedge detects this character code in a bar code, move the focus to the next field.
  - **Line feed** - Line feed character code in a bar code is processed. When DataWedge detects this character code in a bar code, move the focus to the next field.
  - **Carriage return** - Carriage return character code in a bar code is processed. When DataWedge detects this character code in a bar code, move the focus to the next field.
- **Multi byte character display** - Set the amount of time (in milliseconds) of the inter character delay for multi byte characters (default - 0).
- **Key event delay** - Set the amount of time (in milliseconds) a delay for dispatching control characters as keystrokes to the foreground application.
- **Token selection** - Allows the output order of acquired UDI data to be adjusted and the optional insertion of a tab, line feed or carriage return character between tokens.
  - **Send tokens** - Set to select the output format for UDI data. (default - disabled)
  - **Token separator** - Set to select a separator character. If no separator character is selected when Send tokens is set to Barcodes and tokens, two instances of the same data are sent. (default - none)
  - **Token order** - Set to include or exclude Tokens from the output and adjust their output order.
- **Advanced data formatting** - is a way to customizing data before transmission. Use advanced data formatting (ADF) to edit scan data to suit requirements.
  - **Enable** - Enables or disables ADF. A check in the checkbox indicates that ADF is enabled (default - disabled).
  - **Rules** - ADF uses rules to customize data. These rules perform detailed actions when the data meets certain criteria. One rule may consist of single or multiple criteria applied to single or multiple actions. See [Generating Advanced Data Formatting Rules on page 109](#) for more information.
- **Basic data formatting** - Allows the configuration of any data formatting for the related Output Plug-in. When the plug-in is disabled, any data is passed on without modification.
  - **Enabled** - Enables or disables Basic Data Formatting. A check in the checkbox indicates that it is enabled (default - enabled).
  - **Prefix to data** - Add characters to the beginning of the data when sent.
  - **Suffix to data** - Add characters to the end of the data when sent.
  - **Send data** - Set to transfer the captured data to the foreground application. Disabling this option prevents the actual data from being transmitted. However, the prefix and suffix strings, if present, are still transmitted even when this option is disabled (default - enabled).
  - **Send as hex** - Set to send the data in hexadecimal format. A check in the checkbox indicates that the plug-in is enabled (default - disabled).
  - **Send TAB key** - Set to append a tab character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default - disabled).
  - **Send ENTER key** - Set to append an Enter character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default - disabled).

## Intent Output

Allows configuration of the Intent Output Plug-in for the profile. The Intent Output Plug-in allows the captured data to be sent to an application in the form of an implicit Intent. Refer to the Android Developer web site for more information, <http://developer.android.com>.

- **Enabled** - Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled (default - disabled).
- **Intent action** - Enter the Intent Action name (required).
- **Intent category** - Enter the Intent Category name (required).
- **Intent delivery** - Select the method by which the intent is delivered:
  - Send via StartActivity
  - Send via startService (default)
  - Broadcast intent
- **Receiver foreground flag** - Set Broadcast intent flag in Intent delivery. (DS3678 only).
- **Advanced data formatting** - is a way to customizing data before transmission. Use advanced data formatting (ADF) to edit scan data to suit requirements.
  - **Enable** - Enables or disables ADF. A check in the checkbox indicates that ADF is enabled (default - disabled).
  - **Rules** - ADF uses rules to customize data. These rules perform detailed actions when the data meets certain criteria. One rule may consist of single or multiple criteria applied to single or multiple actions. See [Generating Advanced Data Formatting Rules on page 109](#) for more information.
- **Basic data formatting** - Allows configuration of any data formatting for the related Output Plug-in. When the plug-in is disabled any data is passed on without modification.
  - **Enabled** - Enables or disables Basic Data Formatting. A check in the checkbox indicates that it is enabled (default - enabled).
  - **Prefix to data** - Add characters to the beginning of the data when sent.
  - **Suffix to data** - Add characters to the end of the data when sent.
  - **Send data** - Set to transfer the captured data to the foreground application. Disabling this option prevents the actual data from being transmitted. However, the prefix and suffix strings, if present, are still transmitted even when this option is disabled (default - enabled).
  - **Send as hex** - Set to send the data in hexadecimal format. A check in the checkbox indicates that the plug-in is enabled (default - disabled).
  - **Send TAB key** - Set to append a tab character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default - disabled).
  - **Send ENTER key** - Set to append an Enter character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default - disabled).

## Intent Overview

The core components of an Android application (its activities, services, and broadcast receivers) are activated by intents. An intent is a bundle of information (an Intent object) describing a desired action - including the data to be acted upon, the category of component that should perform the action, and other pertinent instructions. Android locates an appropriate component to respond to the intent, launches a new instance of the component if one is needed, and passes it the Intent object.

Components advertise their capabilities, the kinds of intents they can respond to, through intent filters. Since the system must learn which intents a component can handle before it launches the component, intent filters are

specified in the manifest as `<intent-filter>` elements. A component may have any number of filters, each one describing a different capability. For example, if the manifest contains the following:

```
<intent-filter . . . >
<action android:name="android.intent.action.DEFAULT" />
<category android:name="android.intent.category.MAIN" />
</intent-filter>
```

In the Intent output plug-in configuration, the **Intent action** would be:

```
android.intent.category.DEFAULT
```

and the Intent category would be:

```
android.intent.category.MAIN.
```

The **Intent delivery** option allows the method by which the intent is delivered to be specified. The delivery mechanisms are **Send via startActivity**, **Send via startService** or **Broadcast intent**.

The decode related data added to the Intent's bundle can be retrieved using the `Intent.getStringExtra()` and `Intent.getSerializableExtra()` calls, using the following String tags:

- String LABEL\_TYPE\_TAG = "com.symbol.emdk.datawedge.label\_type";
  - String contains the label type of the bar code.
- String DATA\_STRING\_TAG = "com.symbol.emdk.datawedge.data\_string";
  - String contains the output data as a String. In the case of concatenated bar codes, the decode data is concatenated and sent out as a single string.
- String DECODE\_DATA\_TAG = "com.symbol.emdk.datawedge.decode\_data";
  - Decode data is returned as a list of byte arrays. In most cases there will be one byte array per decode. For bar code symbologies that support concatenation e.g. Codabar, Code128, MicroPDF, etc., the decoded data is stored in multiple byte arrays (one byte array per bar code). Clients can get data in each byte array by passing an index.

Most scanning applications might want the user to be able to decode data and for that decode data to be sent to the **\*current\*** activity but not necessarily displayed. If this is the case, then the activity needs to be marked as 'singleTop' in its AndroidManifest.xml file. If your activity is not defined as singleTop, then on every decode, the system will create another copy of your Activity and send the decode data to this second copy.

Finally there will be a configuration option for each process plug-in so that the process plug-in can be configured specifically for the intent output, which in this case is the basic data formatting process plug-in.

## IP Output



**NOTE:** IPWedge application is required on a host computer. Download the IPWedge application from the Support Central web site: <http://www.zebra.com/support>.


IP Output allows DataWedge to send captured data to a host computer via a network connection. Captured data can be sent over an IP network to a specified IP address and port using either TCP or UDP transport protocols.

- **Enabled** - Enables or disables this plug-in. A check in the checkbox indicates that the plug-in is enabled (default - disabled).

- **Remote Wedge** - Enable or disable the Remote Wedge option (default - enabled). Remote Wedge is used with the IPWedge application.
- **Protocol** - Select the protocol used by the remote application. Options: **TCP** (default) or **UDP**.
- **IP address** - Enter the IP address used by the remote application (default - 0.0.0.0).
- **Port** - Enter the port number used by the remote application (default - 58627).
- **Token selection** - Allows the output order of acquired UDI data to be adjusted and the optional insertion of a tab, line feed or carriage return character between tokens.
  - **Send tokens** - Set to select the output format for UDI data. (default - disabled)
  - **Token separator** - Set to select a separator character. If no separator character is selected when Send tokens is set to Barcodes and tokens, two instances of the same data are sent. (default - none)
  - **Token order** - Set to include or exclude Tokens from the output and adjust their output order.
- **Advanced data formatting** - is a way of customizing data before transmission. Use advanced data formatting (ADF) to edit scan data to suit requirements.
  - **Enable** - Enables or disables ADF. A check in the checkbox indicates that ADF is enabled (default - disabled).
  - **Rules** - ADF uses rules to customize data. These rules perform detailed actions when the data meets certain criteria. One rule may consist of single or multiple criteria applied to single or multiple actions. See [Generating Advanced Data Formatting Rules on page 109](#) for more information.
- **Basic data formatting** - Allows configuration of any data formatting for the related Output Plug-in. When the plug-in is disabled any data is passed on without modification.
  - **Enabled** - Enables or disables Basic Data Formatting. A check in the checkbox indicates that it is enabled (default - enabled).
  - **Prefix to data** - Add characters to the beginning of the data when sent.
  - **Suffix to data** - Add characters to the end of the data when sent.
  - **Send data** - Set to transfer the captured data to the foreground application. Disabling this option prevents the actual data from being transmitted. However, the prefix and suffix strings, if present, are still transmitted even when this option is disabled (default - enabled).
  - **Send as hex** - Set to send the data in hexadecimal format. A check in the checkbox indicates that the plug-in is enabled (default - disabled).
  - **Send TAB key** - Set to append a tab character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default - disabled).
  - **Send ENTER key** - Set to append an Enter character to the end of the processed data. A check in the checkbox indicates that the plug-in is enabled (default - disabled).

## Usage


This section provides information on how to configure IP Output using the DataWedge configuration user interface. To use IP Output in a particular DataWedge profile (for example: **Profile0**), scroll downward on **IP Output**.

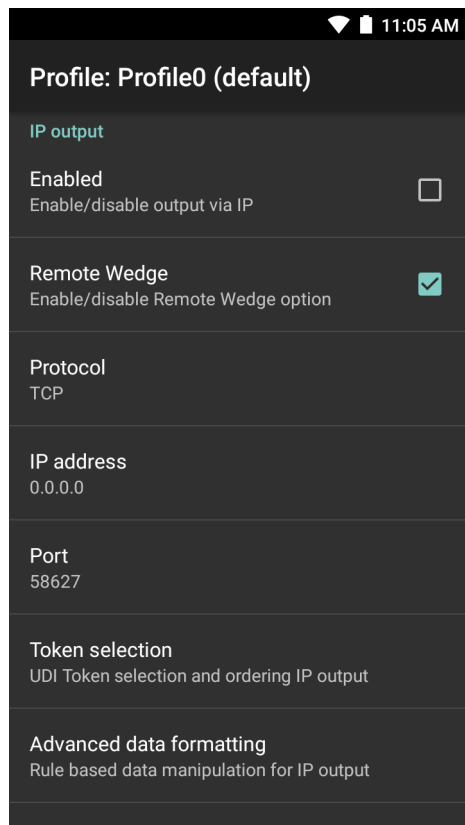**Figure 101** IP Output Screen

## Using IP Output with IPWedge

IPWedge is a computer application that can be easily configured to retrieve data sent over network by DataWedge IP Output. Refer to the IPWedge User Manual on how to install and configure in a host computer. To enable IP Output to send captured data to a remote computer that is installed with IPWedge:


1. In **IP Output**, touch **Enabled**.  
A check appears in the checkbox.
2. Ensure **Remote Wedge** option is enabled.
3. Touch **Protocol**.
4. In the **Choose protocol** dialog box, touch the same protocol selected for the IPWedge computer application. (TCP is the default).

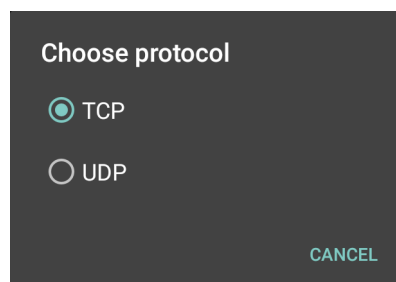**Figure 102** Protocol Selection

5. Touch **IP Address**.


6. In the **Enter IP Address** dialog box, enter the IP address of host computer to send data to.

**Figure 103** IP Address Entry

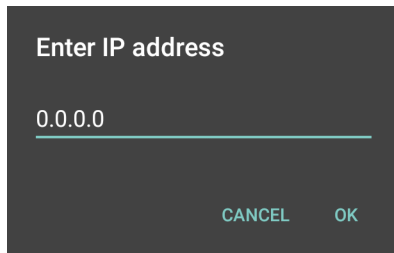

7. Touch **Port**.
8. In the **Enter port number** dialog box, enter same port number selected for IPWedge computer application.

**Figure 104** Port Number Entry

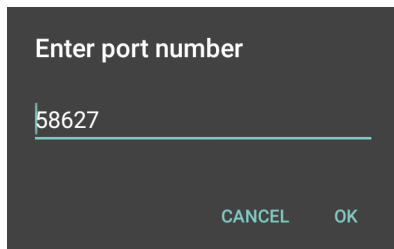


9. Configure **Advanced data formatting** and **Basic data formatting** Plug-in if any required modification to be done to captured data before sending to remote computer.

## Using IP Output without IPWedge

IP Output Plug-in can be used to send captured data from DataWedge to a remote device or host computer without using IPWedge. At the data receiving end, the host computer or mobile device should have an application, that listens to TCP or UDP data coming from a configured port and IP address in the IP Output plug-in. To enable IP Output to send captured data to a remote computer:

1. In **IP Output**, touch **Enabled**.  
A check appears in the checkbox.
2. Ensure **Remote Wedge** option is disabled.
3. Touch **Protocol**.
4. In the **Choose protocol** dialog box, touch the same protocol selected in the client application. (TCP is the default).

**Figure 105** Protocol Selection

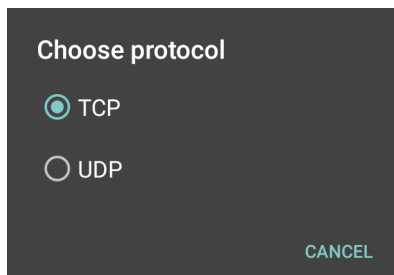


5. Touch **IP Address**.




6. In the **Enter IP address** dialog box, enter the IP address of host computer to send data to.

**Figure 106** IP Address Entry

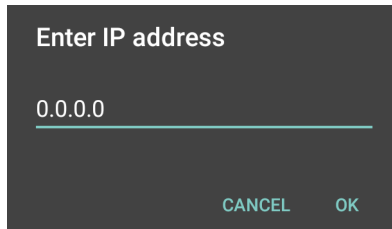

7. Touch **Port**.
8. In the **Enter port number** dialog box, enter the port number that the host computer application is listening on.

**Figure 107** Port Number Entry

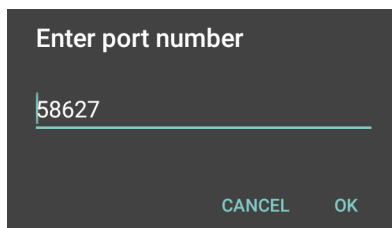

9. Configure **Advanced Data Formatting** and **Basic Data Formatting** Plug-in if any required modification to be done to captured data before sending to remote computer.


## Generating Advanced Data Formatting Rules


The ADF plug-in applies rules (actions to be performed based on defined criteria) to the data received via an input plug-in before sending it to the output plug-in.

- **Rules** - The ADF process plug-in consists of one or more rules. DataWedge formats the output data according to the first matching rule. A rule is a combination of criteria and a set of actions to be performed, upon fulfillment of the criteria set in the rule.
- **Criteria** - Criteria can be set according to Input plug-in, symbology, matching string within the data (at the specified position) and/or data length. Received data must match the defined criteria in order for the data to be processed.
- **Actions** - A set of procedures defined to format data. There are four types of actions which are for formatting cursor movement, data modification, data sending and delay specifications. An action can be defined to send the first number of characters to the Output plug-in, pad the output data with spaces or zeros, remove spaces in data, etc.

## Configuring ADF Plug-in

Configuring the ADF plug-in consists of creating a rule, defining the criteria and defining the actions.

1. Swipe up from the bottom of the screen and touch .
2. Touch a DataWedge profile.
3. In **Keystroke Output**, touch **Advanced data formatting**.

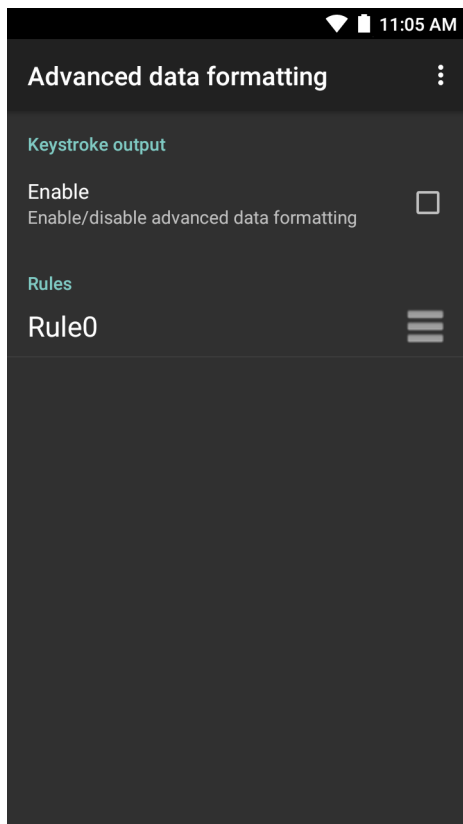**Figure 108** Advanced Data Formatting Screen

4. Touch the **Enable** checkbox to enable ADF.


## Creating a Rule

✓ **NOTE:** By default, **Rule0**, is the only rule in the **Rules** list.

1. Touch **:**.
2. Touch **New rule**.
3. Touch the **Enter rule name** text box.
4. In the text box, enter a name for the new rule.
5. Touch **OK**.

## Defining a Rule

1. Touch the newly created rule in the **Rules** list.

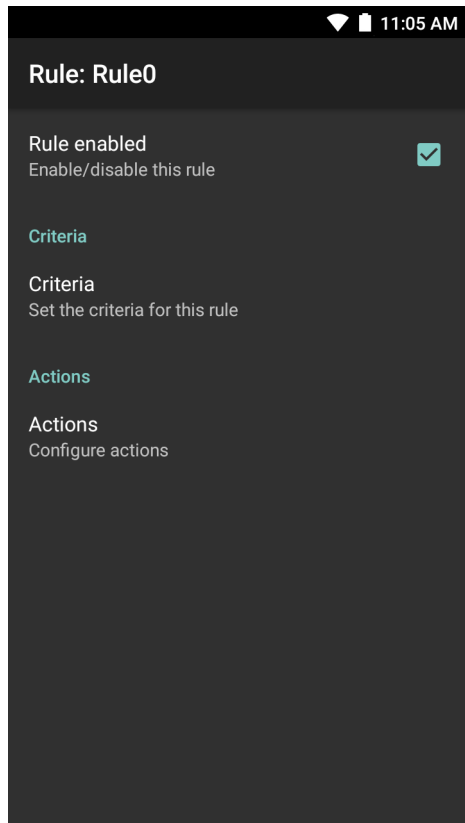**Figure 109** Rule List Screen

2. Touch the **Rule enabled** checkbox to enable the current rule.

## Defining Criteria

1. Touch **Criteria**.

**Figure 110** Criteria Screen

Criteria: Rule0


String to check for  
Specify the string that must be present in the data



String position  
0

String length  
0

Source criteria  
Setup source criteria for this rule

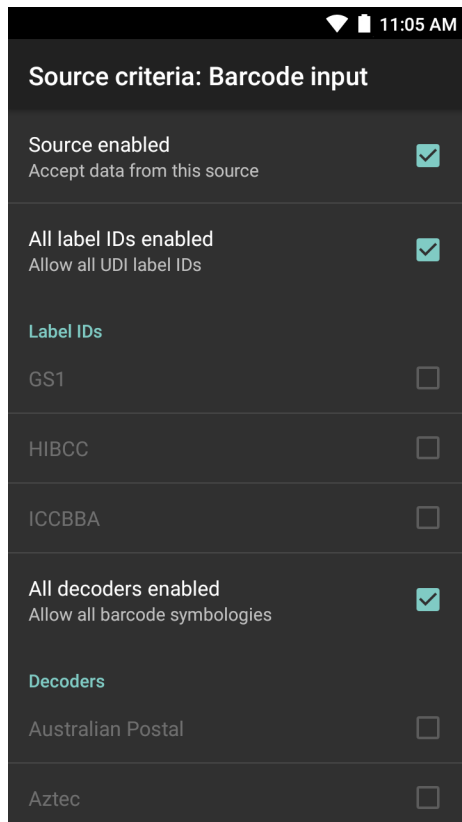2. Touch **String to check for** option to specify the string that must be present in the data.
3. In the **Enter the string to check for** dialog box, enter the string.
4. Touch **OK**.
5. Touch **String position** option to specify the position of the string specified in the **String to check for** option. The ADF rule is only applied if the specific string in **String to check for** is found at the specified **String position** location (zero for the start of the string).
6. Touch the **+** or **-** to change the value.
7. Touch **OK**.
8. Touch **String length option** to specify a length for the received data. The ADF rule only applies to the bar code data with that specified length.
9. Touch the **+** or **-** to change the value.
10. Touch **OK**.
11. Touch **Source criteria** option to associate an input device to an ADF rule. The ADF rule only applies to data received from associated input devices.
12. Touch **Barcode input**. Options vary depending upon the device configuration.
13. Touch the **Source enabled** checkbox to accept data from this source.




**Figure 111** Barcode Input Screen

14. For healthcare barcode inputs, touch the **All label IDs enabled** checkbox to select all bar code symbologies. Deselect the **All label IDs enabled** checkbox to individually select the symbologies.
15. For general barcode inputs, touch the **All decoders enabled** checkbox to select all bar code symbologies. Deselect the **All decoders enabled** checkbox to individually select the symbologies.
16. Touch  until the **Rule** screen appears.
17. If required, repeat steps to create another rule.
18. Touch  until the Rule screen appears.

## Defining an Action



**NOTE:** By default the **Send remaining** action is in the **Actions** list.

1. Touch .
2. Touch **New action**.
3. In the **New action** menu, select an action to add to the **Actions** list. See [Table 10 on page 114](#) for a list of supported ADF actions.
4. Some Actions require additional information. Touch the Action to display additional information fields.
5. Repeat steps to create more actions.
6. Touch .
7. Touch .

## Deleting a Rule

1. Touch and hold on a rule until the context menu appears.
2. Touch **Delete** to delete the rule from the **Rules** list.



**NOTE:** When there is no rule available for ADF plug-in or all rules are disabled, DataWedge passes decoded data to the output plug-in without processing the data.

## Order Rules List



**NOTE:** When there are no rules defined, ADF passes the captured data through as is. In contrast, when rules are defined but all are disabled, ADF does not pass any captured data through.

Rules are processed in top-down order. The rules that are on top of the list are processed first. Use the icon next to the rule to move it to another position in the list.

**Table 10** ADF Supported Actions

Type	Actions	Description
Cursor Movement	Skip ahead	Moves the cursor forward by a specified number of characters. Enter the number of characters to move the cursor ahead.
	Skip back	Moves the cursor back by a specified number of characters. Enter the number of characters to move the cursor back.
	Skip to start	Moves the cursor to the beginning of the data.
	Move to	Moves the cursor forward until the specified string is found. Enter the string in the data field.
	Move past a	Moves the cursor forward past the specified string. Enter the string in the data field.

**Table 10** ADF Supported Actions (Continued)

Type	Actions	Description
Data Modification	Crunch spaces	Remove spaces between words to one and remove all spaces at the beginning and end of the data.
	Stop space crunch	Stops space crunching. This disables the last <b>Crunch spaces</b> action.
	Remove all spaces	Remove all spaces in the data.
	Stop space removal	Stop removing spaces. This disables the last <b>Remove all spaces</b> action.
	Remove leading zeros	Remove all zeros at the beginning of data.
	Stop zero removal	Stop removing zeros at the beginning of data. This disables the previous <b>Remove leading zeros</b> action.
	Pad with zeros	Left pad data with zeros to meet the specified length. Enter the number zeros to pad.
	Stop pad zeros	Stop padding with zeros. This disables the previous <b>Pad with zeros</b> action.
	Pad with spaces	Left pad data with spaces to meet the specified length. Enter the number spaces to pad.
	Stop pad spaces	Stop padding with spaces. This disables the previous <b>Pad with spaces</b> action.
	Replace string	Replaces a specified string with a new string. Enter the string to replace and the string to replace it with.
	Stop all replace string	Stop all <b>Replace string</b> actions.
	Remove characters	Remove the number of characters specified in given positions when send actions are executed.
	Stop remove chars	Stops removing characters from subsequent send actions.
Data Sending	Send next	Sends the specified number of characters from the current cursor position. Enter the number of characters to send.
	Send remaining	Sends all data that remains from the current cursor position.
	Send up to	Sends all data up to a specified string. Enter the string.
	Send pause	Pauses the specified number of milliseconds before continuing the next action. Enter the amount of time in milliseconds.
	Send string	Sends a specified string. Enter the string to send.
	Send char	Sends a specified ASCII/ Unicode character. Enter a character value. The maximum Unicode character value can be entered is U-10FFFF (= 1114111 in decimal).

## Deleting an Action

1. Touch and hold the action name.
2. Select **Delete action** from the context menu.

## ADF Example

The following illustrates an example of creating Advanced Data Formatting:




When a user scans a bar code with the following criteria:

- Code 39 bar code.
- length of 12 characters.
- contains 129 at the start position.






Modify the data as follows:

- Pad all sends with zeros to length 8.
- send all data up to character X.
- send a space character.


To create an ADF rule for the above example:

1. Swipe up from the bottom of the screen and touch .
2. Touch **Profile0**.
3. Under **Keystroke Output**, touch **Advanced data formatting**.
4. Touch **Enable**.
5. Touch **Rule0**.
6. Touch **Criteria**.
7. Touch **String to check for**.
8. In the **Enter the string to check for** text box, enter 129 and then touch **OK**.
9. Touch **String position**.
10. Change the value to 0.
11. Touch **OK**.
12. Touch **String length**.
13. Change value to 12.
14. Touch **OK**.
15. Touch **Source criteria**.
16. Touch **Barcode input**.
17. Touch **All decoders enabled** to disable all decoders.
18. Touch **Code 39**.
19. Touch  three times.
20. Touch **Actions**.
21. Touch and hold on the **Send remaining rule** until a menu appears.
22. Touch **Delete action**.
23. Touch .
24. Touch **New action**.
25. Select **Pad with zeros**.
26. Touch the **Pad with zeros** rule.
27. Touch **How many**.



28. Change value to 8 and then touch **OK**.
29. Touch .
30. Touch .
31. Touch **New action**.
32. Select **Send up to**.
33. Touch **Send up to** rule.
34. Touch **String**.
35. In the **Enter a string** text box, enter x.
36. Touch **OK**.
37. Touch .
38. Touch .
39. Touch **New action**.
40. Select **Send char**.
41. Touch **Send char** rule.
42. Touch **Character code**.
43. In the **Enter character code** text box, enter 32.
44. Touch **OK**.
45. Touch .

**Figure 112** ADF Sample Screen

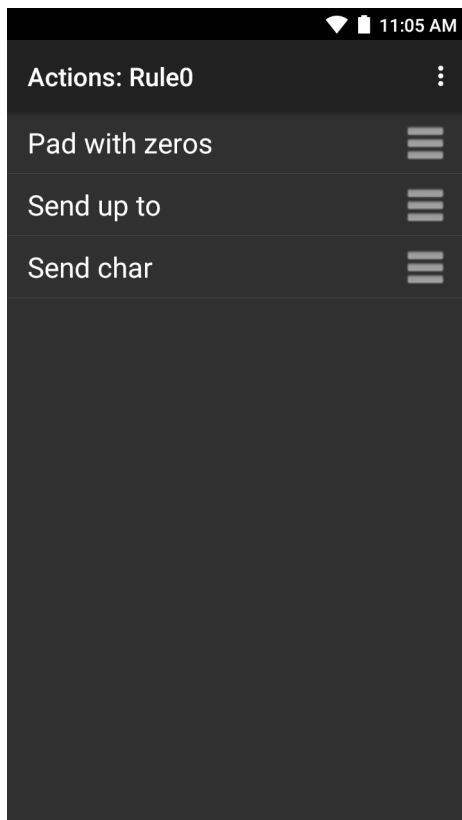

46. Ensure that an application is open on the device and a text field is in focus (text cursor in text field).

47. Aim the exit window at the bar code.

**Figure 113** Sample Bar Code




48. Press and hold the scan key.

The red laser aiming pattern turns on to assist in aiming. Ensure that the bar code is within the area formed by the aiming pattern.

49. The LED lights green, a beep sounds and the device vibrates, by default, to indicate the bar code was decoded successfully. The formatted data 0000129 appears in the text field.


Scanning a Code 39 bar code of 1299X15598 does not transmit data (rule is ignored) because the bar code data did not meet the length criteria.

**Figure 114** Formatted Data

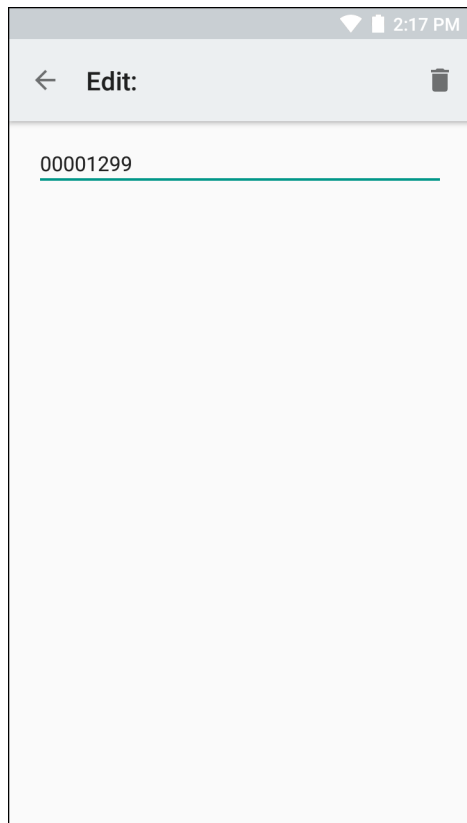



## DataWedge Settings

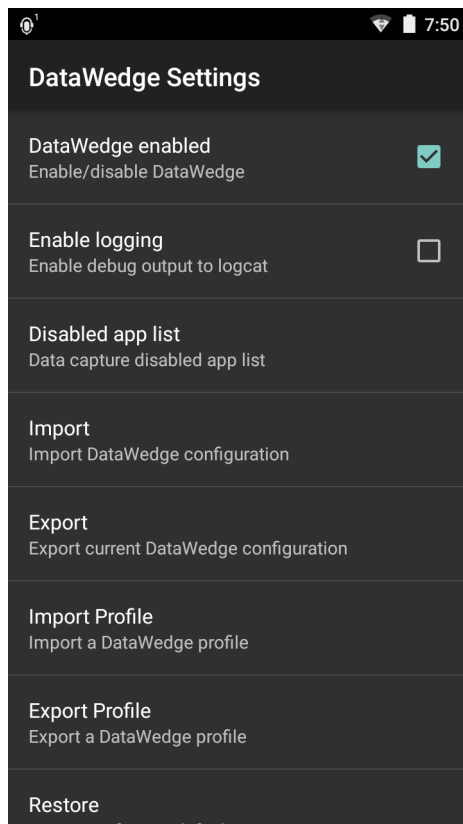The DataWedge Settings screen provides access to general, non-profile related options. Touch **> Settings**.

**Figure 115** DataWedge Settings Window



- **DataWedge enabled** - Enables or disables DataWedge. To disable DataWedge uncheck this option.
- **Enable logging** - Enables or disables DataWedge debug messages in logcat. To enable check this option.
- **Disable app list** - Disables scanning functions for selected applications or activities.
- **Import** - allows import of a DataWedge configuration file. The imported configuration replaces the current configuration.
- **Export** - allows export of the current DataWedge configuration.
- **Import Profile** - allows import of a DataWedge profile file.
- **Export Profile** - allows export of a DataWedge profile.
- **Restore** - return the current configuration back to factory defaults.

## Importing a Configuration File

1. Copy the configuration file to the microSD card `/Android/data/com.symbol.datawedge/files` folder.
2. Swipe up from the bottom of the screen and touch .
3. Touch .
4. Touch **Settings**.
5. Touch **Import**.
6. Touch **filename to import**.

The configuration file (datawedge.db) is imported and replaces the current configuration.



## Exporting a Configuration File

1. Swipe up from the bottom of the screen and touch .
2. Touch .
3. Touch **Settings**.
4. Touch **Export**.
5. In the **Export to** dialog box, select the location to save the file.
6. Touch **Export**. The configuration file (datawedge.db) is saved to the selected location.



## Importing a Profile File



**NOTE:** Do not change the filename of the of the profile file. If the filename is changed, the file will not be imported.

1. Copy the profile file to the On Device Storage `/Android/data/com.symbol.datawedge` folder.
2. Swipe up from the bottom of the screen and touch .
3. Touch .
4. Touch **Settings**.
5. Touch **Import Profile**.
6. Touch the profile file to import.
7. Touch **Import**. The profile file (dwprofile\_x.db, where x = the name of the profile) is imported and appears in the profile list.



## Exporting a Profile

1. Swipe up from the bottom of the screen and touch .
2. Touch .
3. Touch **Settings**.
4. Touch **Export Profile**.
5. Touch the profile to export.
6. Touch **Export**.

The profile file (dwprofile\_x.db, where x = name of the profile) is saved to the root of the TC75 On-device Storage.

## Restoring DataWedge

To restore DataWedge to the factory default configuration:

1. Swipe up from the bottom of the screen and touch .
2. Touch .
3. Touch **Settings**.
4. Touch **Restore**.
5. Touch **Yes**.

## Configuration and Profile File Management

The configuration or profile settings for DataWedge can be saved to a file for distribution to other devices.

After making configuration or profile changes, export the new configuration or profile to the root of the On-device Storage. The configuration file created is automatically named `datawedge.db`. The profile file created is automatically named `dwprofile_x.db`, where `x` is the profile name. The files can then be copied to the On-device Storage of other devices and imported into DataWedge on those devices. Importing a configuration or profile replaces the existing settings.

### Enterprise Folder

Internal storage contains the Enterprise folder (`/enterprise`). The Enterprise folder is persistent and maintains data after an Enterprise reset. After an Enterprise Reset, DataWedge checks folder `/enterprise/device/settings/datawedge/enterprisereset/` for a configuration file, `datawedge.db` or a profile file, `dwprofile_x.db`. If the file is found, it imports the file to replace any existing configuration or profile.



**NOTE:** A Factory Reset deletes all files in the Enterprise folder.

### Auto Import

DataWedge supports remote deployment of a configuration to a device, using tools such as MSP. DataWedge monitors the `/enterprise/device/settings/datawedge/autoimport` folder for the DataWedge configuration file (`datawedge.db`) or a profile file (`dwprofile_x.db`). When DataWedge launches it checks the folder. If a configuration or profile file is found, it imports the file to replace any existing configuration or profile. Once the file has been imported it is deleted from the folder.

While DataWedge is running it receives a notification from the system that a file has been placed into the `/enterprise/device/settings/datawedge/autoimport` folder. When this occurs, DataWedge imports this new configuration or profile, replacing the existing one and delete the file. DataWedge begins using the imported configuration immediately.



**NOTE:** A Factory Reset deletes all files in the Enterprise folder.

It is strongly recommended that the user exits DataWedge before remotely deploying any configuration or profile. It is required that the file permissions are set to 666.

## Programming Notes

The following paragraphs provide specific programming information when using DataWedge.

### Overriding Trigger Key in an Application

To override the trigger key in an application, create a profile for the application that disables the Barcode input. In the application, use standard APIs, such as `onKeyDown()` to listen for the `KEYCODE_BUTTON_L1` and `KEYCODE_BUTTON_R1` presses.




### Capture Data and Taking a Photo in the Same Application

To be able to capture bar code data and take a photo in the same application:

- Create a Datawedge profile pertaining to the picture taking Activity in your application that disables scanning and use standard Android SDK APIs to control the Camera.
- The default Datawedge profile takes care of the scanning in the application. You might want to create another DataWedge profile that caters to any specific scanning needs, associated to your Application's Activity pertaining to scanning.

## Disable DataWedge on Device and Mass Deploy

To disable DataWedge and deploy onto multiple devices:

1. Touch  > .
2. Touch .
3. Touch **Settings**.
4. Unselect the **DataWedge enabled** check box.
5. Export the DataWedge configuration. See [Exporting a Configuration File on page 120](#) for instructions. See [Configuration and Profile File Management on page 121](#) for instructions for using the auto import feature.

## Soft Scan Feature

DataWedge allows a native Android application to programmatically start, stop, or toggle the scan trigger state. The application can issue an Android Broadcast Intent, to control the scanner, without requiring the scan key to be pressed. The active DataWedge profile is required to control all the parameters during a scan operation.

The structure of the broadcast intent that resolves to the soft scan is:

**action:** "com.symbol.emdk.datawedge.api.ACTION\_SOFTSCANTRIGGER"

**extras:** This is a String name/value pair that contains trigger state details.

**name:** "com.symbol.emdk.datawedge.api.EXTRA\_PARAMETER"

**value:** "START\_SCANNING" or "STOP\_SCANNING" or "TOGGLE\_SCANNING"

## Sample

```
Intent sendIntent = new Intent();
sendIntent.setAction("com.symbol.emdk.datawedge.api.ACTION_SOFTSCANTRIGGER");
sendIntent.putExtra("com.symbol.emdk.datawedge.api.EXTRA_PARAMETER",
"TOGGLE_SCANNING");
sendBroadcast(sendIntent);
```

## Scanner Input Plugin

The ScannerInputPlugin API command can be used to enable/disable the scanner plug-in being used by the currently active Profile. Disabling the scanner plug-in effectively disables scanning in that Profile, regardless of whether the Profile is associated or unassociated. Valid only when Barcode Input is enabled in the active Profile.



**NOTE:** Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile.

## Function Prototype

```
Intent i = new Intent();
i.setAction(ACTION);
i.putExtra(EXTRA_DATA, "<parameter>");
```

## Parameters

**action:** String "com.symbol.datawedge.api.ACTION\_SCANNERINPUTPLUGIN"

**extra\_data:** String "com.symbol.datawedge.api.EXTRA\_PARAMETER"

**<parameter>:** The parameter as a string, using either of the following:

- "ENABLE\_PLUGIN" - enables the plug-in
- "DISABLE\_PLUGIN" - disables the plug-in

## Return Values

None.

Error and debug messages will be logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages, e.g.

```
$ adb logcat -s DWAPI
```

Error messages will be logged for invalid actions and parameters.

## Example

```
// define action and data strings
String scannerInputPlugin = "com.symbol.datawedge.api.ACTION_SCANNERINPUTPLUGIN";
String extraData = "com.symbol.datawedge.api.EXTRA_PARAMETER";

public void onResume() {
    // create the intent
    Intent i = new Intent();
    // set the action to perform
    i.setAction(scannerInputPlugin);
    // add additional info
    i.putExtra(extraData, "DISABLE_PLUGIN");
    // send the intent to DataWedge
    context.this.sendBroadcast(i);
}
```

## Comments

This Data Capture API intent allows the scanner plug-in for the current Profile to be enabled or disabled. For example, activity A launches and uses the Data Capture API intent to switch to ProfileA in which the scanner plug-in is enabled, then at some point it uses the Data Capture API to disable the scanner plug-in. Activity B is launched. In DataWedge, ProfileB is associated with activity B. DataWedge switches to ProfileB. When activity A comes back to the foreground, in the `onResume` method, activity A needs to use the Data Capture API intent to switch back to ProfileA, then use the Data Capture API intent again to disable the scanner plug-in, to return back to the state it was in.



**NOTE:** Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile.

The above assumes that ProfileA is not associated with any applications/activities, therefore when focus switches back to activity A, DataWedge will not automatically switch to ProfileA therefore activity A must switch back to ProfileA in its `onResume` method. Because DataWedge will automatically switch Profile when an activity is paused, it is recommended that this API function be called from the `onResume` method of the activity.

## Enumerate Scanners

Use the `enumerateScanners` API command to get a list of scanners available on the device.

### Function Prototype

```
Intent i = new Intent();
i.setAction(ACTION);
```

### Parameters

**action:** String "com.symbol.datawedge.api.ACTION\_ENUMERATESCANNERS"

### Return Values

The enumerated list of scanners will be returned via a broadcast Intent. The broadcast Intent action is "com.symbol.datawedge.api.ACTION\_ENUMERATEDSCANNERLIST" and the list of scanners is returned as a string array (see the example below).

Error and debug messages will be logged to the Android logging system which then can be viewed and filtered by the `logcat` command. You can use `logcat` from an ADB shell to view the log messages, e.g.

```
$ adb logcat -s DWAPI
```

Error messages will be logged for invalid actions and parameters



## Example

```
// first send the intent to enumerate the available scanners on the device
// define action string
String enumerateScanners = "com.symbol.datawedge.api.ACTION_ENUMERATESCANNERS";
// create the intent
Intent i = new Intent();
// set the action to perform
i.setAction(enumerateScanners);
// send the intent to DataWedge
context.this.sendBroadcast(i);

// now we need to be able to receive the enumerate list of available scanners
String enumeratedList = "com.symbol.datawedge.api.ACTION_ENUMERATEDSCANNERLIST";
String KEY_ENUMERATEDSCANNERLIST = "DataWedgeAPI_KEY_ENUMERATEDSCANNERLIST";
// Create a filter for the broadcast intent
IntentFilter filter = new IntentFilter();
filter.addAction(enumeratedList);
registerReceiver(myBroadcastReceiver, filter);

// now we need a broadcast receiver
private BroadcastReceiver myBroadcastReceiver = new BroadcastReceiver() {
    @Override
    public void onReceive(Context context, Intent intent) {
        String action = intent.getAction();
        if (action.equals(enumeratedList)) {
            Bundle b = intent.getExtras();
            String[] scanner_list = b.getStringArray(KEY_ENUMERATEDSCANNERLIST);
        }
    }
};
```

## Comments

The scanner and its parameters are set based on the currently active Profile.

## Set Default Profile

Use the setDefaultProfile API function to set the specified Profile as the default Profile.

## Default Profile Recap

Profile0 is the generic Profile used when there are no user created Profiles associated with an application.

Profile0 can be edited but cannot be associated with an application. That is, DataWedge allows manipulation of plug-in settings for Profile0 but it does not allow assignment of a foreground application. This configuration allows DataWedge to send output data to any foreground application other than applications associated with user-defined Profiles when Profile0 is enabled.

Profile0 can be disabled to allow DataWedge to only send output data to those applications which are associated in user-defined Profiles. For example, create a Profile associating a specific application, disable Profile0 and then scan. DataWedge only sends data to the application specified in the user-created Profile. This adds additional security to DataWedge enabling the sending of data only to specified applications.

## Usage Scenario

A launcher application has a list of apps that a user can launch and that none of the listed apps has an associated DataWedge Profile. Once the user has selected an app, the launcher needs to set the appropriate DataWedge Profile for the selected app. This could be done by using `setDefaultProfile` to set the default Profile to the required Profile. Then when the user launches the selected app, DataWedge auto Profile switching switches to the default Profile (which is now the required Profile for that app).

If, for some reason, the launched app has an associated DataWedge Profile then that will override the set default Profile.

When control is returned to the launcher application, `resetDefaultProfile` can be used to reset the default Profile.

## Function Prototype

```
Intent i = new Intent();
i.setAction(ACTION);
i.putExtra(EXTRA_DATA, "<profile name>");
```

## Parameters

**action:** String "com.symbol.datawedge.api.ACTION\_SETDEFAULTPROFILE"

**extra\_data:** String "com.symbol.datawedge.api.EXTRA\_PROFILENAME"

**<profile name>:** The Profile name to set as the default Profile as a string (case-sensitive).

## Return Values

None.

Error and debug messages will be logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages, e.g.

```
$ adb logcat -s DWAPI
```

Error messages will be logged for invalid actions, parameters and failures (e.g. Profile not found or associated with an application).

## Example

```
// define action and data strings
String setDefaultProfile = "com.symbol.datawedge.api.ACTION_SETDEFAULTPROFILE";
String extraData = "com.symbol.datawedge.api.EXTRA_PROFILENAME";

public void onResume() {
    // create the intent
    Intent i = new Intent();
    // set the action to perform
    i.setAction(setDefaultProfile);
    // add additional info
    i.putExtra(extraData, "myProfile");
    // send the intent to DataWedge
    context.this.sendBroadcast(i);
}
```

## Comments

The API command will have no effect if the specified Profile does not exist or if the specified Profile is already associated with an application. DataWedge will automatically switch Profiles when the activity is paused, so it is recommended that this API function be called from the onResume method of the activity.

Zebra recommends that this Profile be created to cater to all applications/activities that would otherwise default to using Profile0. This will ensure that these applications/activities continue to work with a consistent configuration. For example, let's say that initially Profile0 is the default Profile using the camera as the barcode scanner. Using the Browser application and scanning a barcode with the camera, DataWedge enters the data into the Browser. Now launch an application that changes the default Profile to a Profile using the blockbuster as the barcode scanner. When returning to the Browser application, since it is using the default Profile, scanning will now be via the blockbuster not the camera as previously. To ensure that the Browser continues to use the camera as the barcode scanner a Profile should be created and associated with the Browser that specifies the camera as the barcode scanner.

## Reset Default Profile

Use the resetDefaultProfile API function to reset the default Profile back to Profile0.

### Function Prototype

```
Intent i = new Intent();

i.setAction(ACTION);
i.putExtra(EXTRA_DATA, "<Profile name>");
```

### Parameters

**action:** String "com.symbol.datawedge.api.ACTION\_RESETPROFILE"

**extra\_data:** String "com.symbol.datawedge.api.EXTRA\_PROFILENAME"

**<Profile name>:** The Profile name to set as the default Profile as a string (case-sensitive).

### Return Values

None.

Error and debug messages will be logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages, e.g.

```
$ adb logcat -s DWAPI
```

Error messages will be logged for invalid actions, parameters and failures (e.g. Profile not found or associated with an application).

### Example

```
// define action string
String resetDefaultProfile = "com.symbol.datawedge.api.ACTION_RESETPROFILE";

public void onResume() {
    // create the intent
    Intent i = new Intent();
    // set the action to perform
    i.setAction(resetDefaultProfile);
    context.this.sendBroadcast(i);
}
```

### Comments

None.

## Switch To Profile

Use the SwitchToProfile API action to switch to the specified Profile.

### Profiles Recap

DataWedge is based on Profiles and plug-ins. A Profile contains information on how DataWedge should behave with different applications.

Profile information consists of:

- Associated application
- Input plug-in configurations
- Output plug-in configurations
- Process plug-in configurations

DataWedge includes a default Profile, Profile0, that is created automatically the first time DataWedge runs.

Using Profiles, each application can have a specific DataWedge configuration. For example, each user application can have a Profile which outputs scanned data in the required format when that application comes to the foreground. DataWedge can be configured to process the same set of captured data differently based on the requirements of each application.



**NOTE:** Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile.

### NOTE

A single Profile may be associated with one or many activities/apps, however, given an activity, only one Profile may be associated with it.

### Usage Scenario

An application has two activities. Activity A only requires EAN13 bar codes to be scanned. Activity B only requires MSR card data. Profile B is configured to only scan EAN13 bar codes and is left unassociated. Profile M is configured to only accept MSR input and is left unassociated. When Activity A launches it uses SwitchToProfile to activate Profile B. Similarly, when Activity B launches it uses switchToProfile to activate Profile M.

If another activity/app comes to the foreground, DataWedge auto Profile switching will set the DataWedge Profile accordingly either to the default Profile or to an associated Profile.

When Activity A (or Activity B) comes back to the foreground it will use switchToProfile to reset the Profile back to Profile B (or Profile M).

### Function Prototype

```
Intent i = new Intent();
i.setAction(ACTION);
i.putExtra(EXTRA_DATA, "<profile name>");
```

### Parameters

**action:** String "com.symbol.datawedge.api.ACTION\_SWITCHTOPROFILE"

**extra\_data:** String "com.symbol.datawedge.api.EXTRA\_PROFILENAME"

**<profile name>**: The Profile name to switch to as a string (case-sensitive).

## Return Values

None.

Error and debug messages will be logged to the Android logging system which then can be viewed and filtered by the logcat command. You can use logcat from an ADB shell to view the log messages, e.g.

```
$ adb logcat -s DWAPI
```

Error messages will be logged for invalid actions, parameters and failures (e.g. Profile not found or associated with an application).

## Example

```
// define action and data strings
String switchToProfile = "com.symbol.datawedge.api.ACTION_SWITCHTOPROFILE";
String extraData = "com.symbol.datawedge.api.EXTRA_PROFILENAME";

public void onResume() {
    super.onResume();
    // create the intent
    Intent i = new Intent();
    // set the action to perform
    i.setAction(switchToProfile);
    // add additional info
    i.putExtra(extraData, "myProfile");
    // send the intent to DataWedge
    context.this.sendBroadcast(i);
}
```

## Comments

This API function will have no effect if the specified Profile does not exist or is already associated with an application.

DataWedge has a one-to-one relationship between Profiles and activities; a Profile can be associated only with a single activity. When a Profile is first created, it's not associated with any application, and will not be activated until associated. This makes it possible to create multiple unassociated Profiles.

This API function activates such Profiles.

For example, Profile A is unassociated and Profile B is associated with activity B. If activity A is launched and uses **SwitchToProfile** function to switch to Profile A, then Profile A will be active whenever activity A is in the foreground. When activity B comes to the foreground, DataWedge will automatically switch to Profile B.

When activity A returns to the foreground, the app must use **SwitchToProfile** again to switch back to Profile A. This would be done in the **onResume** method of activity A.



**NOTE:** Use of this API changes only the runtime status of the scanner; it does not make persistent changes to the Profile.

## Notes

Because DataWedge will automatically switch Profile when the activity is paused, Zebra recommends that this API function be called from the onResume method of the activity.

After switching to a Profile, this unassociated Profile does not get assigned to the application/activity and is available to be used in the future with a different app/activity.

For backward compatibility, DataWedge's automatic Profile switching is not affected by the above API commands. This why the commands work only with unassociated Profiles and apps.

DataWedge auto Profile switching works as follows:

Every second...

- Sets newProfileId to the associated Profile ID of the current foreground activity.
- If no associated Profile is found, sets newProfileId to the associated Profile ID of the current foreground app.
- If no associated Profile is found, sets newProfileId to the current default Profile (which MAY NOT be Profile0).
- Checks the newProfileId against the currentProfileId. If they are different:
  - deactivates current Profile
  - activates new Profile (newProfileId)
  - sets currentProfileId = newProfileId

# Settings

---

## Introduction

This chapter describes settings available for configuring the device.

---

## WWAN Configuration


There are some WWAN configuration options that can be configured by the system administrator.

- Default SIM slot
- Network type
- Band preference.

### Default SIM Slot Configuration



The TC75x contains three SIM slots that can be used for installing up to three SIM cards. After installing the SIM cards, the user can select the default SIM card that the device uses.

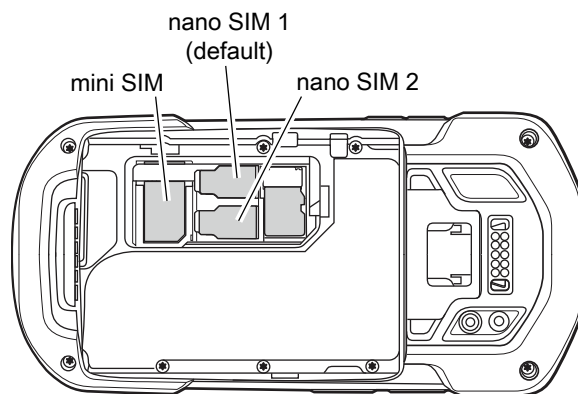**Figure 116** TC75x SIM Slot






A system administrator can update the TC75x to configure the default SIM slot.


To set the default SIM slot:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **About phone**.



3. Touch **SW components**.
4. Touch **WWAN** five times. The message **Turn on SIM Slot UI** appears.
5. Touch .
6. Touch .
7. Touch  **More** > **Cellular networks** > **SIM socket selection**.

**Figure 117** SIM Selection Dialog Box

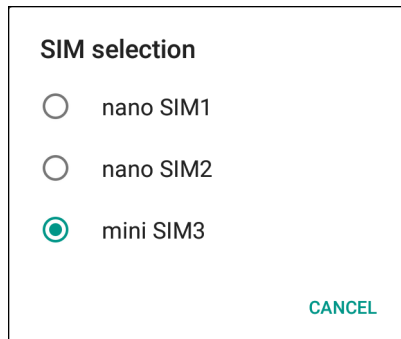



8. Selection the SIM slot to set as default.


## WLAN Configuration


### Configuring a Secure Wi-Fi Network

To set up a Wi-Fi network:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Wi-Fi**.
3. Slide the switch to the **ON** position.
4. The device searches for WLANs in the area and lists them on the screen.
5. Scroll through the list and select the desired WLAN network.
6. Touch the desired network. If the network security is **Open**, the device automatically connects to the network. For all other network security a dialog box appears.

**Figure 118** WLAN WEP Network Security Dialog Box

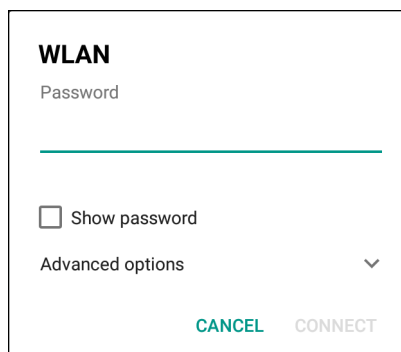

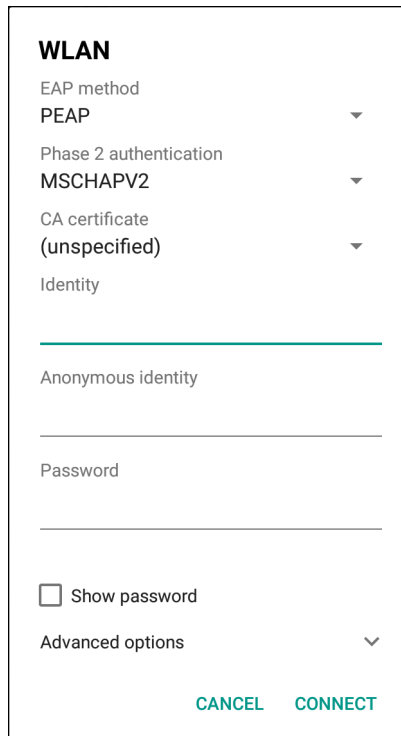**Figure 119** WLAN 802.11 EAP Network Security Dialog Box


The dialog box is titled "WLAN". It contains the following fields and controls:

- EAP method:** A drop-down menu with "PEAP" selected.
- Phase 2 authentication:** A drop-down menu with "MSCHAPV2" selected.
- CA certificate:** A drop-down menu with "(unspecified)" selected.
- Identity:** A text input field.
- Anonymous identity:** A text input field.
- Password:** A text input field.
- Show password:** A checkbox that is currently unchecked.
- Advanced options:** A drop-down menu.
- Buttons:** "CANCEL" and "CONNECT" buttons at the bottom.

7. If the network security is **WEP** or **WPA/WPS2 PSK**, enter the required password and then touch **Connect**.
8. If the network security is 802.1x EAP:
  - Touch the **EAP method** drop-down list and select **PEAP**, **TLS**, **TTLS** or **LEAP**.
  - Touch the **Phase 2 authentication** drop-down list and select an authentication method.
  - If required, touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the **Security** settings.
  - If required, touch **User certificate** and select a user certificate. Note: User certificates are installed using the Location & security settings.
  - If required, in the **Identity** text box, enter the username credentials.
  - If desired, in the **Anonymous identity** text box, enter an anonymous identity username.
  - If required, in the **Password** text box, enter the password for then given identity.






**NOTE:** By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**. See [Configuring for a Proxy Server on page 135](#) for setting connection to a proxy server and see [Configuring the Device to Use a Static IP Address on page 136](#) for setting the device to use a static IP address.

9. Touch **Connect**.
10. Touch .

## Manually Adding a Wi-Fi Network

Manually add a Wi-Fi network if the network does not broadcast its name (SSID) or to add a Wi-Fi network when out of range.

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .

2. Touch  **Wi-Fi**.
  3. Slide the Wi-Fi switch to the **On** position.
  4. Scroll to the bottom of the list and select **Add network**.
  5. In the **Network name** text box, enter the name of the Wi-Fi network.
  6. In the **Security** drop-down list, select the type of security. Options:
    - **None**
    - **WEP**
    - **WPA/WPA2 PSK**
    - **802.1x EAP**.
  7. If the network security is **None**, touch **Save**.
  8. If the network security is **WEP** or **WPA/WPA2 PSK**, enter the required password and then touch **Save**.
  9. If the network security is **802.1x EAP**:
    - Touch the **EAP method** drop-down list and select **PEAP**, **TLS**, **TTLS** or **LEAP**.
    - Touch the **Phase 2 authentication** drop-down list and select an authentication method.
    - If required, touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the **Security** settings.
    - If required, touch **User certificate** and select a user certificate. Note: User certificates are installed using the **Security** settings.
    - If required, in the **Identity** text box, enter the username credentials.
    - If desired, in the **Anonymous** identity text box, enter an anonymous identity username.
    - If required, in the **Password** text box, enter the password for then given identity.
- ✓ **NOTE:** By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**. See [Configuring for a Proxy Server on page 135](#) for setting connection to a proxy server and see [Configuring the Device to Use a Static IP Address on page 136](#) for setting the device to use a static IP address.
10. Touch **Save**. To connect to the saved network, touch and hold on the saved network and select **Connect to network**.
  11. Touch .

## Configuring for a Proxy Server

A proxy server is a server that acts as an intermediary for requests from clients seeking resources from other servers. A client connects to the proxy server, requesting some service, such as a file, connection, web page, or other resource, available from a different server. The proxy server evaluates the request according to its filtering rules. For example, it may filter traffic by IP address or protocol. If the request is validated by the filter, the proxy provides the resource by connecting to the relevant server and requesting the service on behalf of the client.

It is important for enterprise customers to be able to set up secure computing environments within their companies, and proxy configuration is an essential part of doing that. Proxy configuration acts as a security barrier ensuring that the proxy server monitors all traffic between the Internet and the intranet. This is normally an integral part of security enforcement in corporate firewalls within intranets.

1. In the network dialog box, touch a network.
2. Touch **Advanced options**.
3. Touch **Proxy** and select **Manual**.

**Figure 120** Proxy Settings

**WLAN**

Proxy  
Manual

The HTTP proxy is used by the browser but may not be used by the other apps.

Proxy hostname  
proxy.example.com


Proxy port  
8080

Bypass proxy for  
example.com,mycomp.test.com,l

IP settings  
Static

IP address  
192.168.1.128

CANCEL CONNECT

4. In the **Proxy hostname** text box, enter the address of the proxy server.
5. In the **Proxy port** text box, enter the port number for the proxy server.  
When entering proxy addresses the Bypass proxy for field, do not use spaces or carriage returns between addresses.
6. In the **Bypass proxy for** text box, enter addresses for web sites that do not require to go through the proxy server. Use a comma “,” between addresses.
7. Touch **Connect**.
8. Touch .

## Configuring the Device to Use a Static IP Address

By default, the device is configured to use Dynamic Host Configuration Protocol (DHCP) to assign an Internet protocol (IP) address when connecting to a wireless network. To configure the device to connect to a network using a static IP address:

1. In the network dialog box, touch a network.
2. Touch **Advanced options**.
3. Touch **IP settings** and select **Static**.

**Figure 121** Static IP Settings

**WLAN**

IP settings  
Static

IP address  
192.168.1.128


Gateway  
192.168.1.1

Network prefix length  
24

DNS 1  
8.8.8.8

DNS 2  
8.8.4.4


CANCEL CONNECT

4. In the **IP address** text box, enter an IP address for the device.
5. If required, in the **Gateway** text box, enter a gateway address for the device.
6. If required, in the **Network prefix length** text box, enter a the prefix length.
7. If required, in the **DNS 1** text box, enter a Domain Name System (DNS) address.
8. If required, in the **DNS 2** text box, enter a DNS address.
9. Touch **Connect**.
10. Touch .

## Advanced Wi-Fi Settings



**NOTE:** Advanced Wi-Fi settings are for the device not for a specific wireless network.

Use the **Advanced** settings to configure additional Wi-Fi settings. From the **Wi-Fi** screen, touch  > **Advanced** to view the advanced settings.

- **Install Certificates** – Touch to install certificates.
- **Wi-Fi Direct** - Displays a list of devices available for a direct Wi-Fi connection.
- **WPS Push Button** - Touch to connect to a network using Wi-Fi Protected Setup (WPS) push button method.
- **WPS Pin Entry** - Touch to connect to a network using Wi-Fi Protected Setup (WPS) pin entry method.


## Additional Wi-Fi Settings



**NOTE:** Additional Wi-Fi settings are for the device not for a specific wireless network.

Use the **Additional Settings** to configure additional Wi-Fi settings. From the **Wi-Fi** screen, touch **⋮** > **Additional settings** to view the additional Wi-Fi settings.

- **Regulatory**
  - **Country selection** - Displays the acquired country code if 802.11d is enabled else it displays the currently selected country code.
  - **Region code** - Displays the current region code.
- **Band and Channel Selection**
  - **Wi-Fi frequency band** - Use to select the frequency band. Options: **Auto** (default), **5 GHz only** or **2.4 GHz only**.
  - **Available channels (2.4 GHz)** - Use to select specific channels. Touch to display the **Available channels** menu. Select specific channels. Touch **OK**.
  - **Available channels (5 GHz)** - Use to select specific channels. Touch to display the **Available channels** menu. Select specific channels. Touch **OK**.
- **Logging**
  - **Advanced Logging** – Touch to enable advanced logging. Advanced logging
  - **Wireless logs** - Use to capture Wi-Fi log files.
    - **Fusion Logger** - Touch to open the **Fusion Logger** application. This application maintains a history of high level WLAN events which helps to understand the status of connectivity.

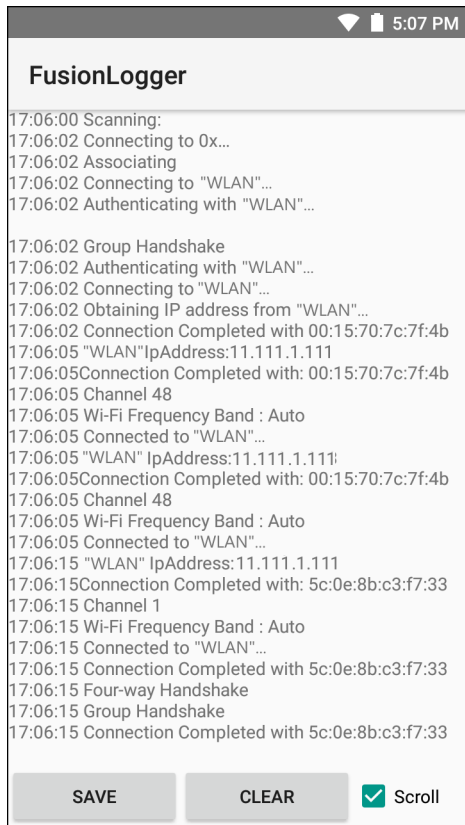**Figure 122** Fusion Logger Screen

- **Fusion Status** - Touch to display live status of WLAN state. Also provides information of device and connected profile.

**Figure 123** Fusion Status Screen



Fusion Status	
SSID	: WLAN
Status	: Connected
MAC Address	: 40:83:de:bb:42:56
AP MAC Address	: 5c:0e:8b:c3:f7:33
Signal Strength	: Excellent
Channel	: 1
RSSI	: -49dBm
Link Speed	: 48Mbps
IP Address	: 11.111.1.111
Gateway	: 11.111.1.111
Netmask	: 255.255.240.0
DNS1	: 11.111.1.111
DNS2	: 11.111.1.111

- **About**
  - **Version** - Displays the current Fusion information.

---

## Screen Unlock Settings

Use the **Security settings** to set preferences for locking the screen.

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Security**.



**NOTE:** Options vary depending upon the application's policy, for example, email.

- **Screen lock** - Touch to configure the device to require a slide, pattern, PIN, or password to unlock the screen.
  - **None** - Disable screen unlock security.
  - **Swipe** - Slide the lock icon to unlock the screen.
  - **Pattern** - Draw a pattern to unlock screen. See Set Screen Unlock Using Pattern for more information.
  - **PIN** - Enter a numeric PIN to unlock screen. See Set Screen Unlock Using PIN for more information.
  - **Password** - Enter a password to unlock screen. See Set Screen Unlock Using Password for more information.



Lock the screen to protect access to data on the device. Some email accounts require locking the screen. The Locking feature functions differently in Single-user versus Multiple-user mode.



When locked, a slide, pattern, PIN or password is required to unlock the device. Press the Power button to lock the screen. The device also locks after a pre-defined time-out.

Press and release the Power button to wake the device. The Lock screen displays.


Slide the screen up to unlock. If the Pattern screen unlock feature is enabled, the Pattern screen appears instead of the Lock screen.

If the PIN or Password screen unlock feature is enabled, enter the PIN or password after unlocking the screen.

## Set Screen Unlock Using PIN

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Security**.
3. Touch **Screen lock**.
4. Touch **PIN**.
5. To require a PIN upon device start up select **Require PIN to start device** or **No thanks** not to require a PIN.

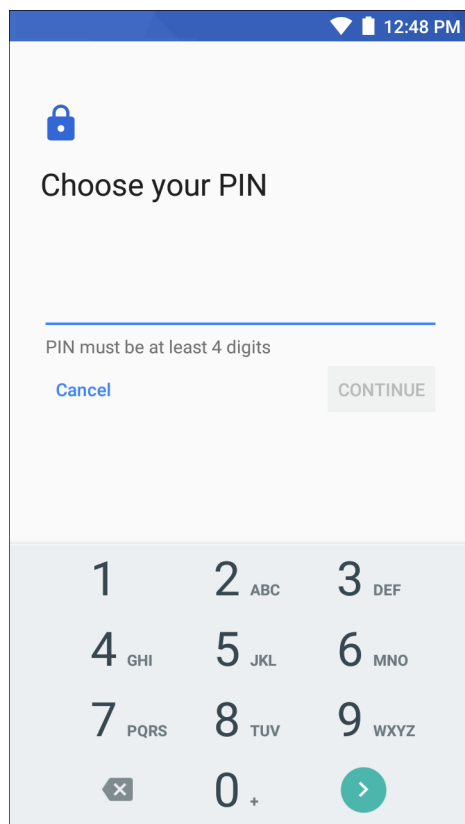

**Figure 124** PIN Screen




6. Touch in the text field.
7. Enter a PIN (4 numbers) then touch **Next**.
8. Re-enter PIN and then touch **Next**.
9. Select the type of notifications that appear when the screen is locked and then touch **Done**.


10. Touch . The next time the device goes into suspend mode a PIN is required upon waking.

## Set Screen Unlock Using Password



1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Security**.
3. Touch **Screen lock**.
4. Touch **Password**.
5. To require a password upon device start up select **Require password to start device** or **No thanks** not to require a PIN.
6. Touch in the text field.

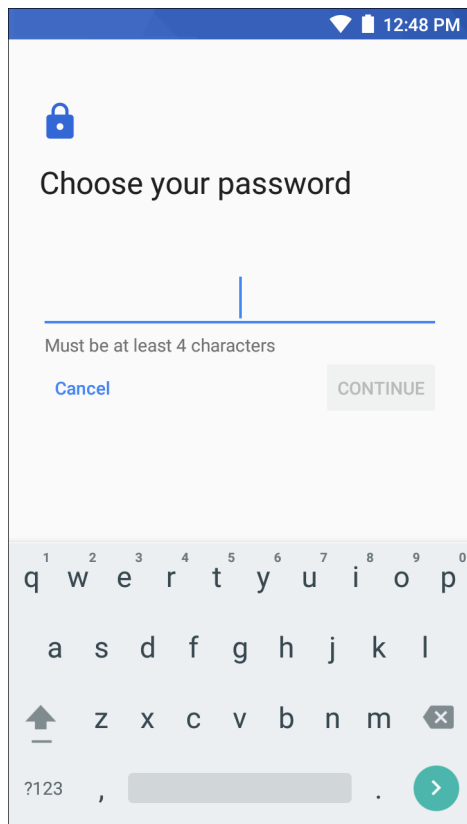**Figure 125** Password Screen




7. Enter a password (between 4 and 16 characters) then touch **Next**.
8. Re-enter the password and then touch **Next**.
9. Select the type of notifications that appear when the screen is locked and then touch **Done**.
10. Touch . The next time the device goes into suspend mode a PIN is required upon waking.

## Set Screen Unlock Using Pattern

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Security**.
3. Touch **Screen lock**.

4. Touch **Pattern**.
5. To require a password upon device start up select **Require password to start device** or **No thanks** not to require a PIN.

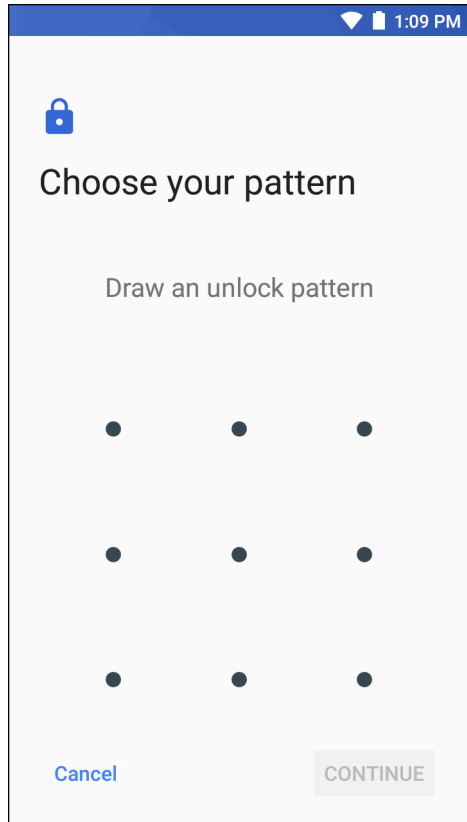

**Figure 126** Choose Your Pattern Screen



6. Draw a pattern connecting at least four dots.
7. Touch **Continue**.
8. Re-draw the pattern.
9. Touch **Confirm**.
10. Select the type of notifications that appear when the screen is locked and then touch **Done**.
11. Touch ☐. The next time the device goes into suspend mode a Pattern is required upon waking.

## Passwords

To set the device to briefly show password characters as the user types:

Swipe down with two fingers from the status bar to open the quick access panel and then touch  >  **Security**. Slide the **Make passwords visible** switch to the ON position.

## Button Remapping



The TC70x/TC75x's buttons can be programmed to perform different functions or shortcuts to installed applications.




**NOTE:** It is not recommended to remap the scan button.

- Scan button
- Volume down button
- Volume up button
- PTT button (top left).

## Remapping a Button

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Key Programmer**.


**Figure 127** Key Programmer Screen

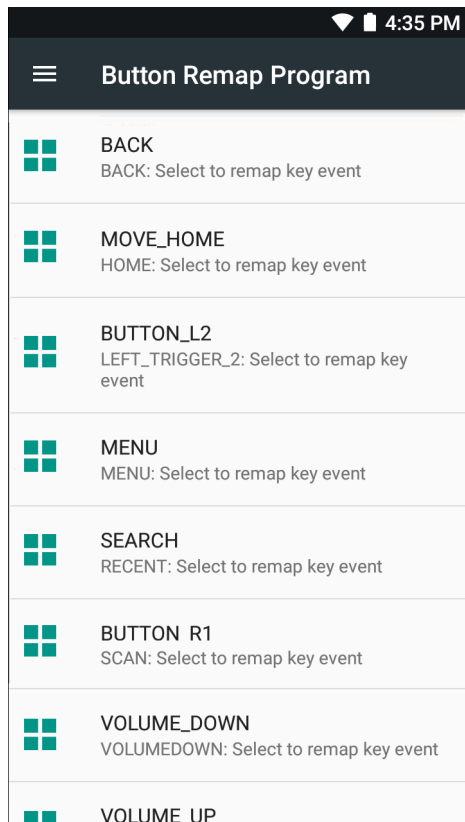


3. Select the button to remap.
4. Touch the **BUTTON REMAPPING** tab or the **SHORTCUT** tab that lists the available functions and applications.
5. Touch a function or application shortcut to map to the button.

✓ **NOTE:** If you select an application shortcut, the application icon appears next to the button on the Key Programmer screen.

Figure 128 Remapped Button

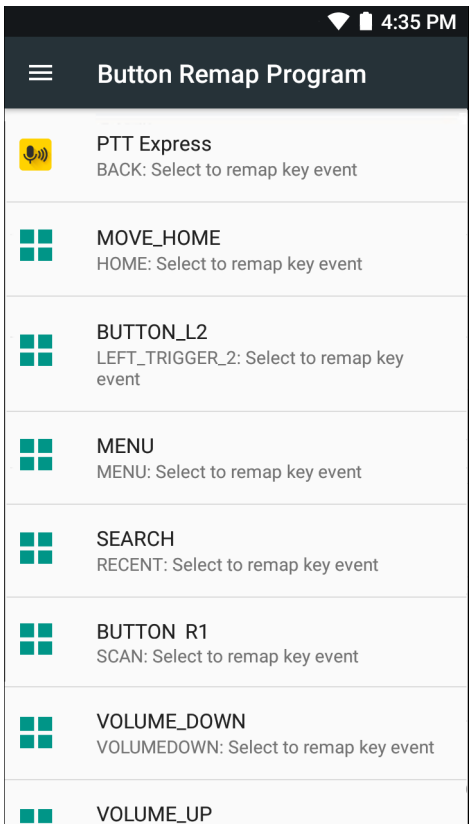

- 6. Touch .
- 7. If remapping the Back, Home, Search, or Menu button, perform a Soft Reset. See [Performing a Soft Reset on page 28](#).

## Accounts



Use the **Accounts** settings to add, remove, and manage accounts. Use these settings to control how applications send, receive, and sync data on their own schedules, and whether applications can synchronize user data automatically.

Applications may also have their own settings to control how they synchronize data; see the documentation for those applications for details.


## Language Usage

Use the **Language & input** settings to change the language that display for the text and including words added to its dictionary.

## Changing the Language Setting

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Language & input**.
3. Touch **Language**, select a language from the list of available languages.  
The operating system text changes to the selected language.

## Adding Words to the Dictionary

1. In the **Language & input** screen, touch **Personal dictionary**.
2. If prompted, select the language that this word or phrase is stored.
3. Touch **+** to add a new word or phrase to the dictionary.
4. Enter the word or phrase.
5. In the **Shortcut** text box, enter a shortcut for the word or phrase.
6. Touch .

---

## Keyboard Settings

Use the **Language & input** settings for configuring the on-screen keyboards. The device contains the following keyboard settings:

- Android Keyboard - Available on TC70x/TC75x with AOSP build.
- Google Keyboard - Available on TC70x/TC75x with GMS build.

---


## PTT Express Configuration

Refer to the PTT Express User Guide at [www.zebra.com/support](http://www.zebra.com/support) for information on configuring the PTT Express Client application.

---

## RxLogger

RxLogger is a comprehensive diagnostic tool that provides application and system metrics. It allows for custom plug-ins to be created and work seamlessly with this tool. RxLogger is used to diagnose device and application issues. Its information tracking includes the following: CPU load, memory load, memory snapshots, battery consumption, power states, wireless logging, cellular logging, TCP dumps, Bluetooth logging, GPS logging, logcat, FTP push/pull, ANR dumps, etc. All logs and files generated are saved onto flash storage on the device (internal or external).

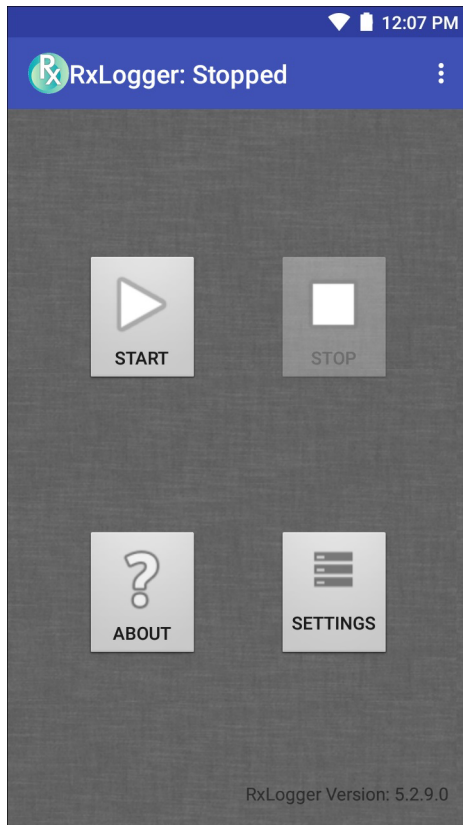**Figure 129** RxLogger

## RxLogger Configuration

RxLogger is built with an extensible plug-in architecture and comes packaged with a number of plug-ins already built-in. The included plug-ins are described below. Touch **Settings** to open the configuration screen.

**Figure 130** RxLogger Configuration Screen

The screenshot shows the RxLogger Configuration Screen. At the top, there is a status bar with a Wi-Fi icon, a battery icon, and the time 9:27 AM. Below the status bar are two buttons: 'SAVE' and 'CANCEL'. The main content is a list of modules, each with a checkbox and a label:

<input type="checkbox"/>	ANRModule
<input type="checkbox"/>	KernelModule
<input type="checkbox"/>	LogcatModule
<input type="checkbox"/>	LTSMModule
<input type="checkbox"/>	QxdmModule
<input type="checkbox"/>	RamoopsModule
<input type="checkbox"/>	ResourceModule
<input type="checkbox"/>	SnapshotModule
<input type="checkbox"/>	TCPDumpModule
<input type="checkbox"/>	TombstoneModule
<input type="checkbox"/>	

## ANR Module

Application Not Responsive (ANR) indicates that a running application's UI thread is not responding for a specified time period. RxLogger is able to detect this condition and trigger a copy of the call stack trace of the unresponsive application into the log directory. The event will also be indicated in the high level CSV log.

- **Enable Module** - Enables logging for this module.
- **Log path** - Specifies the default log path to store the ANR log files.
- **Collect Historic ANRs** -

## Kernal Module

The Kernel Module captures kmsg from the system.

- **Enable Module** - Enables logging for this kernal module.
- **Log path** - Specifies the high level log path for storage of all kernal logs. This setting applies globally to all kernal buffers.
- **Kernal Log filename** - Specifies the base log filename for this kernal buffer. The current file count is appended to this name.
- **Max Kernal log file size** - Specifies the maximum size, in megabytes, of an individual log file.
- **Kernal Log interval** - Sets the interval, in seconds, on which to flush the log buffer to the file.
- **Kernal Log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.



## Logcat Module

Logcat is an essential debugging tool on Android devices. RxLogger provides the ability to record data from all four of the available logcat buffers. The Logcat plug-in has the ability to collect data from multiple logcat buffers provided by the system. Currently these are the main, event, radio, and system buffers. Each of the settings are available for each buffer independently unless otherwise noted.

- **Enable Module** - Enables logging for this module.
- **Log path** - Specifies the high level log path for storage of all logcat logs. This setting applies globally to all logcat buffers.
- **Enable main logcat** - Enables logging for this logcat buffer.
  - **Main Log interval** - Sets the interval, in seconds, on which to flush the log buffer to the file.
  - **Main Log filename** - Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
  - **Main Log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
  - **Main Max log file size** - Specifies the maximum size, in megabytes, of an individual log file.
  - **Main Log Filter** - Custom logcat filter to run on the main buffer.
- **Enable event logcat** - Enables event logging for this logcat buffer.
  - **Event Log interval** - Sets the interval, in milliseconds, on which to flush the log buffer to the file.
  - **Event Log filename** - Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
  - **Event Log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
  - **Event Max log file size** - Specifies the maximum size, in kilobytes, of an individual log file.
  - **Event log filter** - Custom logcat filter to run on the event buffer.
- **Enable radio logcat** - Enables logging for this logcat buffer.
  - **Radio log interval** - Sets the interval, in milliseconds, on which to flush the log buffer to the file.
  - **Radio log filename** - Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
  - **Radio log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
  - **Radio log File size** - Specifies the maximum size, in kilobytes, of an individual log file.
  - **Radio log Filter** - Custom logcat filter to run on the radio buffer.
- **Enable system logcat** - Enables logging for this logcat buffer.
  - **System log interval** - Sets the interval, in milliseconds, on which to flush the log buffer to the file.
  - **System log filename** - Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
  - **System log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
  - **System log file size** - Specifies the maximum size, in kilobytes, of an individual log file.
  - **System log filter** - Custom logcat filter to run on the system buffer.

- **Enable crash logcat** - Enables logging for this crash logcat buffer.
  - **Crash log Interval** - Sets the interval, in milliseconds, on which to flush the log buffer to the file.
  - **Crash log Filename** - Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
  - **Crash log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
  - **Crash log file size** - Specifies the maximum size, in kilobytes, of an individual log file.
  - **Crash log filter** - Custom logcat filter to run on the crash buffer.
- **Enable combined logcat** - Enables logging for this logcat buffer.
  - **Enable main buffer** - Enable or disable the addition of the main buffer into the combined logcat file.
  - **Enable event buffer** - Enable or disable the addition of the event buffer into the combined logcat file.
  - **Enable radio buffer** - Enable or disable the addition of the radio buffer into the combined logcat file.
  - **Enable system buffer** - Enable or disable the addition of the system buffer into the combined logcat file.
  - **Enable crash buffer** - Enable or disable the addition of the crash buffer into the combined logcat file.
  - **Combined log filename** - Specifies the base log filename for this logcat buffer. The current file count is appended to this name.
  - **Combined log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
  - **Combined log file size** - Specifies the maximum size, in kilobytes, of an individual log file.
  - **Combined log filter** - Custom logcat filter to run on the combined buffer.

### LTS Module

The LTS (Long Term Storage) Module captures data over a long duration of time without losing any data. Whenever a file is done being written to, LTS will then GZ the file and save it in an organize path for later use.

- **Enable Module** - Enables logging for this module.
- **Storage Directory** - Specifies the high level log path for storage of all logcat logs. This setting applies globally to all logcat buffers.

### Ramoops Module

Ramoops Module captures last kmsg from the device.

- **Enable Module** - Enables logging for this module.
- **Log path** - Specifies the high level log path for storage of all ramoops logs. This setting applies globally to all ramoops buffers.
- **Base filename** - Specifies the base log filename for this kernel buffer. The current file count is appended to this name.
- **Ramoops file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.

### Resource Module

The Resource Module captures device information on an interval. The data collected contains system statistics to see the health of device over a period of time.

- **Enable Module** - Enables logging for this module.
- **Log path** - Specifies the high level log path for storage of all resource logs. This setting applies globally to all resource buffers.
- **Resource Log interval** - Sets the interval, in seconds, on which to flush the log buffer to the file.
- **Resource Log file size** - Specifies the maximum size, in megabytes, of an individual log file.
- **Resource Log file count** - Specifies the number of log files to keep and rotate through. Each log file is subject to the max log size option.
- **Power** - Enables or disables the collection of Battery statistics.
- **System Resource** - Enables or disables the collection of System Resource information.
- **Network** - Enables or disables the collection of Network status.
- **Bluetooth** - Enables or disables the collection of Bluetooth information.
- **Light** - Enables or disables the collection of ambient light level.

### Snapshot Module

The Snapshot Module collects detailed device statistics on an interval to see detailed device information.

- **Enable Module** - Enables logging for this module.
- **Log path** - Specifies the base path to use to store the snapshot files
- **Log filename** - Specifies the base filename for all the snapshot files. This file number will be appended to this base filename when saving the snapshot.
- **Log interval** - Specifies the interval, in milliseconds, on which to invoke a detailed snapshot.
- **Snapshot file count** - The maximum number of Snapshot files to keep at any one time.
- **Top** - Enables or disables the running of the “top” command for data collection.
- **CPU Info** - Enables detailed per process CPU logging in the snapshot.
- **Memory Info** - Enables logging of detailed per process memory usage in the snapshot.
- **Battery Info** - Enables logging of detailed power information including battery life, on time, charging, and wake locks.
- **Wake Locks** - Enables or disables the collection of the sys/fs wake\_lock information.
- **Time in State** - Enables or disables the collection of the sys/fs cpufreq for each core.
- **Processes** - Enables dumping the complete process list in the snapshot.
- **Threads** - Enables dumping all processes and their threads in the snapshot.
- **Properties** - Enables dumping of all system properties on the device. This includes build/version information as well as state information.
- **Interfaces** - Enables or disables the running of the “netcfg” command for data collection.
- **IP Routing Table** - Enables or disables the collection of the net route for data collection.
- **Connectivity** - Enables or disables the running of the “dumpsys connectivity” command for data collection.
- **Wifi** - Enables or disables the running of the “dumpsys wifi” command for data collection.
- **File systems** - Enables dumping of the available volumes on the file system and the free storage space for each.
- **Usage stats** - Enables dumping of detailed usage information for each package on the device. This includes the number of starts and duration of each run.

## TCPDump Module

The TCPDump Module captures tcp data that happens over the device's networks.

- **Enable Module** - Enables logging for this module.
- **Log path** - Specifies the location to store the TCPDump output log files.
- **Base filename** - Specifies the base filename to use when storing the TCPDump files. The index number of the current log file will be appended to this filename.
- **Tcpdump file size** - Specifies the maximum file size, in megabytes, for each log file created.
- **Tcpdump file count** - Specifies the number of log files to cycle through when storing the network traces.

## Tombstone Module

The Tombstone Module collects tombstone (Linux Native Crashes) logs from the device.



- **Enable Module** - Enables logging for this module.
- **Log path** - Specifies the location to store the Tombstone output log files.
- **Collect Historic tombstones** -

## Configuration File

RxLogger configuration can be set using an XML file. The **config.xml** configuration file is located on the microSD card in the **RxLogger\config** folder. Copy the file from the device to a host computer using a USB connection. Edit the configuration file and then replace the .XML file on the device. There is no need to stop and restart the RxLogger service since the file change is automatically detected.



## Enabling Logging

To enable logging:

1. Swipe the screen up and select .
2. Touch **Start**.
3. Touch .

## Disabling Logging

To disable logging:

1. Swipe the screen up and select .
2. Touch **Stop**.
3. Touch .

## Extracting Log Files

1. Connect the device to a host computer using an USB connection.
2. Using a file explorer, navigate to the **RxLogger** folder.
3. Copy the file from the device to the host computer.
4. Disconnect the device from the host computer.

---


## RxLogger Utility

RxLogger Utility is a data monitoring application for viewing logs in the TC51 while RxLogger is running. The user can access the logs and RxLogger Utility features in the App View or the Overlay View.

### App View


In App View the user views logs in the RxLogger Utility.

**Figure 131** App View

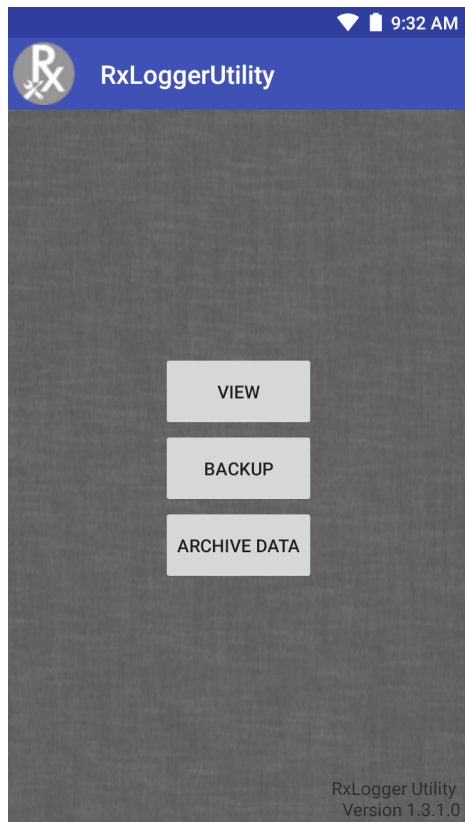

### Viewing Logs


Touch **View**. The **Diagnostic** window appears.

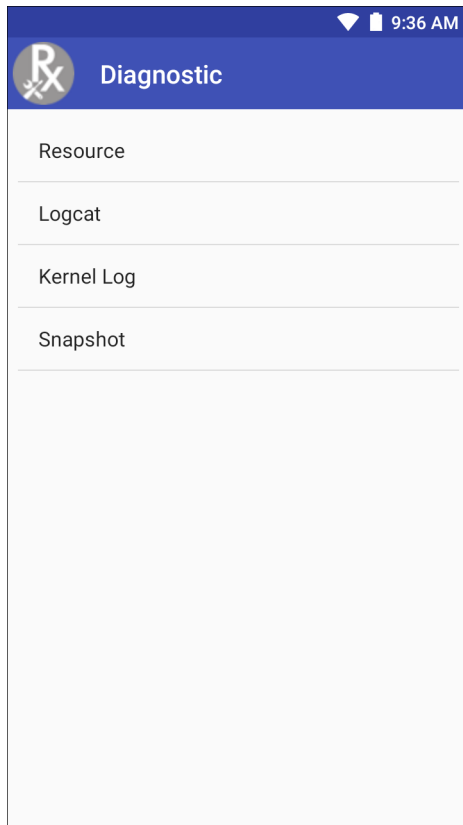**Figure 132** Diagnostic Window

- **Resource** - View all resources.
- **Logcat** - View all the Logcat files. Messages are colored according to flags. Verbose messages is orange text, Assert messages are in brown text, Fail messages are in purple text, Warning messages are in yellow text, information messages are in blue text, debug messages are in green text, and error messages are in red.
- **Kernel Log** - View all the Kernel Logs.
- **Snapshot** - View all the Snapshot.

## Backup

RxLogger Utility allows the user to make a zip file of the **RxLogger** folder in the device, which by default contains all the RxLogger logs stored in the device.

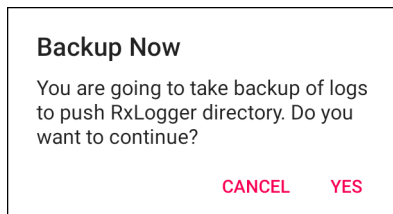
**Figure 133** Backup Message

Touch **Yes** to save the backup data.

## Archiving

The user can view all the RxLogger logs stored in the RxLogger directory by default. These is not for live-viewing logs.

**Figure 134** Archive

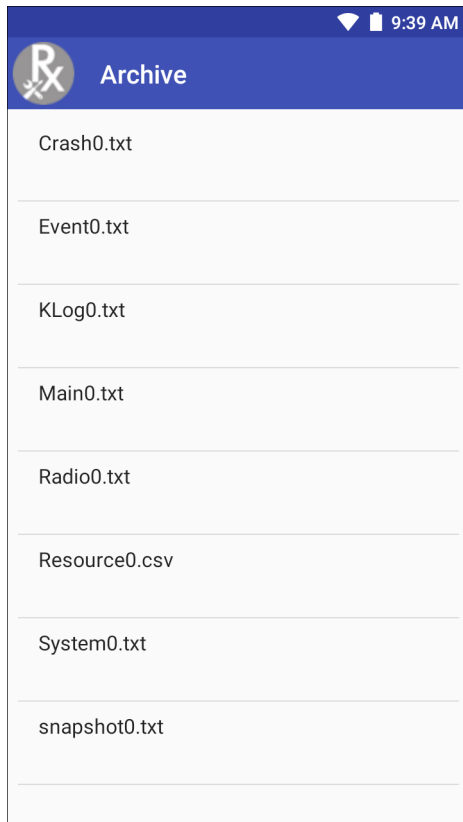

Touch any of the options to view the log files.

## Overlay View

To initiate Overlay view:

1. Open **RxLogger**.
2. Touch **⋮ > Toggle Chat Head**. The Main Chat Head icon appears on the screen.  
The user can drag the Main Chat head icon around the screen. Touch the icon to open the Overlay View.

## Removing the Main Chat Head


To remove the Main Chat Head icon:

1. Touch and drag the icon. A circle with an X appears.
2. Move the icon over the circle and then release.

## Viewing Logs


To view logs:

1. Touch the Main Chat head icon. The In View screen appears.

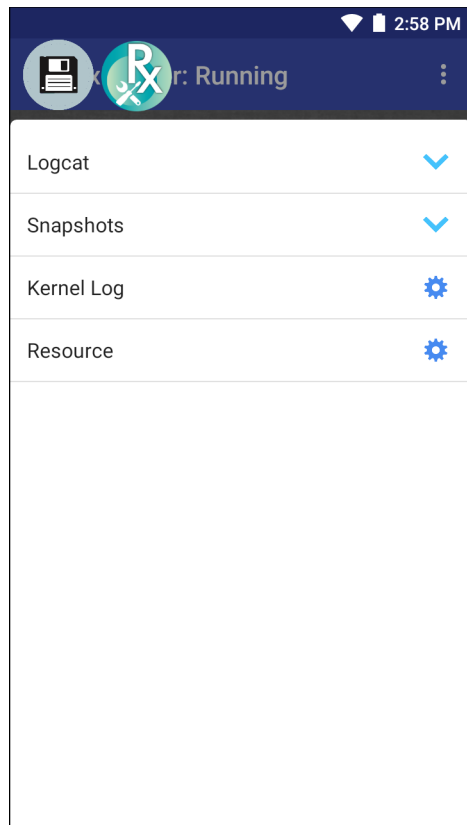**Figure 135** In View Screen

2. Touch a log to open it. The user can open many logs with each displaying a new sub Chat Head.
3. Touch a sub Chat Head to display the log contents. If there are more sub Chat Head icon, scroll left or right to view additional icons.

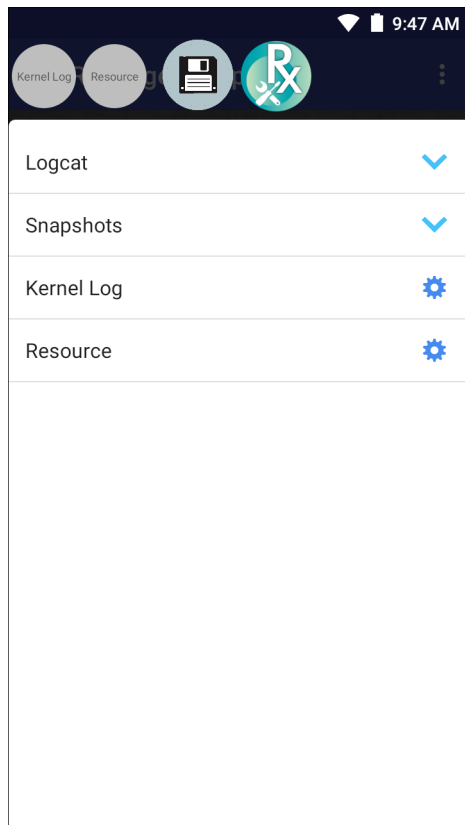

**Figure 136** Log File

## Removing a Sub Chat Head Icon

To remove a sub chat Head icon, press and hold the icon until it disappears.

## Backup

RxLogger Utility allows the user to make a zip file of the **RxLogger** folder in the device, which by default contains all the RxLogger logs stored in the device.

Backup Now icon is always available in the Overlay View.

1. Touch the Backup Now icon. The Backup dialog box appears.
2. Touch **Yes** to create the back up.

---

## About Phone

3. Use About phone settings to view information about the TC75x. Swipe down with two fingers from the status bar to open the quick access panel and then touch > **About phone**.
  - **Status** - Touch to display the following:
    - **Battery status** - Indicates if the battery is charging (on AC power) or discharging (on battery power).
    - **Battery level** - Indicates the battery charge level.
    - **SIM Status** - Touch to display SIM status (TC75x only).
      - **Network** - Indicates the current network carrier.

- **Signal strength** - Indicates the radio signal strength.
- **Cellular network type** - Indicates the mobile network type.
- **Operator info** - Indicates operator information.
- **Service state** - Indicates the state of service.
- **Roaming** - Indicates if the device is roaming outside the network.
- **Cellular network state** - Indicates the mobile network state.
- **IMS Registration State** - Indicates the IP Multimedia Subsystem status.
- **My phone number** - Displays the phone number associated with the device.
- **IMEI Information** - Displays the IMEI information for the device (TC75x only).
  - **IMEI** - Displays the IMEI number for the device.
  - **IMEI SV** - Displays the IMEI SV number for the device.
- **IP address** - Displays the IP address of the device.
- **Wi-Fi MAC address** - Displays the Wi-Fi radio MAC address.
- **Ethernet MAC address** - Displays the Ethernet driver MAC address.
- **Bluetooth address** - Displays the Bluetooth radio Bluetooth address.
- **Serial number** - Displays the serial number of the device.
- **Up time** - Displays the time that the TC75x has been running since being turned on.
- **Battery Information** - Displays information about the battery.
- **SW components** - Lists filenames and versions for various software on the TC75x.
- **Legal information** - Opens a screen to view legal information about the software included on the TC70x/TC75x.
- **Model** - Displays the devices model number.
- **Android version** - Displays the operating system version.
- **Fingerprint** - Defines Device Manufacturer, Model, Android version and Build version together in one location.
- **Android security patch level** - Displays the security patch level date.
- **Baseband version** - Displays WAN radio firmware version (TC75x only).
- **Kernel version** - Displays the kernel version.
- **Device update version** - Displays the patch version if any updates are installed on top of the base build.
- **Build number** - Displays the software build number.

# Application Deployment

---

## Introduction

This chapter describes features in Android including new security features, how to package applications, and procedures for deploying applications onto the device.

---

## Security

The device implements a set of security policies that determine whether an application is allowed to run and, if allowed, with what level of trust. To develop an application, you must know the security configuration of the device, and how to sign an application with the appropriate certificate to allow the application to run (and to run with the needed level of trust).



**NOTE:** Ensure the date is set correctly before installing certificates or when accessing secure web sites.

---

## Secure Certificates

If the VPN or Wi-Fi networks rely on secure certificates, obtain the certificates and store them in the device's secure credential storage, before configuring access to the VPN or Wi-Fi networks.



If downloading the certificates from a web site, set a password for the credential storage. The device supports X.509 certificates saved in PKCS#12 key store files with a .p12 extension (if key store has a .pfx or other extension, change to .p12).

The device also installs any accompanying private key or certificate authority certificates contained in the key store.

---

## Installing a Secure Certificate

To install a secure certificate:

1. Copy the certificate from the host computer to the root of the microSD card. See [USB Communication](#) for information about connecting the device to a host computer and copying files.
2. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
3. Touch  **Security**.

4. Touch **Install from storage**.
5. Navigate to the location of the certificate file.
6. Touch the filename of the certificate to install.
7. If prompted, enter the password for credential storage. If a password has not been set for the credential storage, enter a password for it twice and then touch **OK**.
8. If prompted, enter the certificate's password and touch **OK**.
9. Enter a name for the certificate and in the Credential use drop-down, select **VPN and apps** or **Wi-Fi**.

**Figure 137** Name the Certificate Dialog Box

**Name the certificate**

Certificate name:

Credential use:  
VPN and apps



The package contains:  
one user certificate

CANCEL OK

10. Touch **OK**.

The certificate can now be used when connecting to a secure network. For security, the certificate is deleted from the microSD card.

## Configuring Credential Storage Settings

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Security**.
  - **Trusted credentials** - Touch to display the trusted system and user credentials.
  - **Install from storage** - Touch to install a secure certificate from the microSD card.
  - **Clear credentials** - Deletes all secure certificates and related credentials.

## Development Tools

### Android

Android development tools are available at [developer.android.com](http://developer.android.com).


To start developing applications for the device, download the development SDK and the Eclipse IDE. Development can take place on a Microsoft® Windows®, Mac® OS X®, or Linux® operating system.


Applications are written in the Java language, but compiled and executed in the Dalvik VM (a non-Java virtual machine). Once the Java code is compiled cleanly, the developer tools make sure the application is packaged properly, including the AndroidManifest.xml file.

The development SDK is distributed as a ZIP file that unpacks to a directory on the host computer hard drive. The SDK includes:

- android.jar
  - Java archive file containing all of the development SDK classes necessary to build an application.
- documentation.html and docs directory
  - The SDK documentation is provided locally and on the Web. It's largely in the form of JavaDocs, making it easy to navigate the many packages in the SDK. The documentation also includes a high-level Development Guide and links to the broader community.
- Samples directory
  - The samples subdirectory contains full source code for a variety of applications, including ApiDemo, which exercises many APIs. The sample application is a great place to explore when starting application development.
- Tools directory
  - Contains all of the command-line tools to build applications. The most commonly employed and useful tool is the adb utility.
- usb\_driver
  - Directory containing the necessary drivers to connect the development environment to an enabled device. These files are only required for developers using the Windows platform.

Open the **Developer options** screen to set development related settings.

By default, the Developer Options are hidden. To un-hide the developer options, swipe down with two fingers from the status bar to open the quick access panel and then touch .

Touch . **About device**. Scroll down to **Build number**. Tap **Build number** seven times until **You are now a developer** appears.

Touch    **Developer options**. Slide the switch to the **ON** position to enable developer options.

## EMDK for Android

The EMDK for Android provides developers with a comprehensive set of tools to easily create powerful line of business applications for enterprise mobile computing devices and is designed for use with Google™ Android SDK and Android Studio. The EMDK for Android includes class libraries, sample applications with source code, as well as all of the associated documentation to help your applications take full advantage of what our devices have to offer.

It also includes an exclusive Profile Manager Technology within the your IDE, providing a GUI based development tool. This allows you to write fewer lines of code resulting in reduced development time, effort and errors.

For more information go to: [techdocs.zebra.com](http://techdocs.zebra.com).

## StageNow

StageNow is Zebra's next generation Android Staging Solution, supporting Android Lollipop, KitKat®, and Jelly Bean operating systems and is built on the MX 4.3/4.4/5.x/6.0 platform. It allows simple profile creation, and easy device deployment with a simple bar code scan, tag read, or audio file play.

The StageNow Staging Solution includes the following components:

- The StageNow Workstation Tool offers a user interface that is accessed within a staging workstation (host computer). The staging administrator uses this tool to create staging profiles that configure device components, in addition to other staging actions. The Workstation Tool includes a database and server which store and save content entered in the tool.
- The StageNow Client resides on the device and provides a user interface for the staging operator to initiate staging. The operator uses a staging method, e.g., prints and scans a bar code, plays an audio file, or reads an NFC tag, to deliver staging material to the device.

For more information go to: [techdocs.zebra.com](http://techdocs.zebra.com).

---





## ADB USB Setup


To use the ADB, install the USB driver. This assumes that the development SDK has been installed on the host computer. Go to [developer.android.com/sdk/index.html](http://developer.android.com/sdk/index.html) for details on setting up the development SDK.

ADB driver for Windows and Linux are available on the Zebra Support Central web site at [www.zebra.com/us/en/support-downloads/software/drivers/android-usb-driver.html](http://www.zebra.com/us/en/support-downloads/software/drivers/android-usb-driver.html). Download the ADB and USB Driver Setup package. Following the instructions with the package to install the ADB and USB drivers for Windows and Linux.

## Enabling USB Debugging

By default, USB debugging is disabled. To enable USB debugging:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **About phone**.
3. Scroll down to **Build number**.
4. Tap **Build number** five time. The message **You are now a developer!** appears.
5. Touch .
6. Touch  **Developer options**.
7. Slide the **USB debugging** switch to the **ON** position.

8. Touch **OK**.
9. Connect the device to the host computer using the Rugged Charge/USB Cable.  
The **Allow USB debugging?** dialog box appears on the device.
10. On the device, touch **OK**.
11. On the host computer, navigate to the **platform-tools** folder.
12. Type **adb devices**.  
The following displays:  
**List of devices attached**  
XXXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).
13. Touch .

## Application Installation

After an application is developed, install the application onto the device using one of the following methods:

- USB connection, see [Installing Applications Using the USB Connection on page 163](#).
- Android Debug Bridge, see [Installing Applications Using the Android Debug Bridge on page 165](#).
- microSD Card, see [Installing Applications Using a microSD Card on page 165](#)
- Mobile device management (MDM) platforms that have application provisioning. Refer to the MDM software documentation for details.


## Installing Applications Using the USB Connection



**CAUTION:**When connecting the device to a host computer and mounting its microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

1. Connect the device to a host computer using USB. See [USB Communication](#).
2. Pull down the Notification panel and touch **USB for Charging**.

**Figure 138** Use USB Dialog Box

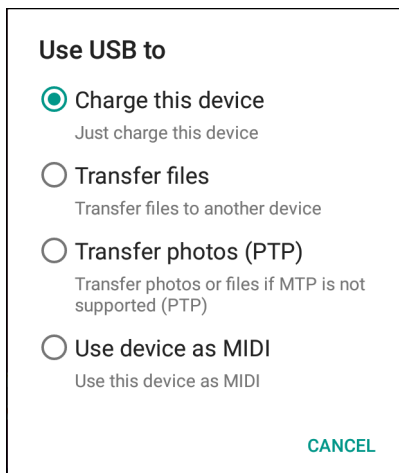





3. Touch **File transfers**.


4. On the host computer, open a file explorer application.
5. On the host computer, copy the application *.apk* file from the host computer to the device.



**CAUTION:** Carefully follow the host computer's instructions to unmount the microSD card and disconnect USB devices correctly to avoid losing information.

6. Disconnect the device from the host computer.
7. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
8. Touch  **Security**.
9. Slide the **Unknown sources** switch to the **ON** position.
10. Touch **OK**.
11. Touch .
12. Swipe the screen up and select  to view files on the microSD card or Internal Storage.
13. Locate the application *.apk* file.
14. Touch the application file to begin the installation process.
15. To confirm installation and accept what the application affects, touch **Install** otherwise touch **Cancel**.

**Figure 139** Accept Installation Screen

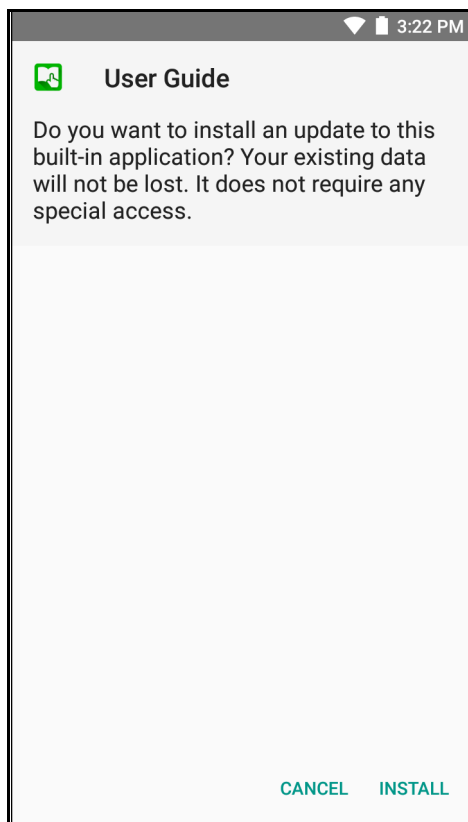

16. Touch **Open** to open the application or **Close** to exit the installation process. The application appears in the App list.





## Installing Applications Using the Android Debug Bridge

Use ADB commands to install application onto the device.



**CAUTION:** When connecting the device to a host computer and mounting its microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.



Ensure that the ADB drivers are installed on the host computer. See [ADB USB Setup on page 162](#).



1. Connect the device to a host computer using USB. See [USB Communication](#).
2. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
3. Touch  **Developer options**.
4. Slide the switch to the **ON** position.
5. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
6. Touch **OK**.
7. On the host computer, open a command prompt window and use the adb command:  
`adb install <application>`  
 where: <application> = the path and filename of the apk file.
8. Disconnect the device from the host computer. See [USB Communication](#).

## Installing Applications Using a microSD Card




**CAUTION:** When connecting the device to a host computer and mounting its microSD card, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

1. Connect the device to a host computer using USB. See [USB Communication](#).
2. Copy the application APK file from the host computer to the microSD card.
3. Remove the microSD card from the host computer.
4. Press and hold the Power button until the menu appears.
5. Touch **Power off**.
6. If hand strap is attached, slide the hand strap clip up toward the top of the device and then lift.
7. Press the two battery latches in.
8. Lift the battery from the device.
9. Lift the access door.
10. Insert the microSD card.
11. Replace the access door.
12. Insert the battery, bottom first, into the battery compartment in the back of the device.
13. Press the battery down until the battery release latch snaps into place.
14. Replace the hand strap, if required.
15. Press and hold the Power button to turn on the device.
16. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
17. Touch  **Security**.

18. Slide the **Unknown sources** switch to the **ON** position.
19. Touch **OK**.
20. Touch .
21. Swipe down with two fingers from the status bar to open the quick access panel and then touch .





**NOTE:** In **File Browser**, the microSD card path is **/storage/sdcard1**.


22. Touch  to view files on the microSD card.
23. Locate the application APK file.
24. Touch the application file to begin the installation process.
25. To confirm installation and accept what the application affects, touch **Install** otherwise touch **Cancel**.
26. Touch **Open** to open the application or **Close** to exit the installation process. The application appears in the App list.

## Uninstalling an Application

To uninstall an application:

1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Apps**.
3. Scroll through the list to the application.

**Figure 140** Downloaded Screen

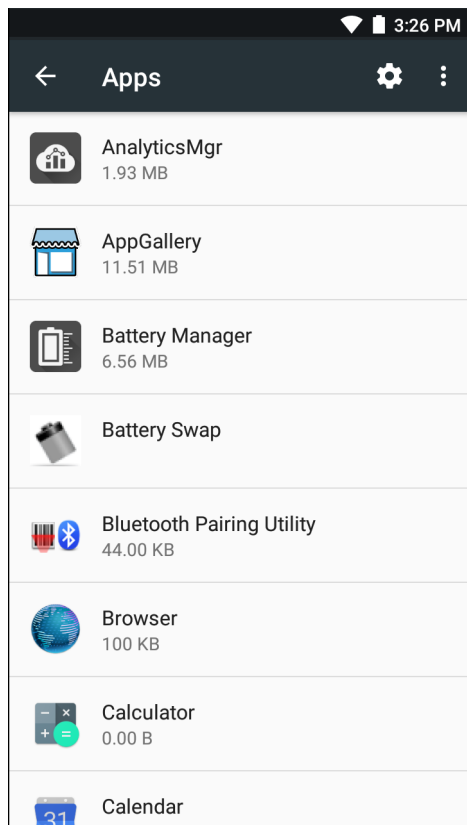

4. Touch the application to uninstall.
5. Touch **Uninstall**.
6. Touch **OK** to confirm.

---

## Performing a System Update

System Update packages can contain either partial or complete updates for the operating system. We distribute the System Update packages on the Zebra Support & Downloads web site. Perform system update using either a microSD card or using ADB.


### Download the System Update Package

Download the system update package:

1. Go to the Zebra Support & Downloads web site, [www.zebra.com/support](http://www.zebra.com/support).
2. Download the appropriate System Update package to a host computer.

### Using microSD Card

1. Copy the System Update zip file to the root of the microSD card.
  - Copy the files to a microSD card using a host computer and then installing the microSD card into the device.
  - Connect the device with a microSD card already installed to the host computer and copy files to the microSD card.
2. Press and hold the Power button until the menu appears.
3. Touch **Reboot**.
4. Touch **OK**. The device resets.
5. Press and hold the PTT button until the device vibrates. The System Recovery screen appears.

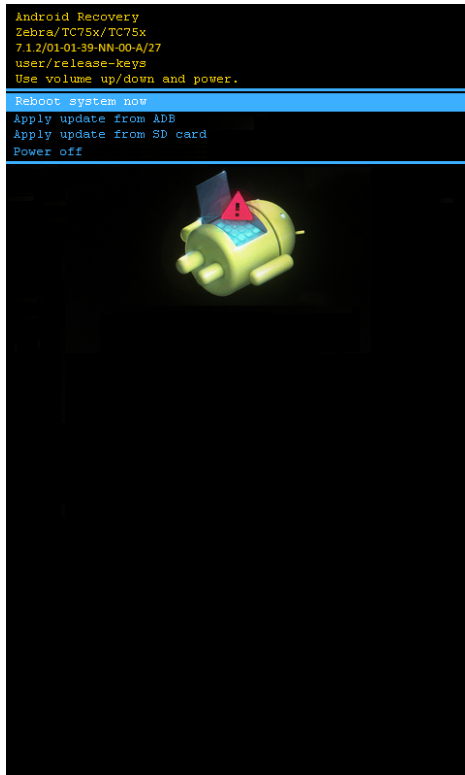**Figure 141** System Recovery Screen


6. Press the Volume Up and Volume Down buttons to navigate to **apply from sdcard**.
7. Press the Power button.
8. Use the Volume Up and Volume Down buttons to navigate to the System Update package file.
9. Press the Power button. The System Update installs and then the device returns to the Recovery screen.
10. Press the Power button to reboot the device.



**NOTE:** If installing GMS software on a device that had Non-GMS software or Non-GMS software on a device that had GMS software, perform a Factory or Enterprise reset (retains enterprise data).

## Using ADB

To update the system using ADB:

1. Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
2. Connect the cable or cradle to the host computer.
3. On the device, swipe down with two fingers from the status bar to open the quick access panel and then touch .
4. Touch **{ } Developer options**.
5. Slide the switch to the ON position.
6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
7. Touch **OK**.
8. On the host computer, open a command prompt window and use the adb command:  
`adb devices`

The following displays:

**List of devices attached**

XXXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).





**NOTE:** If device number does not appear, ensure that ADB drivers are installed properly.

9. Type:  
**adb reboot recovery**
10. Press Enter. The System Recovery screen appears. See [Figure 141 on page 168](#).
11. Press the Volume Up and Volume Down buttons to navigate to **apply from adb**.
12. Press the Power button.
13. On the host computer command prompt window type:  
**adb sideload <file>**  
where: <file> = the path and filename of the zip file.
14. Press Enter. The System Update installs (progress appears as percentage in the Command Prompt window) and then the Recovery screen appears.
15. Press the Power button to reboot the device.

## Verify System Update Installation

To check that the system update installed properly:

1. On the device, swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **About**.
3. Scroll down to **Build number**.
4. Ensure that the build number matches the new system update package file number.

---

## Performing an Enterprise Reset

An Enterprise Reset erases all data in the **/cache** and **/data** partitions and clears all device settings, except those in the **/enterprise** partition.

Before performing an Enterprise Reset, copy all applications and the key remap configuration file that you want to persist after the reset into the **/enterprise/usr/persist** folder.

## Download the Enterprise Reset Package

Download the system update package:

1. Go to the Zebra Support & Downloads web site, [www.zebra.com/support](http://www.zebra.com/support).
2. Download the Enterprise Reset file to a host computer.


## Using microSD Card

1. Copy the Enterprise Reset zip file to the root of the microSD card.

- Copy the zip file to a microSD card using a host computer (see [USB Communication](#) for more information) and then installing the microSD card into the device (see [Replacing the microSD Card on page 27](#) for more information).
  - Connect the device with a microSD card already installed to the host computer and copy zip file to the microSD card. See [USB Communication](#) for more information. Disconnect the device from the host computer.
2. Press and hold the Power button until the menu appears.
  3. Touch **Reboot**.
  4. Touch **OK**. The device resets.
  5. Press and hold the PTT button until the device vibrates. The System Recovery screen appears. See [Figure 141 on page 168](#).
  6. Press the Up and Down Volume buttons to navigate to the **apply update from sdcard**.
  7. Press the Power button.
  8. Press the Up and Down Volume buttons to navigate to the Enterprise Reset Package file.
  9. Press the Power button. The Enterprise Reset occurs and then the device returns to the Recovery screen.
  10. Press the Power button.

## Using ADB

To perform an Enterprise Reset using ADB:

1. Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
2. Connect the cable or cradle to the host computer.
3. On the device, swipe down with two fingers from the status bar to open the quick access panel and then touch .
4. Touch **{ } Developer options**.
5. Slide the switch to the **ON** position.
6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
7. Touch **OK**.
8. On the host computer, open a command prompt window and type:

```
adb devices.
```

The following displays:

```
List of devices attached
```

```
XXXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).
```



**NOTE:** If device number does not appear, ensure that ADB drivers are installed properly.

9. Type:  

```
adb reboot recovery
```
10. Press Enter. The System Recovery screen appears. See [Figure 141 on page 168](#).
11. Press the Volume Up and Volume Down buttons to navigate to **apply from adb**.
12. Press the Power button.
13. On the host computer command prompt window type:

```
adb sideload <file>
```

where: <file> = the path and filename of the zip file.

14. Press Enter. The Enterprise Reset package installs and then the Recovery screen appears.
15. Press the Power button to reboot the device.

## Performing a Factory Reset

A Factory Reset erases all data in the `/cache`, `/data` and `/enterprise` partitions in internal storage and clears all device settings. A Factory Reset returns the device to the last installed operating system image. To revert to a previous operating system version, re-install that operating system image. See [Performing a System Update on page 167](#) for more information.

### Download the Factory Reset Package

Download the Factory Reset package:


1. Go to the Zebra Support & Downloads web site, [www.zebra.com/support](http://www.zebra.com/support).
2. Download the appropriate Factory Reset file to a host computer.

### Using microSD Card

1. Copy the Factory Reset zip file to the root of the microSD card.
  - Copy the zip file to a microSD card using a host computer (see [USB Communication](#) for more information) and then installing the microSD card into the device (see [Replacing the microSD Card on page 27](#) for more information).
  - Connect the device with a microSD card already installed to the host computer and copy zip file to the microSD card. See [USB Communication](#) for more information. Disconnect the device from the host computer.
2. Press and hold the Power button until the menu appears.
3. Touch **Reboot**.
4. Touch **OK**. The device resets.
5. Press and hold the PTT button until the device vibrates. The System Recovery screen appears. See [Figure 141 on page 168](#).
6. Press the Up and Down Volume buttons to navigate to the **apply update from sdcard**.
7. Press the Power button.
8. Press the Up and Down Volume buttons to navigate to the Factory Reset file.
9. Press the Power button. The Factory Reset occurs and then the device returns to the Recovery screen.
10. Press the Power button.

### Using ADB

To perform an Factory Reset using ADB:

1. Connect the device to the Rugged Charge/USB cable or insert the device into the 1-Slot USB/Charge Only Cradle.
2. Connect the cable or cradle to the host computer.
3. On the device, swipe down with two fingers from the status bar to open the quick access panel and then touch .

4. Touch **{ } Developer options**.
5. Slide the switch to the **ON** position.
6. Touch **USB Debugging**. A check appears in the check box. The **Allow USB debugging?** dialog box appears.
7. Touch **OK**.
8. On the host computer, open a command prompt window and use the adb command:  
`adb reboot recovery`
9. Press Enter. The System Recovery screen appears. See [Figure 141 on page 168](#).
10. Press the Volume Up and Volume Down buttons to navigate to **apply from adb**.
11. Press the Power button.
12. On the host computer, open a command prompt window and use the adb command:  
`adb devices`.  
The following displays:  
**List of devices attached**  
XXXXXXXXXXXXXXXX device (where XXXXXXXXXXXXXXXXXXXX is the device number).

✓ **NOTE:** If device number does not appear, ensure that ADB drivers are installed properly.

13. Type:  
`adb reboot recovery`
14. Press Enter. The System Recovery screen appears. See [Figure 141 on page 168](#).
15. Press the Volume Up and Volume Down buttons to navigate to **apply from adb**.
16. Press the Power button.
17. On the host computer command prompt window type:  
`adb sideload <file>`  
where: <file> = the path and filename of the zip file.
18. Press Enter. The Factory Reset package installs and then the Recovery screen appears.
19. Press the Power button to reboot the device.

## Storage



The device contains four types of file storage:

- Random Access Memory (RAM)
- Internal storage
- External storage (microSD card)
- Enterprise folder.


## Random Access Memory

Executing programs use RAM to store data. Data stored in RAM is lost upon a reset. The operating system manages how applications use RAM. It only allows applications and component processes and services to use RAM when required. It may cache recently used processes in RAM, so they restart more quickly when opened again, but it will erase the cache if it needs the RAM for new activities.



To view the amount of free and used memory, touch  >  **Memory**.

**Figure 142** Memory Screen

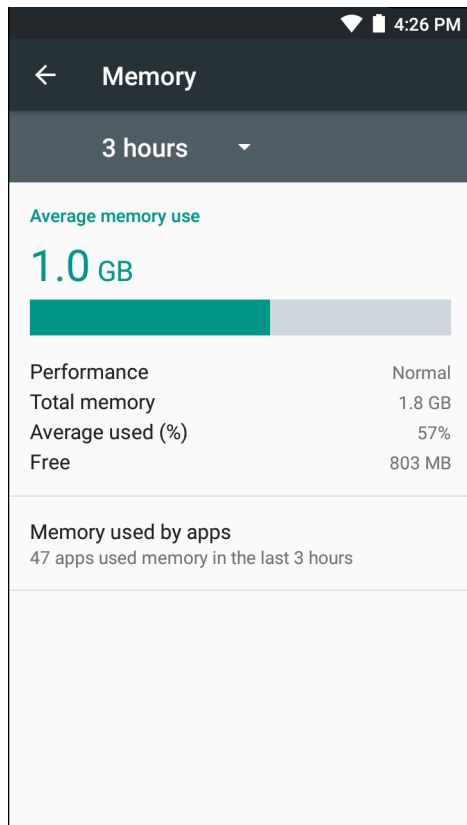



The screen displays the amount of used and free RAM.


## Internal Storage

The device has internal storage. The internal storage content can be viewed and files copied to and from when the device is connected to a host computer. Some applications are designed to be stored on the internal storage rather than in internal memory.

To view the used and available space on the internal storage:


1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Storage**.

**Figure 143** Storage Screen

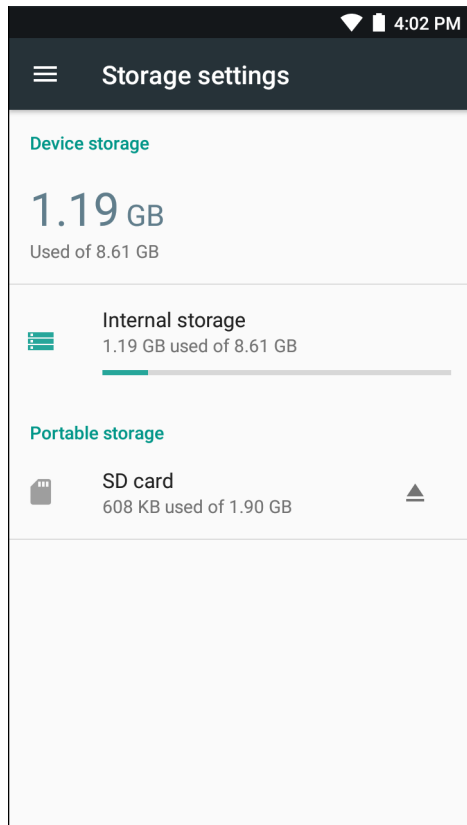



- **Internal Storage** - Displays the total amount of space on internal storage and amount used.

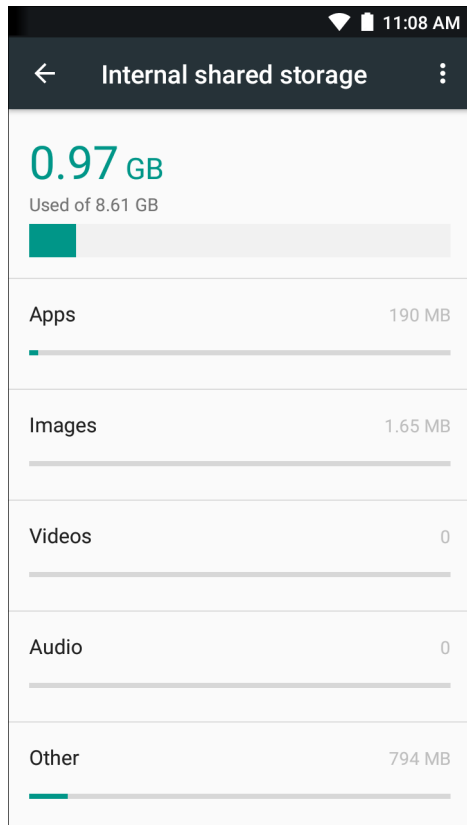
Touch **Internal shared storage** to display a the amount of storage used by apps, photos, videos, audio and other files.

**Figure 144** Internal Storage Screen


## External Storage

The TC75x can have a removable microSD card. The microSD card content can be viewed and files copied to and from when the TC75x is connected to a host computer.


1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Storage**.

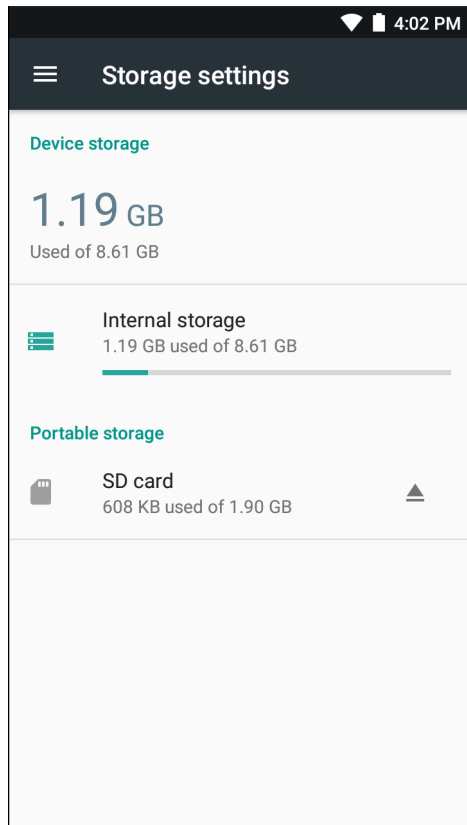**Figure 145** Storage Settings

Portable storage displays the total amount of space on the installed microSD card and the amount used.

To unmount the microSD card, touch .

Touch **SD card** to view the contents of the card.

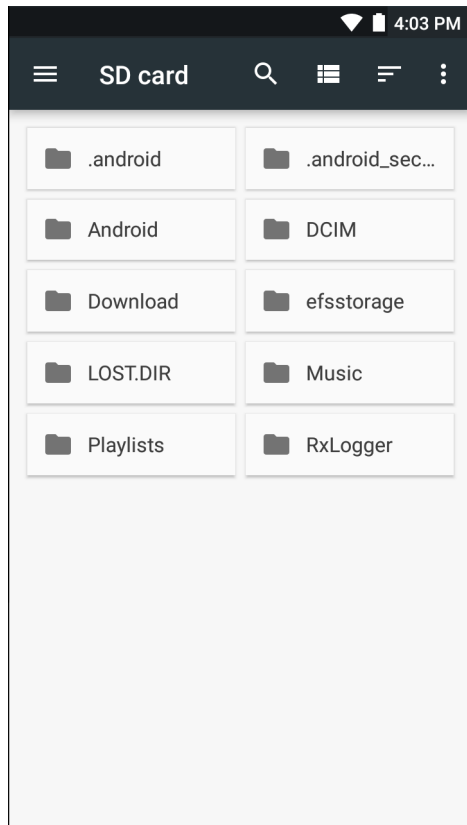
**Figure 146** SD Card Contents List

### Formatting a microSD Card

To format an installed microSD card as portable storage:


1. Touch **SD card**.
2. Touch **⋮** > **Settings**.

**Figure 147** SD Card Settings Screen

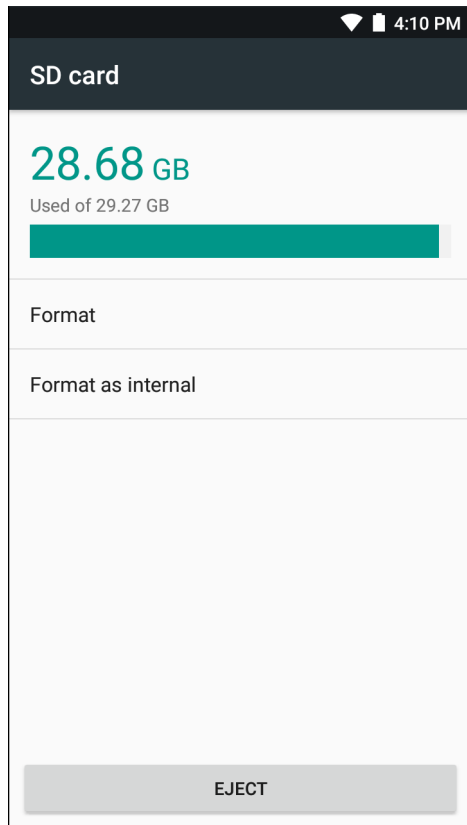

3. Touch **Format**.

**Figure 148** Format Screen

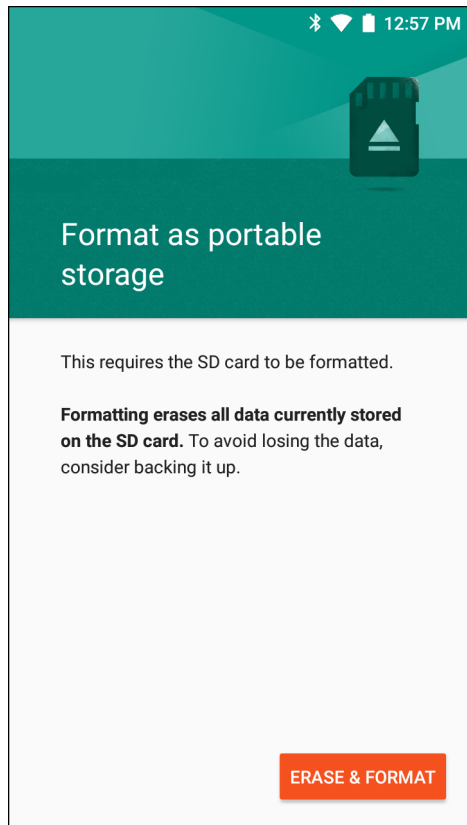


4. Touch **ERASE & FORMAT**.
5. Touch **DONE**.

## Format as Internal Memory

You can format a microSD card as internal memory to increase the actual amount of the device's internal memory. Once formatted, the microSD card can only be read by this device. To format an installed microSD card as internal memory:

1. Touch **SD card**.
2. Touch **⋮ > Settings**.


**Figure 149** SD Card Settings Screen

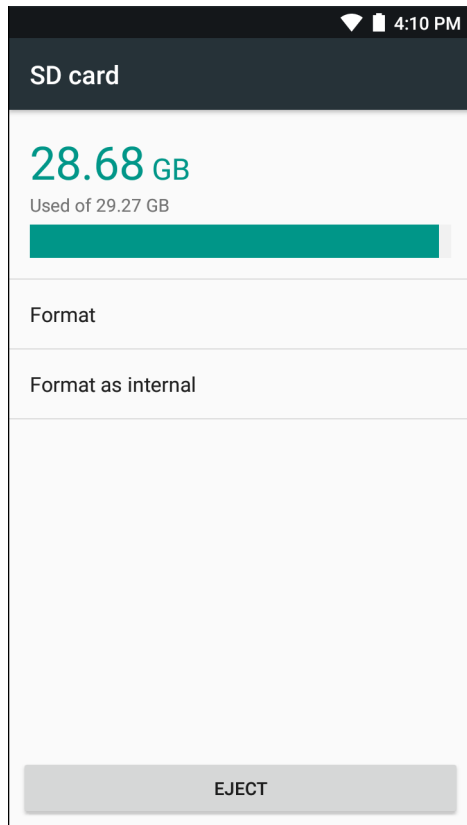

3. Touch **Format as internal**.



**Figure 150** Format Internal Storage Screen

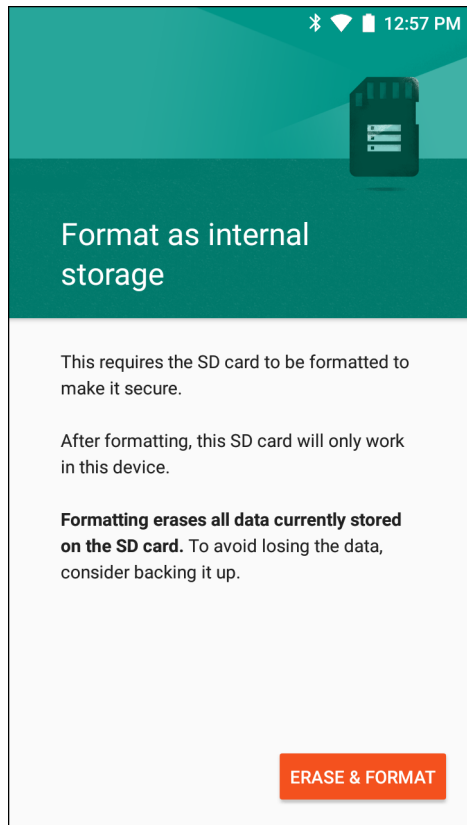

4. Touch **ERASE & FORMAT**.
5. Touch **DONE**.

## Enterprise Folder

The Enterprise folder (within internal flash) is a super-persistent storage that is persistent after a reset and an Enterprise Reset. The Enterprise folder is erased during a Factory Reset. The Enterprise folder is used for deployment and device-unique data. The Enterprise folder is approximately 128 MB (formatted). Applications can persist data after an Enterprise Reset by saving data to the enterprise/user folder. The folder is ext4 formatted and is only accessible from a host computer using ADB or from an MDM.

---

## Application Management

Applications use two kinds of memory: storage memory and RAM. Applications use storage memory for themselves and any files, settings, and other data they use. They also use RAM when they are running.



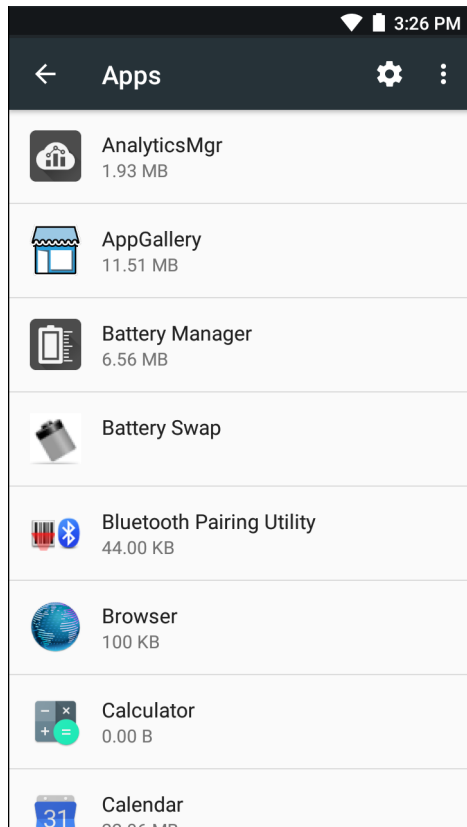
1. Swipe down with two fingers from the status bar to open the quick access panel and then touch .
2. Touch  **Apps**.

Figure 151 Apps Screen



Touch **>** **Show system** to include system processes in the list.

Touch an application, process, or service in the list to open a screen with details about it and, depending on the item, to change its settings, permissions, notifications and to force stop or uninstall it.

## Viewing Application Details



 
Applications have different kinds of information and controls, but commonly include:

- **Disable** - disable an application.
- **Force stop** - stop an application.
- **Uninstall** - remove the application and all of its data and settings from the device. See [Uninstalling an Application on page 166](#) for information about uninstalling applications.
- **Storage** - lists how much information is stored, and includes a button for clearing it.
- **Data usage** - provides information about data (Wifi) consumed by an application.
- **Permissions** - lists the areas on the device that the application has access to.
- **Notifications** - set the application notification settings.
- **Open by default** - clears If you have configured an application to launch certain file types by default, you can clear that setting here.
- **Battery** - lists the amount of computing power used by the application.
- **Memory** - lists the average application memory usage.
- Advanced
  - **Draw over other apps** - allows an application to display on top of other applications.

---

## Managing Downloads

Files and applications downloaded using the Browser or Email are stored on microSD card in the Download directory. Use the Downloads application to view, open, or delete downloaded items.

1. Swipe the screen up and touch .
2. Touch an item to open it.
3. Touch headings for earlier downloads to view them.
4. Touch and hold an item, select items to delete and touch . The item is deleted from storage.
5. Touch  > **By name** or **By date modified** to switch between them.

When an application is opened, the other applications being used do not stop. The operating system and applications work together to ensure that applications not being used do not consume resources unnecessarily, stopping and starting them as needed. For this reason, there's no need to stop applications unless it is not functioning properly.

# Maintenance and Troubleshooting

---

## Introduction

This chapter includes instructions on cleaning and storing the device, and provides troubleshooting solutions for potential problems during operation.

---

## Maintaining the TC70x/TC75x

For trouble-free service, observe the following tips when using the TC70x/TC75x:

- Do not scratch the screen of the TC70x/TC75x. When working with the TC70x/TC75x, use the optional stylus or plastic-tipped pens intended for use with a touch-sensitive screen. Never use an actual pen or pencil or other sharp object on the surface of the TC70x/TC75x screen.
- The touch-sensitive screen of the TC70x/TC75x is glass. Do not drop the TC70x/TC75x or subject it to strong impact.
- Protect the TC70x/TC75x from temperature extremes. Do not leave it on the dashboard of a car on a hot day, and keep it away from heat sources.
- Do not store or use the TC70x/TC75x in any location that is dusty, damp, or wet.
- Use a soft lens cloth to clean the TC70x/TC75x. If the surface of the TC70x/TC75x screen becomes soiled, clean it with a soft cloth moistened with a diluted window-cleaning solution.
- Periodically replace the rechargeable battery to ensure maximum battery life and product performance. Battery life depends on individual usage patterns.

---

## Battery Safety Guidelines

- The area in which the units are charged should be clear of debris and combustible materials or chemicals. Particular care should be taken where the device is charged in a non commercial environment.
- Follow battery usage, storage, and charging guidelines found in this guide.
- Improper battery use may result in a fire, explosion, or other hazard.
- To charge the mobile device battery, the battery and charger temperatures must be between +32 °F and +104 °F (0 °C and +40 °C)
- Do not use incompatible batteries and chargers. Use of an incompatible battery or charger may present a risk of fire, explosion, leakage, or other hazard. If you have any questions about the compatibility of a battery or a charger, contact the Global Customer Support Center.

- For devices that utilize a USB port as a charging source, the device shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- To enable authentication of an approved battery, as required by IEEE1725 clause 10.2.1, all batteries will carry a hologram. Do not fit any battery without checking it has the authentication hologram.
- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
- Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place battery into a microwave oven or dryer.
- Battery usage by children should be supervised.
- Please follow local regulations to properly dispose of used re-chargeable batteries.
- Do not dispose of batteries in fire.
- In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with large amounts of water and seek medical advice.
- If you suspect damage to your equipment or battery, contact the Global Customer Support Center to arrange for inspection.

---

## Cleaning Instructions



**CAUTION:** Always wear eye protection.

Read warning label on compressed air and alcohol product before using.

If you have to use any other solution for medical reasons please contact the Global Customer Support Center for more information.



**WARNING:** Avoid exposing this product to contact with hot oil or other flammable liquids. If such exposure occurs, unplug the device and clean the product immediately in accordance with these guidelines.

## Approved Cleanser Active Ingredients

100% of the active ingredients in any cleaner must consist of one or some combination of the following: isopropyl alcohol, bleach/sodium hypochlorite<sup>1</sup>(see Important note below), hydrogen peroxide or mild dish soap.



**IMPORTANT** Use pre-moistened wipes and do not allow liquid to pool.

<sup>1</sup> When using sodium hypochlorite (bleach) based products always follow the manufacturer's recommended instructions: use gloves during application and remove the residue afterwards with a damp alcohol cloth or a cotton swab to avoid prolonged skin contact while handling the device.

Due to the powerful oxidizing nature of sodium hypochlorite, the metal surfaces on the device are prone to oxidization (corrosion) when exposed to this chemical in the liquid form (including wipes). Avoid allowing any bleach based product to come in contact with the metal electrical contacts on the device, the battery, or the cradle. In the event that these types of disinfectants come in contact with metal on the device, prompt removal with alcohol-dampened cloth or cotton swab after the cleaning step is critical.

### Harmful Ingredients

The following chemicals are known to damage the plastics on the device and should not come in contact with the device: ammonia solutions, compounds of amines or ammonia; acetone; ketones; ethers; aromatic and chlorinated hydrocarbons; aqueous or alcoholic alkaline solutions; ethanolamine; toluene; trichloroethylene; benzene; carbolic acid and TB-lysoform.

### Cleaning Instructions

Do not apply liquid directly to the device. Dampen a soft cloth or use pre-moistened wipes. Do not wrap the device in the cloth or wipe, but gently wipe the unit. Be careful not to let liquid pool around the display window or other places. Allow the unit to air dry before use.

### Special Cleaning Notes

Many vinyl gloves contain phthalate additives, which are often not recommended for medical use and are known to be harmful to the housing of the device. The device should not be handled while wearing vinyl gloves containing phthalates, or before hands are washed to remove contaminant residue after gloves are removed. If products containing any of the harmful ingredients listed above are used prior to handling the device, such as hand sanitizer that contain ethanolamine, hands must be completely dry before handling the device to prevent damage to the plastics.

### Cleaning Materials Required

- Alcohol wipes
- Lens tissue
- Cotton-tipped applicators
- Isopropyl alcohol
- Can of compressed air with a tube.

### Cleaning Frequency

The cleaning frequency is up to the customer's discretion due to the varied environments in which the mobile devices are used. They may be cleaned as frequently as required, but it is advisable to clean the camera window periodically when used in dirty environments to ensure optimum performance.

---

## Cleaning the TC70x/TC75x

### Housing

Using the alcohol wipes, wipe the housing including buttons.

### Display

The display can be wiped down with the alcohol wipes, but care should be taken not to allow any pooling of liquid around the edges of the display. Immediately dry the display with a soft, non-abrasive cloth to prevent streaking.

### Camera and Exit Window

Wipe the camera and exit window periodically with a lens tissue or other material suitable for cleaning optical material such as eyeglasses.

### Connector Cleaning

To clean the connectors:

1. Remove the main battery from mobile computer.
2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
3. Rub the cotton portion of the cotton-tipped applicator back-and-forth across the connector. Do not leave any cotton residue on the connector.
4. Repeat at least three times.
5. Use the cotton-tipped applicator dipped in alcohol to remove any grease and dirt near the connector area.
6. Use a dry cotton-tipped applicator and repeat steps 4 through 6.



**CAUTION:** Do not point nozzle at yourself and others, ensure the nozzle or tube is pointed away from your face.

7. Spray compressed air on the connector area by pointing the tube/nozzle about ½ inch away from the surface.
8. Inspect the area for any grease or dirt, repeat if required.

### Cleaning Cradle Connectors

To clean the connectors on a cradle:

1. Remove the DC power cable from the cradle.
2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
3. Rub the cotton portion of the cotton-tipped applicator along the pins of the connector. Slowly move the applicator back-and-forth from one side of the connector to the other. Do not leave any cotton residue on the connector.
4. All sides of the connector should also be rubbed with the cotton-tipped applicator.



**CAUTION:** Do not point nozzle at yourself and others, ensure the nozzle or tube is pointed away from your face.

5. Spray compressed air in the connector area by pointing the tube/nozzle about ½ inch away from the surface.
6. Remove any lint left by the cotton-tipped applicator.

7. If grease and other dirt can be found on other areas of the cradle, use a lint-free cloth and alcohol to remove.
8. Allow at least 10 to 30 minutes (depending on ambient temperature and humidity) for the alcohol to air dry before applying power to cradle.

If the temperature is low and humidity is high, longer drying time is required. Warm temperature and dry humidity requires less drying time.



## Troubleshooting

### SmartMU




**NOTE:** This section applies to a device with LifeGuard Update 08 or earlier.

On a device with LifeGuard Update 09 or later, refer to the SmartMU Administrator Guide at:  
[www.zebra.com/support](http://www.zebra.com/support).

The SmartMU application provides WLAN network connectivity analysis for troubleshooting connection issues.

**Figure 152** SmartMU Screen

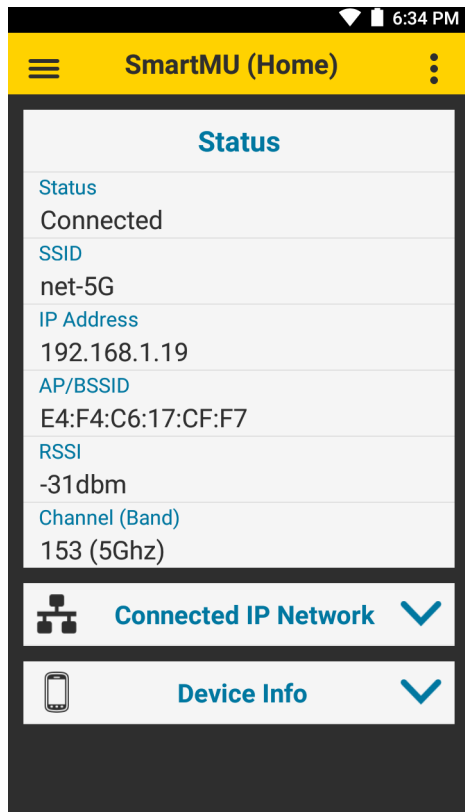

### Camera Preview

When Camera Preview is enabled, a live camera view appears on the screen and remains active while SmartMU is open.

To enable the Camera Preview feature from any screen in SmartMU, touch **⋮ > Camera Preview**. To disable, touch **⋮ > Camera Preview** or touch the X on the top right of the camera view. To move the box, touch and drag anywhere on the screen area.


To capture a screenshot, simultaneously press and hold the power key and the volume down key at the same time. The entire screen, including the SmartMU application and camera preview are saved to the device storage as a PNG file.

## Home Screen

The Home screen displays:

- Status
- Connected IP Network
- Device information.

**Figure 153** Home Screen

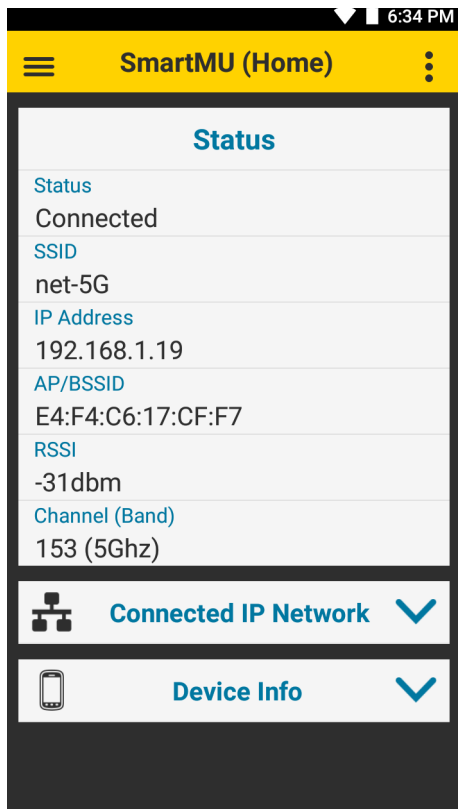

### Status

Displays the current device status.

- **Status** - indicates the current connection status.
- **SSID** - displays the WLAN network the device is connected to.
- **IP Address** - displays the IP address of the device.
- **AP/BSSID** - displays the BSSID of the connected access point.
- **RSSI** - displays the RSSI of the connected access point.
- **Channel (Band)** - displays the channel.

### Connected IP Network

To view details of the connected IP network, touch the down arrow next to **Connect IP Network**. The following IP network information displays:

- **Gateway** - displays the IP address of the network gateway.
- **DHCP Server** - displays the IP address of the DHCP server.

- **Lease Duration** - displays the amount of time the device is allowed to connect to the DHCP server with the current dynamic IP address.
- **Netmask** - displays the server subnet mask address.
- **DNS1** - displays the Domain Name System 1 (DNS1) address.
- **DNS2** - displays the DNS2 address.

### Device Information


To view device information, touch the down arrow next to **Device Info**. The following device information displays:

- **Device Product Name** - displays the device name.
- **Device MAC** - displays the device MAC address.
- **Operating System** - displays the device operating system version.

### Scan List

The Scan List displays a list of available networks (SSIDs) found in the in the immediate vicinity of the device sorted by signal strength.

**Figure 154** Scan List

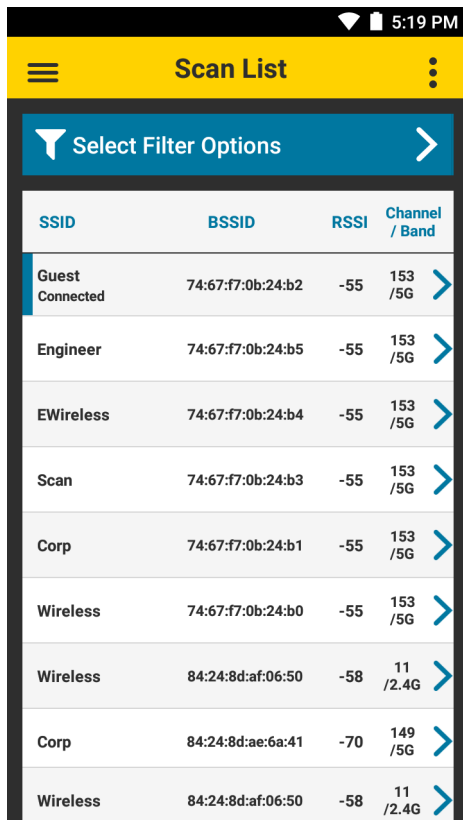

The screenshot shows a mobile application interface titled "Scan List". At the top, there is a yellow header bar with a menu icon on the left and a three-dot menu icon on the right. Below the header is a blue bar with a funnel icon and the text "Select Filter Options" followed by a right-pointing arrow. The main content area displays a table of network scan results. The table has four columns: SSID, BSSID, RSSI, and Channel / Band. Each row represents a detected network, with a blue arrow icon to the right of the Channel / Band column. The first row, "Guest Connected", is highlighted with a blue background.

SSID	BSSID	RSSI	Channel / Band
Guest Connected	74:67:f7:0b:24:b2	-55	153 / 5G
Engineer	74:67:f7:0b:24:b5	-55	153 / 5G
EWireless	74:67:f7:0b:24:b4	-55	153 / 5G
Scan	74:67:f7:0b:24:b3	-55	153 / 5G
Corp	74:67:f7:0b:24:b1	-55	153 / 5G
Wireless	74:67:f7:0b:24:b0	-55	153 / 5G
Wireless	84:24:8d:af:06:50	-58	11 / 2.4G
Corp	84:24:8d:ae:6a:41	-70	149 / 5G
Wireless	84:24:8d:af:06:50	-58	11 / 2.4G

For each network, the following displays:

- **SSID** - displays the primary name associated with an 802.11 wireless local area network (WLAN).
- **BSSID** - displays the MAC address of access point.
- **RSSI** - displays the relative received signal strength in a wireless environment. The higher the RSSI number, the stronger the signal.

- **Channel/Band** - displays the channel and frequency band.

### Filter Options


From the **Scan List** screen, touch Select Filter Options to filter is networks.

- **Modify Filtering Options** - select to filter the Scan List using one of the following options:
  - **All SSID** - display all SSIDs (default)
  - **Connected SSID** - display connected SSIDs.
  - **Filter by SSIDs** - Touch to display a list of SSIDs. Select an SSID to enable or disable view of it in the Scan List.
- **Sort By** - select to sort the Scan List by **Received Signal Strength (RSSI)** (default), or **Channel**.
- **Group by SSID** - select to sort the Scan List by grouping SSIDs with the same name together. SSIDs are listed in alphabetical order.

### Detailed Capabilities for BSSID

From the **Scan List** screen, touch a network to display detailed capabilities for the selected network.

**Figure 155** Detailed Capabilities for BSSID

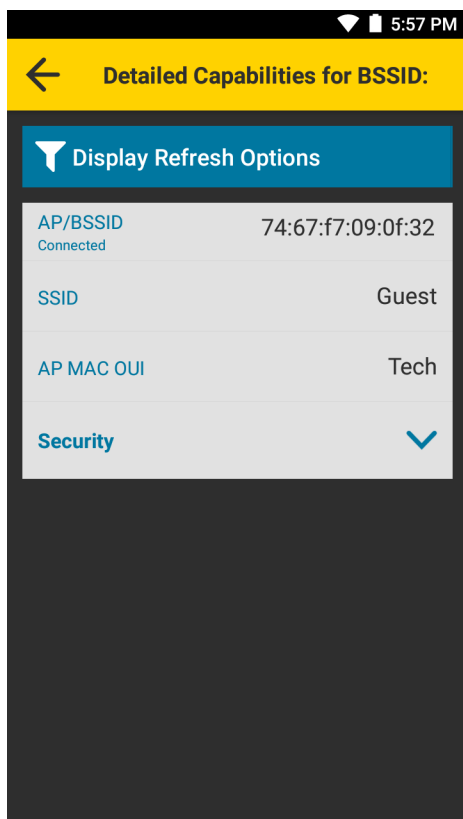

- **AP/BSSID** - displays the BSSID of the connected access point.
- **SSID** - displays the WLAN network the device is connected to.
- **AP MAC OUI** - displays the Organizationally Unique Identifier (OUI).


- **Security** - Touch the down arrow next to **Security** to view security WLAN information.

Use **Display Refresh Options** to automatically refresh the detailed capabilities information. Touch **Display Refresh Options** and use the toggle button to disable or enable automatic refresh.

## Device Coverage View

Device coverage view displays BSSIDs plots of the connected-SSID vs relative time (in seconds).

**Figure 156** Device's Coverage View

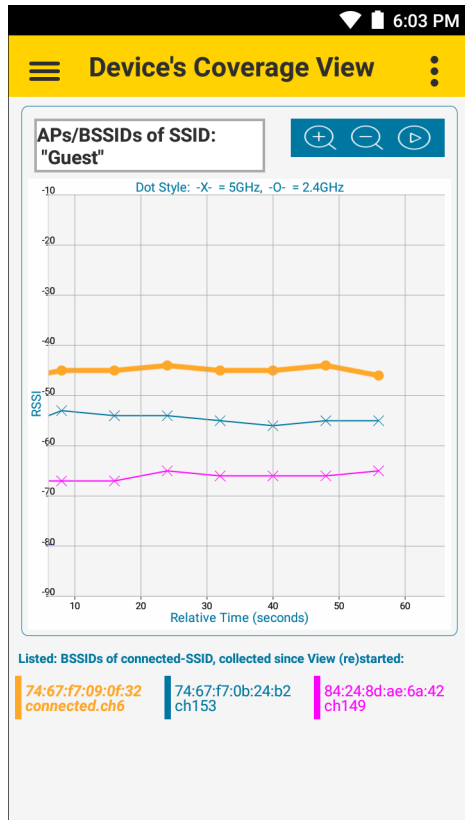


Each line is a connected BSSID. The Dotting marks are the RSSI values from scan samples.

The legend view at the bottom of the screen matches each BSSID to a color and specifies the currently connected BSSID. The BSSID colors also display as vertical bars on the Scan List screen.

Vertical dotted lines designate events which can happen outside of regular scan intervals:

- **VIEW (RE)STARTED** – view started with no actual Connectivity or Roam event involved.
- **ROAMED** – AP hand-off event.
- **DISCONN** – disconnection from SSID.
- **NEW CONN** – connection to SSID

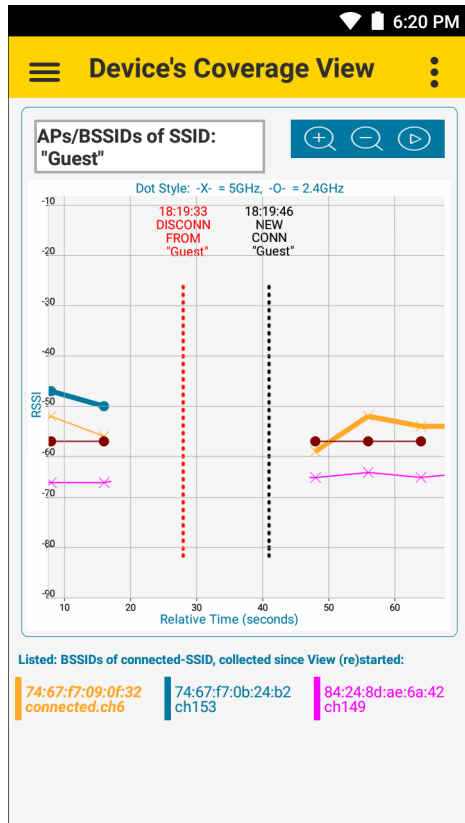**Figure 157** Device's Coverage View Events

To zoom in and out, place two fingers on the screen and pinch them together (to zoom out) or spread them apart (to zoom in), or touch the and icons. Pan in any direction inside the graph by moving a finger on the screen. If Zoom or Pan is used, auto-scroll is paused. Touch icon to enable auto-scroll. Samples are recorded even if not in viewing area.

### Auto Reachability Test


When Auto-Reachability Test is enabled, at fixed intervals after Conn/Roam events, four ICMP packets are sent to the Gateway IP address. Touch > **Auto Reachability Test** and use the toggle button to enable or disable Auto Reachability Test.

### Networking Tools

To view available networking tools, touch the down arrow next to **Networking Tools**.

#### Ping

Ping is a network utility that sends an ICMP ping with configurable input settings for up to two IP addresses or URLs at the same time.

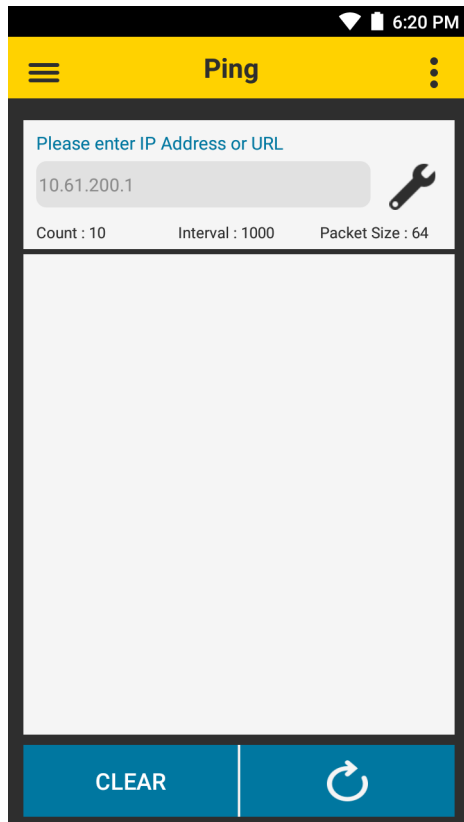**Figure 158** Ping Screen

### Ping Settings

Ping Settings provides options for configuring ping input settings. To configure ping input settings, touch .

- **Continuous ping** - Enable or disable continuous ping (default - disabled).
- **Count** - specifies the number of ping requests to send (default - 10). This option is not available when using continuous ping.
- **Interval (ms)** - specifies the amount of time in ms between ping requests (default - 1000).
- **Packet Size** - specifies the size of each ping packet in bytes (default - 64).



## Fusion Advanced Configuration

Use the Fusion Advanced Configuration screen to select a power save mode or set a band preference.

A password is required to access settings in Fusion Advanced Configuration. In SmartMU full version, use the SmartMU security application and an Mobile Device Manager (MDM) intent. In SmartMU lite, use the default password ?gUpD!8(.

**Figure 159** Fusion Advanced Config Screen




After entering the password, the following options are available:

- Power Save Mode
  - Active (CAM)
  - WMM-PS
  - Null Data PS (NDP) (default)
  - PS Poll
- Band Preference
  - Disable (default)
  - Prefer 2.4 GHz
  - Prefer 5 GHz

About

Displays the applications version number.

Figure 160 About Screen

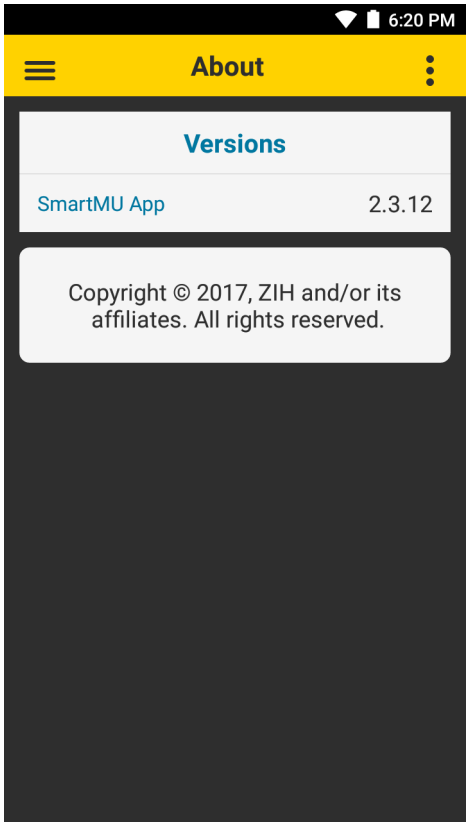

TC70x/TC75x

The following tables provides typical problems that might arise and the solution for correcting the problem.



Table 11 Troubleshooting the TC70x/TC75x

Problem	Cause	Solution
When pressing the power button the TC75x does not turn on.	Battery not charged.	Charge or replace the battery in the TC70x/TC75x.
	Battery not installed properly.	Install the battery properly.
	System crash.	Perform a reset.
When pressing the power button the TC75x does not turn on but two LEDs blink.	Battery charge is at a level where data is maintained but battery should be re-charged.	Charge or replace the battery in the TC70x/TC75x.

**Table 11** Troubleshooting the TC70x/TC75x (Continued)

Problem	Cause	Solution
Battery did not charge.	Battery failed.	Replace battery. If the TC70x/TC75x still does not operate, perform a reset.
	TC75x removed from cradle while battery was charging.	Insert TC70x/TC75x in cradle. The 4,620 mAh battery fully charges in less than five hours at room temperature.
	Extreme battery temperature.	Battery does not charge if ambient temperature is below 0°C (32°F) or above 40°C (104°F).
Cannot see characters on display.	TC70x/TC75x not powered on.	Press the <b>Power</b> button.
During data communication with a host computer, no data transmitted, or transmitted data was incomplete.	TC70x/TC75x removed from cradle or disconnected from host computer during communication.	Replace the TC70x/TC75x in the cradle, or reattach the communication cable and re-transmit.
	Incorrect cable configuration.	See the system administrator.
	Communication software was incorrectly installed or configured.	Perform setup.
During data communication over Wi-Fi, no data transmitted, or transmitted data was incomplete.	Wi-Fi radio is not on.	Turn on the Wi-Fi radio.
	You moved out of range of an access point.	Move closer to an access point.
During data communication over WAN, no data transmitted, or transmitted data was incomplete.	You are in an area of poor cellular service.	Move into an area that has better service.
	APN is not set up correctly.	See system administrator for APN setup information.
	SIM card not installed properly.	Remove and re-install the SIM card.
	Data plan not activated.	Contact your service provider and ensure that your data plan is enable.
During data communication over Bluetooth, no data transmitted, or transmitted data was incomplete.	Bluetooth radio is not on.	Turn on the Bluetooth radio.
	You moved out of range of another Bluetooth device.	Move within 10 meters (32.8 feet) of the other device.
No sound.	Volume setting is low or turned off.	Adjust the volume.

**Table 11** Troubleshooting the TC70x/TC75x (Continued)

Problem	Cause	Solution
TC70x/TC75x shuts off.	TC70x/TC75x is inactive.	The display turns off after a period of inactivity. Set this period to 15 seconds, 30 seconds, 1, 2, 5, 10 or 30 minutes.
	Battery is depleted.	Replace the battery.
Tapping the window buttons or icons does not activate the corresponding feature.	The device is not responding.	Reset the device.
A message appears stating that the TC70x/TC75x memory is full.	Too many files stored on the TC70x/TC75x.	Delete unused memos and records. If necessary, save these records on the host computer (or use an SD card for additional memory).
	Too many applications installed on the TC70x/TC75x.	Remove user-installed applications on the TC70x/TC75x to recover memory. Select  >  <b>Apps</b> > <b>Downloaded</b> . Select the unused program and tap <b>Uninstall</b> .
The TC70x/TC75x does not decode with reading bar code.	Scanning application is not loaded.	Load a scanning application on the TC70x/TC75x or enable DataWedge. See the system administrator.
	Unreadable bar code.	Ensure the symbol is not defaced.
	Distance between exit window and bar code is incorrect.	Place the TC70x/TC75x within proper scanning range.
	TC70x/TC75x is not programmed for the bar code.	Program the TC70x/TC75x to accept the type of bar code being scanned. Refer to the EMDK or DataWedge application.
	TC70x/TC75x is not programmed to generate a beep.	If the TC70x/TC75x does not beep on a good decode, set the application to generate a beep on good decode.
	Battery is low.	If the scanner stops emitting a laser beam upon a trigger press, check the battery level. When the battery is low, the scanner shuts off before the TC70x/TC75x low battery condition notification. Note: If the scanner is still not reading symbols, contact the distributor or the Global Customer Support Center.

**Table 11** Troubleshooting the TC70x/TC75x (Continued)

Problem	Cause	Solution
TC70x/TC75x cannot find any Bluetooth devices nearby.	Too far from other Bluetooth devices.	Move closer to the other Bluetooth device(s), within a range of 10 meters (32.8 feet).
	The Bluetooth device(s) nearby are not turned on.	Turn on the Bluetooth device(s) to find.
	The Bluetooth device(s) are not in discoverable mode.	Set the Bluetooth device(s) to discoverable mode. If needed, refer to the device's user documentation for help.
Cannot unlock TC70x/TC75x.	User enters incorrect password.	If the user enters an incorrect password eight times, the user is requested to enter a code before trying again.  If the user forgot the password, contact system administrator.

## 2-Slot Charge Only Cradle

**Table 12** Troubleshooting the 2-Slot Charge only Cradle



Symptom	Possible Cause	Action
LEDs do not light when TC70x/TC75x or spare battery is inserted.	Cradle is not receiving power.	Ensure the power cable is connected securely to both the cradle and to AC power.
	TC70x/TC75x is not seated firmly in the cradle.	Remove and re-insert the TC70x/TC75x into the cradle, ensuring it is firmly seated.
	Spare battery is not seated firmly in the cradle.	Remove and re-insert the spare battery into the charging slot, ensuring it is firmly seated.
TC70x/TC75x battery is not charging.	TC70x/TC75x was removed from cradle or cradle was unplugged from AC power too soon.	Ensure cradle is receiving power. Ensure TC70x/TC75x is seated correctly. Confirm main battery is charging. The 4,620 mAh battery fully charges in less than five hours.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	The TC70x/TC75x is not fully seated in the cradle.	Remove and re-insert the TC70x/TC75x into the cradle, ensuring it is firmly seated.
	Extreme battery temperature.	Battery does not charge if ambient temperature is below 0 °C (32 °F) or above 40 °C (104 °F).

**Table 12** Troubleshooting the 2-Slot Charge only Cradle (Continued)

Symptom	Possible Cause	Action
Spare battery is not charging.	Battery not fully seated in charging slot.	Remove and re-insert the spare battery in the cradle, ensuring it is firmly seated. The 4,620 mAh battery fully charges in less than five hours.
	Battery inserted incorrectly.	Re-insert the battery so the charging contacts on the battery align with the contacts on the cradle.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.

## 2-Slot USB/Ethernet Cradle

**Table 13** Troubleshooting the 2-Slot USB/Ethernet Cradle



Symptom	Possible Cause	Action
During communication, no data transmits, or transmitted data was incomplete.	TC70x/TC75x removed from cradle during communications.	Replace TC70x/TC75x in cradle and retransmit.
	Incorrect cable configuration.	Ensure that the correct cable configuration.
	TC70x/TC75x has no active connection.	An icon is visible in the status bar if a connection is currently active.
	USB/Ethernet module switch in not in the correct position.	For Ethernet communication, slide the switch to the  position. For USB communication, slide the switch to the  position.
LEDs do not light when TC70x/TC75x or spare battery is inserted.	Cradle is not receiving power.	Ensure the power cable is connected securely to both the cradle and to AC power.
	TC70x/TC75x is not seated firmly in the cradle.	Remove and re-insert the TC70x/TC75x into the cradle, ensuring it is firmly seated.
	Spare battery is not seated firmly in the cradle.	Remove and re-insert the spare battery into the charging slot, ensuring it is firmly seated.
TC70x/TC75x battery is not charging.	TC70x/TC75x was removed from cradle or cradle was unplugged from AC power too soon.	Ensure cradle is receiving power. Ensure TC70x/TC75x is seated correctly. Confirm main battery is charging. The 4,620 mAh battery fully charges in less than five hours.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	The TC70x/TC75x is not fully seated in the cradle.	Remove and re-insert the TC70x/TC75x into the cradle, ensuring it is firmly seated.
	Extreme battery temperature.	Battery does not charge if ambient temperature is below 0 °C (32 °F) or above 40 °C (104 °F).

**Table 13** Troubleshooting the 2-Slot USB/Ethernet Cradle (Continued)

Symptom	Possible Cause	Action
Spare battery is not charging.	Battery not fully seated in charging slot.	Remove and re-insert the spare battery in the cradle, ensuring it is firmly seated. The 4,620 mAh battery fully charges in less than five hours.
	Battery inserted incorrectly.	Re-insert the battery so the charging contacts on the battery align with the contacts on the cradle.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.



## 5-Slot Charge Only Cradle Troubleshooting

**Table 14** Troubleshooting the 5-Slot Charge Only Cradle

Problem	Cause	Solution
Battery is not charging.	TC70x/TC75x removed from the cradle too soon.	Replace the TC70x/TC75x in the cradle. The battery fully charges in approximately five hours.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	TC70x/TC75x is not inserted correctly in the cradle.	Remove the TC70x/TC75x and reinsert it correctly. Verify charging is active. Touch  >  <b>About phone</b> > <b>Status</b> to view battery status.
	Ambient temperature of the cradle is too warm.	Move the cradle to an area where the ambient temperature is between -10 °C (+14 °F) and +60 °C (+140 °F).

## 5-Slot Ethernet Cradle Troubleshooting

**Table 15** Troubleshooting the 5-Slot Ethernet Cradle

Problem	Cause	Solution
During communication, no data transmits, or transmitted data was incomplete.	TC70x/TC75x removed from cradle during communication s.	Replace TC70x/TC75x in cradle and retransmit.
	Incorrect cable configuration.	Ensure that the correct cable configuration.
	TC70x/TC75x has no active connection.	An icon is visible in the status bar if a connection is currently active.
Battery is not charging.	TC70x/TC75x removed from the cradle too soon.	Replace the TC70x/TC75x in the cradle. The battery fully charges in approximately five hours.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	TC70x/TC75x is not inserted correctly in the cradle.	Remove the TC70x/TC75x and reinsert it correctly. Verify charging is active. Touch  >  <b>About phone &gt; Status</b> to view battery status.
	Ambient temperature of the cradle is too warm.	Move the cradle to an area where the ambient temperature is between -10 °C (+14 °F) and +60 °C (+140 °F).

## 4-Slot Battery Charger Troubleshooting

**Table 16** Troubleshooting the 4-Slot Battery Charger

Problem	Cause	Solution
Spare Battery Charging LED does not light when spare battery is inserted.	Spare battery is not correctly seated.	Remove and re-insert the spare battery into the charging slot, ensuring it is correctly seated.



**Table 16** Troubleshooting the 4-Slot Battery Charger (Continued)

Problem	Cause	Solution
Spare Battery not charging.	Charger is not receiving power.	Ensure the power cable is connected securely to both the charger and to AC power.
	Spare battery is not correctly seated.	Remove and re-insert the battery into the battery adapter, ensuring it is correctly seated.
	Battery adapter is not seated properly.	Remove and re-insert the battery adapter into the charger, ensuring it is correctly seated.
	Battery was removed from the charger or charger was unplugged from AC power too soon.	Ensure charger is receiving power. Ensure the spare battery is seated correctly. If a battery is fully depleted, it can take up to five hours to fully recharge a Standard Battery and it can take up to eight hours to fully recharge an Extended Life Battery.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.

# Technical Specifications

---

## Introduction

This chapter provides technical specification for the TC70x/TC75x.

---

## TC70x/TC75x

**Table 17** TC70x/TC75x Technical Specifications

Item	Description
<b>Physical Characteristics</b>	
Dimensions	Height: 161 mm (6.3 in.) Width: 84 mm (3.3 in.) Depth: 28 mm (1.1 in.)
Weight	376 g (13.3 oz)
Display	4.7 in. High Definition (1280 x 720); exceptionally bright image; optically bonded to touch panel with Gorilla Glass™ protection
Touch Panel	Capacitive touch
Backlight	Light Emitting Diode (LED) backlight
Battery Pack	Rechargeable Lithium Ion 3.7V, 4,620 mAh battery
Expansion Slot	User accessible microSD up to 32 GB SDHC and up to 128 GB SDXC support
Connection Interface	Universal Serial Bus (USB) 2.0 High Speed (host and client)
Notification	Audible tone plus multi-color LEDs, vibration
Voice and Audio	Three microphone support with noise cancellation; vibrate alert; speaker; Bluetooth wireless headset support. High quality speaker phone with up to 108 db SPL volume; PTT headset support; Cellular circuit switch voice; HD Voice
<b>Performance Characteristics</b>	
CPU	1.8 GHz hex core 64 bit processor (Snapdragon 650/Android-M)

**Table 17** TC70x/TC75x Technical Specifications (Continued)

Item	Description
Operating System	Android 7.1.2 Nougat
Memory	2 GB RAM/16 GB Flash
Output Power	USB - 5 VDC @ 500 mA max
<b>User Environment</b>	
Operating Temperature	-20°C to 50°C (-4°F to 122°F)
Storage Temperature	-40°C to 70°C (-40°F to 158°F)
Charging Temperature	0° C to 40° C (32°F to 104°F)
Humidity	5 to 95% non-condensing
Drop Specification	8 ft./2.4 m to concrete at room temperature; 6 ft./1.8 m over the operating temperature range
Tumble	2,000 3.2 ft./1.0 m tumbles; meets and exceeds IEC tumble specifications
Electrostatic Discharge (ESD)	+/-15kVdc air discharge, +/-8kVdc direct discharge, +/-8kVdc indirect discharge
Sealing	IP67 per applicable IEC sealing specifications
Vibration	4 g's PK Sine (5 Hz to 2 kHz); 0.04g2/Hz Random (20 Hz to 2 kHz); 60 minute duration per axis, 3 axis
Thermal Shock	-40° C to 70° C (-40° F to 158° F) rapid transition
<b>Interactive Sensor Technology (IST)</b>	
Motion Sensor	3-axis accelerometer provides motion-sensing for dynamic screen orientation and power management
Light Sensor	Ambient light sensor to auto adjust display backlight brightness
<b>Wireless WAN Data and Voice Communications (TC75x only)</b>	
Frequency band	Worldwide: LTE: 700,800/850/900/1800/2100/2600 (FDD 28,20,5,8,3,1,7); UMTS/HSPA/HSPA+: 850/900/1900/2100; GSM/GPRS/EDGE: 850/900/1800/1900 Americas: LTE: 700/850/1900/AWS/2100, (FDD 13,12,17,5,26,2,25,4,1); UMTS/HSPA/HSPA+: 850, 900, AWS, 1900, 2100 GSM/GPRS/EDGE: 850/900/1800/1900; CDMA: 850,1900 (BC0, BC10, BC1)
GPS	Integrated, Autonomous, Assisted GPS (A-GPS), Navstar, GLONASS, Beidou, Galileo
<b>Wireless LAN Data and Voice Communications</b>	
Radio	2x2 MIMO; IEEE® 802.11a/b/g/n/ac/d/h/i/r

**Table 17** TC70x/TC75x Technical Specifications (Continued)

Item	Description
Data Rates Supported	5GHz: 802.11a/n/c - up to 866.7 Mbps 2.4GHz: 802.11b/g/n - up to 144 Mbps
Operating Channels	Chan 1 - 13 (2412 - 2472 MHz), Chan 36 - 165 (5180 - 5825 MHz) Channel Bandwidth: 20, 40, 80 MHz Actual operating channels/frequencies depend on regulatory rules and certification agency
Security	WEP (40 or 104 bit); WPA/WPA2 Personal (TKIP, and AES); WPA/WPA2 Enterprise (TKIP and AES) — EAP-TTLS (PAP, MSCHAP, MSCHAPv2), EAP-TLS, PEAPv0-MSCHAPv2, PEAPv1-EAP-GTC, EAP Fast3 and LEAP
Voice Communications	Wi-Fi Multimedia (WMM), Soft AP, MIMO with 2 Spatial Streams, 256 QAM Modulation on 5G GHz radio; Maximum Ratio Combining (MRC), Tx/Rx Low-Density Parity Check (LDPC), Transmit Beamforming (TxBF) and Beamformee (BFee) capability, Full IEEE 802.11 a/b/g/n legacy compatibility
<b>Wireless PAN Data and Voice Communications</b>	
Bluetooth	Bluetooth v4.1 Low Energy
<b>Data Capture Specifications</b>	
2D Imager	SE4750-SR – 1D and 2D bar codes.
Camera	<b>Rear:</b> 13 Mega pixel auto focus with flash <b>Front:</b> 1.3 Mega pixel fixed focus
Near Field Communications (NFC)	ISO 14443 Type A and B, FeliCa, and ISO 15963 cards. P2P mode and Card Emulation via UICC and Host.
<b>Communication and Messaging</b>	
Workforce Connect PTT Express (included) provides instant push-to-talk (PTT) small group communications across Wi-Fi networks. Workforce Connect PTT Pro (supported) provides a scalable network agnostic push-to-talk solution which also includes messaging, location services and two-way radio integration. Workforce Connect Voice client (supported) enables the TC70x/TC75x to function as a full featured mobile telephone with multi-line capability across Wi-Fi networks.	
<b>2D Imager Engine (SE4750-SR) Specifications</b>	
Field of View	Horizontal - 48.0° Vertical - 36.7°
Image Resolution	1280 horizontal X 960 vertical pixels
Roll	360°
Pitch Angle	+/- 60° from normal
Skew Tolerance	+/- 60° from normal
Ambient Light	Sunlight: 10,000 ft. candles (107,639 lux)
Focal Distance	From front of engine: 17.7 cm (7.0 in.)

**Table 17** TC70x/TC75x Technical Specifications (Continued)

Item	Description
Laser Aiming Element	Visible Laser Diode (VLD): 655 nm +/- 10 nm Central Dot Optical Power: 0.6 mW (typical) Pattern Angle: 48.0° horizontal, 38.0° vertical
Illumination System	LEDs: Warm white LED Pattern Angle: 80° at 505 intensity

**Table 18** Data Capture Supported Symbologies

Item	Description
1D Bar Codes	Code 128, EAN-8, EAN-13, GS1 DataBar Expanded, GS1 128, GS1 DataBar Coupon, UPCA, Interleaved 2 of 5, UPC Coupon Code
2D Bar Codes	PDF-417, QR Code

## SE4750-SR Decode Distances

The table below lists the typical distances for selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol.


**Table 19** SE4750-SR Decode Distances

Symbol Density/ Bar Code Type	Typical Working Ranges	
	Near	Far
3 mil Code 39	4.1 in. 10.41 cm	4.9 in. 12.45 cm
5.0 mil Code 128	3.5 in. 8.89 cm	6.8 in. 17.27 cm
5 mil PDF417	4.4 in. 11.18 cm	6.3 in. 16.00 cm
6.67 mil PDF417	3.2 in. 8.13 cm	8.1 in. 20.57 cm
10 mil Data Matrix	3.3 in. 8.38 cm	8.5 in. 21.59 cm
100% UPCA	2.0 in. 5.08 cm	18.0 in. 45.72 cm
15 mil Code 128	2.6 in. 6.06 cm	19.8 in. 50.29 cm

**Table 19** SE4750-SR Decode Distances

Symbol Density/ Bar Code Type	Typical Working Ranges	
	Near	Far
20 mil Code 39	1.8 in. 4.57 cm	27.0 in. 68.58 cm
Note: Photographic quality bar code at 18° tilt pitch angle under 30 fcd ambient illumination.		

## I/O Connector Pin-Outs

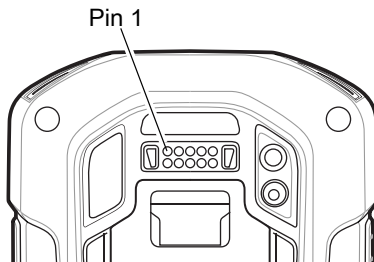**Figure 161** I/O Connector**Table 20** I/O Connector Pin-Outs

Pin	Signal	Description
1	GND	Power/signal ground.
2	RXD_MIC	UART RXD + Headset microphone.
3	PWR_IN_CON	External 5.4 VDC power input.
4	TRIG_PTT	Trigger or PTT input.
5	GND	Power/signal ground.
6	USB-OTG_ID	USB OTG ID pin.
7	TXD_EAR	UART TXD, Headset ear.
8	USB_OTG_VBUS	USB VBUS
9	USB_OTG_DP	USB DP
10	USB_OTG_DM	USB DM

## 2-Slot Charge Only Cradle Technical Specifications

**Table 21** 2-Slot Charge Only Cradle Technical Specifications

Item	Description
Dimensions	Height: 10.6 cm (4.17 in.) Width: 19.56 cm (7.70 in.) Depth: 13.25 cm (5.22 in.)
Weight	748 g (26.4 oz.)
Input Voltage	12 VDC
Power Consumption	30 watts
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Charging Temperature	0 °C to 40 °C (32 °F to 104 °F)
Humidity	5% to 95% non-condensing
Drop	76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10 kV contact +/- 10 kV indirect discharge

## 2-Slot USB/Ethernet Cradle Technical Specifications

**Table 22** 2-Slot USB/Ethernet Cradle Technical Specifications

Item	Description
Dimensions	Height: 20 cm (7.87 in.) Width: 19.56 cm (7.70 in.) Depth: 13.25 cm (5.22 in.)
Weight	870 g (30.7 oz.)
Input Voltage	12 VDC
Power Consumption	30 watts
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Charging Temperature	0 °C to 40 °C (32 °F to 104 °F)
Humidity	5% to 95% non-condensing

**Table 22** 2-Slot USB/Ethernet Cradle Technical Specifications

Item	Description
Drop	76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact +/- 10kV indirect discharge

## 5-Slot Charge Only Cradle Technical Specifications

**Table 23** 5-Slot Charge Only Cradle Technical Specifications

Item	Description
Dimensions	Height: 90.1 mm (3.5 in.) Width: 449.6 mm (17.7 in.) Depth: 120.3 mm (4.7 in.)
Weight	1.31 kg (2.89 lbs.)
Input Voltage	12 VDC
Power Consumption	65 watts 90 watts with 4-Slot Battery Charger installed.
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Charging Temperature	0 °C to 40 °C (32 °F to 104 °F)
Humidity	0% to 95% non-condensing
Drop	76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact +/- 10kV indirect discharge

## 5-Slot Ethernet Cradle Technical Specifications

**Table 24** 5-Slot Ethernet Cradle Technical Specifications

Item	Description
Dimensions	Height: 21.7 cm (8.54 in.) Width: 48.9 cm (19.25 in.) Depth: 13.2 cm (5.20 in.)
Weight	2.25 kg (4.96 lbs)
Input Voltage	12 VDC



**Table 24** 5-Slot Ethernet Cradle Technical Specifications

Item	Description
Power Consumption	65 watts 90 watts with 4-Slot Battery Charger installed.
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Charging Temperature	0 °C to 40 °C (32 °F to 104 °F)
Humidity	5% to 95% non-condensing
Drop	76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact +/- 10kV indirect discharge

## 4-Slot Battery Charger Technical Specifications

**Table 25** 4-Slot Battery Charger Technical Specifications

Item	Description
Dimensions	Height: 4.32 cm (1.7 in.) Width: 20.96 cm (8.5 in.) Depth: 15.24 cm (6.0 in.)
Weight	386 g (13.6 oz.)
Input Voltage	12 VDC
Power Consumption	40 watts
Operating Temperature	0 °C to 40 °C (32 °F to 104 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Charging Temperature	0 °C to 40 °C (32 °F to 104 °F)
Humidity	5% to 95% non-condensing
Drop	76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact +/- 10kV indirect discharge

## Charge Only Vehicle Cradle Technical Specifications

**Table 26** Charge Only Vehicle Cradle Technical Specifications

Item	Description
Dimensions	Height: 12.3 cm (4.84 in.) Width: 11.0 cm (4.33 in.) Depth: 8.85 cm (3.48 in.)
Weight	320 g (11.3 oz.)
Input Voltage	12/24 VDC
Power Consumption	40 watts
Operating Temperature	-40 °C to 85 °C (-40 °F to 185 °F)
Storage Temperature	-40 °C to 85 °C (-40 °F to 185 °F)
Charging Temperature	0 °C to 40 °C (32 °F to 104 °F)
Humidity	5% to 95% non-condensing
Drop	76.2 cm (30.0 in.) drops to vinyl tiled concrete at room temperature.
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact

## Trigger Handle Technical Specifications

**Table 27** Trigger Handle Technical Specifications

Item	Description
Dimensions	Height: 11.2 cm (4.41 in.) Width: 6.03 cm (2.37 in.) Depth: 13.4 cm (5.28 in.)
Weight	110 g (3.8 oz.)
Operating Temperature	-20 °C to 50 °C (-4 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Humidity	10% to 95% non-condensing
Drop	1.8 m (6 feet) drops to concrete over temperature range.
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact

## Charging Cable Cup Technical Specifications

**Table 28** Charging Cable Cup Technical Specifications

Item	Description
Length	25.4 cm (10.0 in.)
Input Voltage	5.4 VDC
Operating Temperature	-20 °C to 50 °C (-4 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Humidity	10% to 95% non-condensing
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact

## Snap-On USB Cable Technical Specifications

**Table 29** Snap-On USB Cable Technical Specifications

Item	Description
Length	1.5 cm (60.0 in.)
Input Voltage	5.4 VDC (external power supply)
Operating Temperature	-20 °C to 50 °C (-4 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Humidity	10% to 95% non-condensing
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact

## Snap-On Serial Cable Technical Specifications

**Table 30** Snap-On USB Cable Technical Specifications

Item	Description
Length	1 m (39.0 in.)
Input Voltage	5.4 VDC
Operating Temperature	-20 °C to 50 °C (-4 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Humidity	10% to 95% non-condensing
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact

## DEX Cable Technical Specifications

**Table 31** DEX Cable Technical Specifications

Item	Description
Length	1.5 cm (60.0 in.)
Operating Temperature	-20 °C to 50 °C (-4 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Humidity	10% to 95% non-condensing
Electrostatic Discharge (ESD)	+/- 20kV air +/- 10kV contact

# Index

## A

## A

approved cleanser ..... 185

## B

bullets ..... 14

## C

cleaning instructions ..... 186

cradle

connector cleaning ..... 187

## D

data capture options ..... 13

display ..... 13

cleaning ..... 187

## F

file transfer ..... 75

Flash ..... 13

## H

harmful ingredients ..... 186

## I

imager ..... 13

## M

memory ..... 13

message URL [http](http://www.zebra.com/support)

[//www.zebra.com/support](http://www.zebra.com/support) .. 146, 167, 169, 171, 189

## O

operating system ..... 13

## R

radios ..... 13

RAM ..... 13

## S

sensors ..... 207

soft reset ..... 28

software version ..... 13, 132

symbolologies ..... 209

## T

troubleshooting ..... 198

TC75x ..... 198





