


# WT41N0

## QUICK START GUIDE

### FEATURES


<http://www.zebra.com/wt41n0>

See User Guide for more information

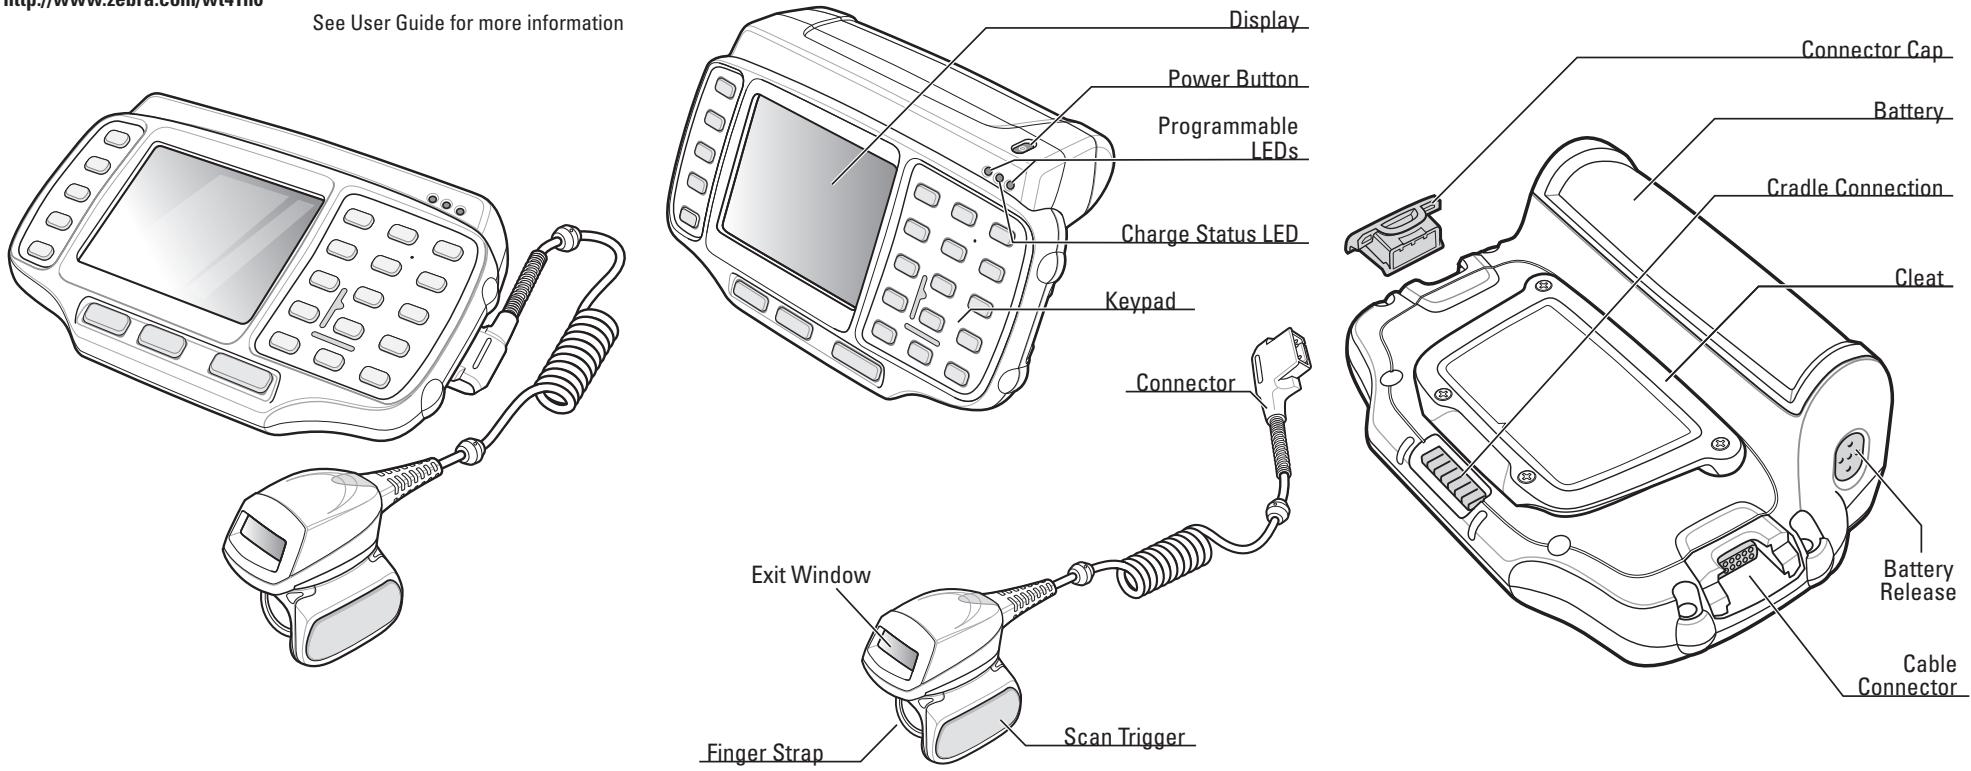

### Battery Installation and Removal

### Parts of Wrist Mount

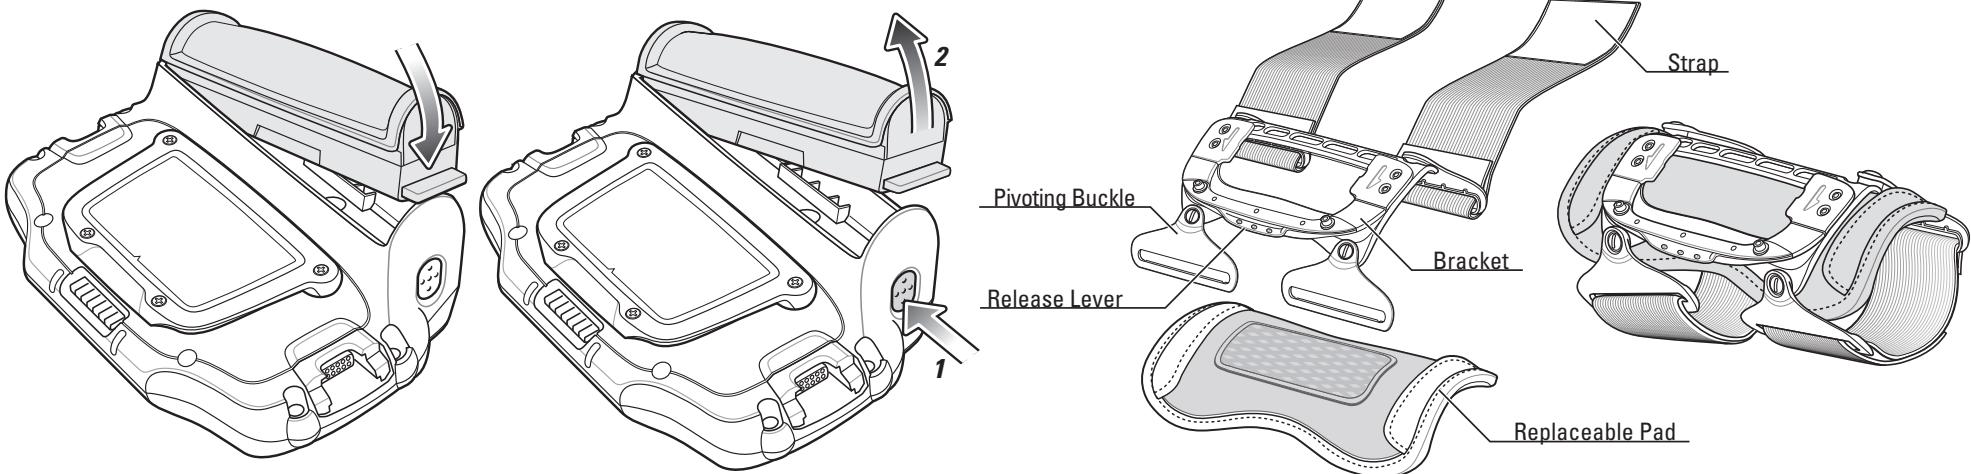


### ACCESSORY INSTALLATION

#### Headset Adapter


#### Connecting Accessory to Terminal

#### Disconnecting Accessory From Terminal

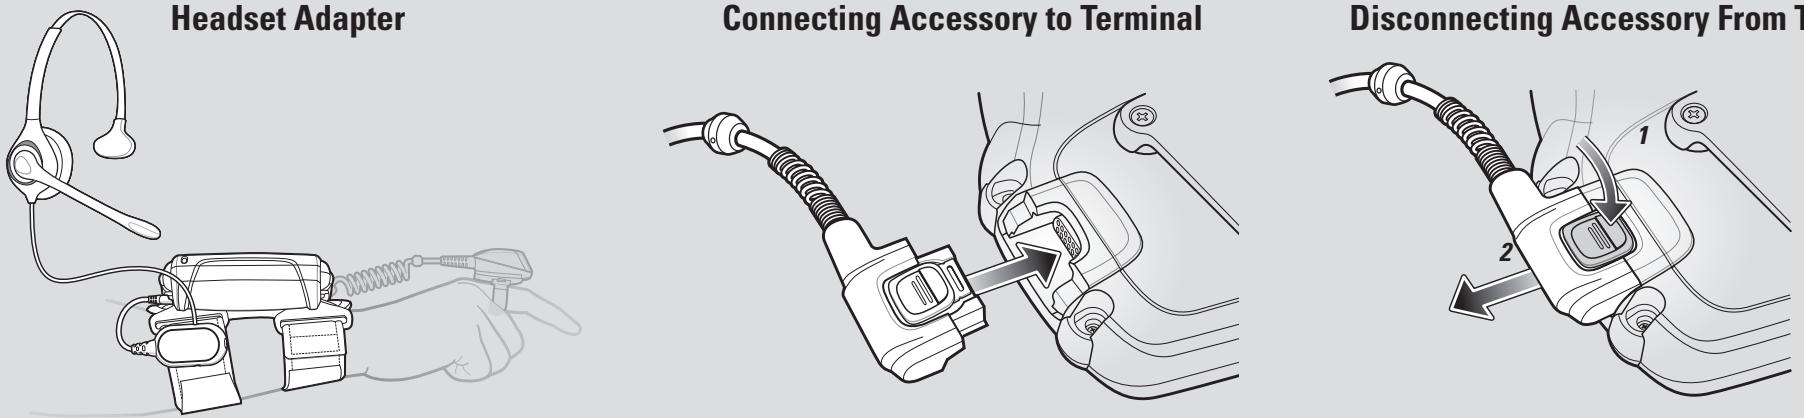

### CHARGING INSTRUCTIONS

⊙ = LED Indicator Location    Slow Flash = Normal Charge    Solid Amber = Full Charge    Fast Flash = Charging Error

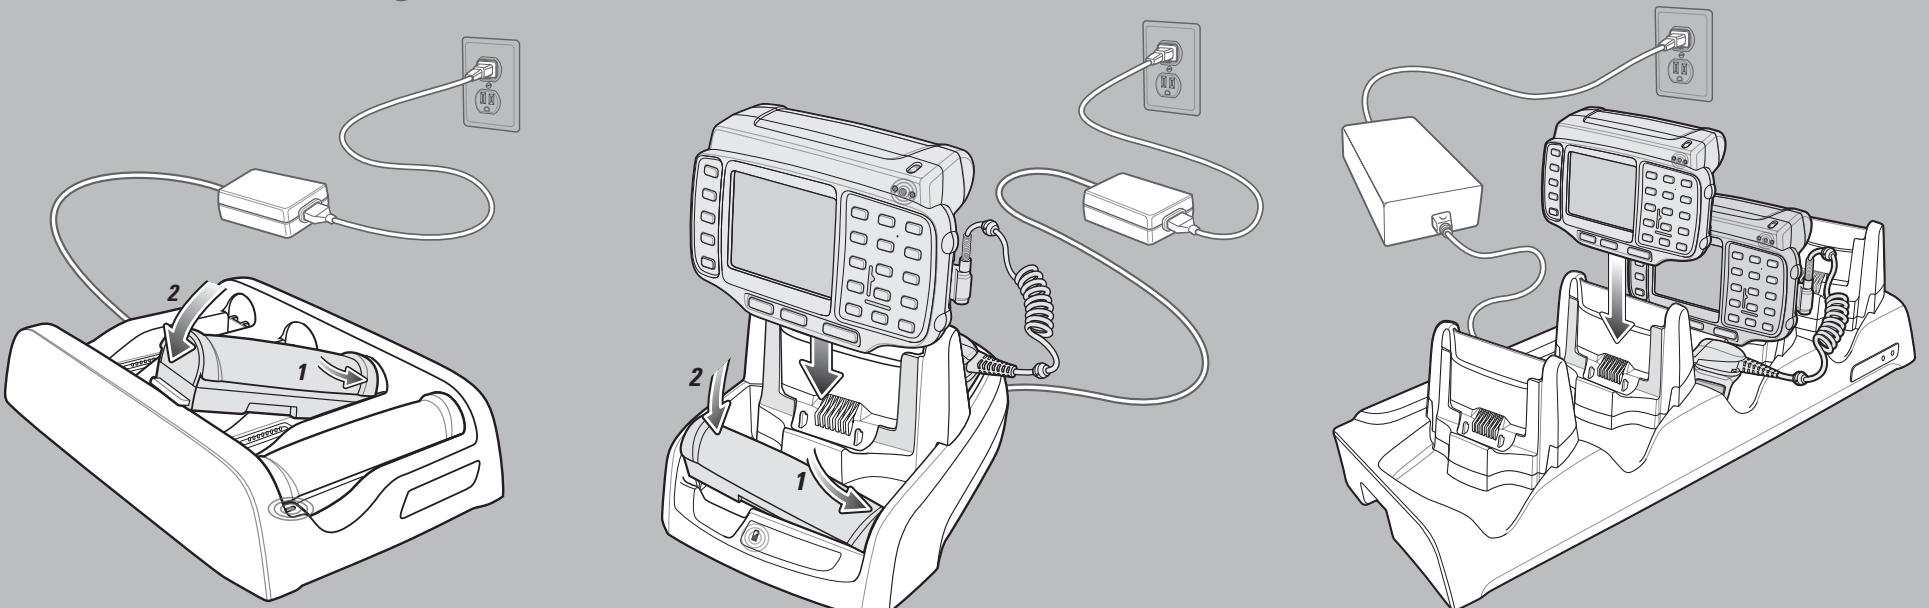


Four Slot Spare Battery Charger

Single Slot USB Cradle

Four Slot Ethernet Cradle

# WRIST MOUNT/WEARABLE TERMINAL INSTALLATION


## Wrist Mount Installation

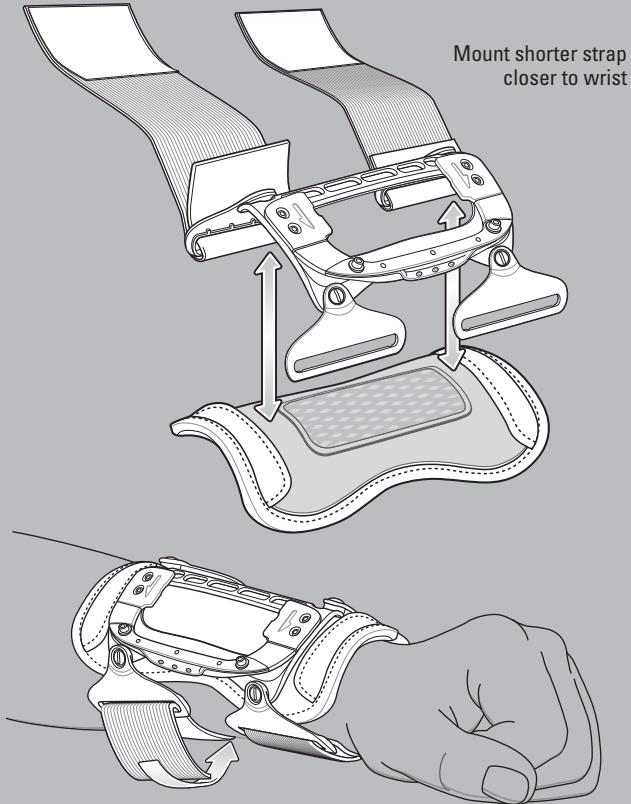



## Terminal Installation




## Terminal Removal

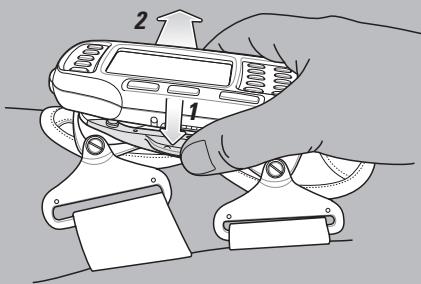


## Mounting on Left or Right Wrist

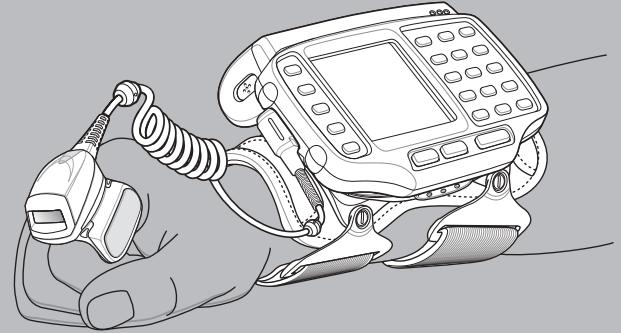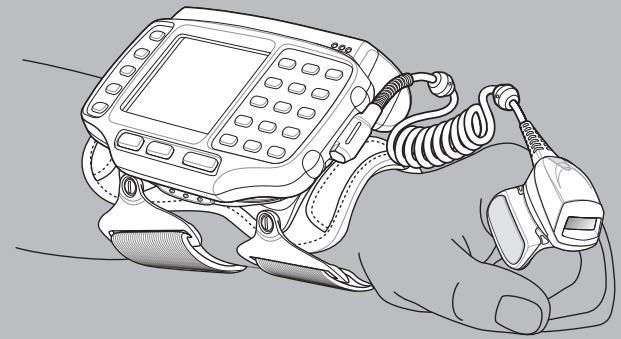


## SCANNER FINGER MOUNT

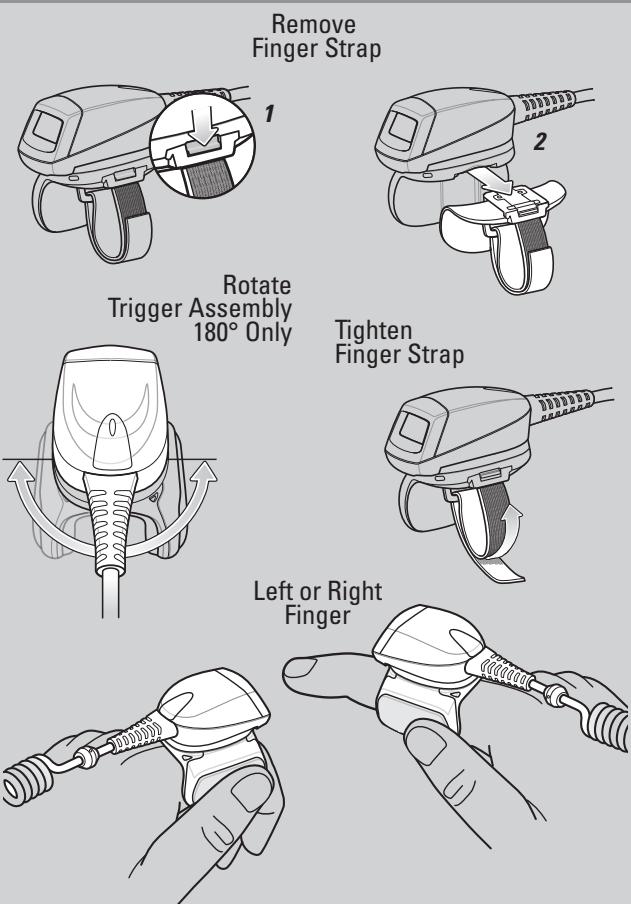

## AVOID EXTREME WRIST ANGLES

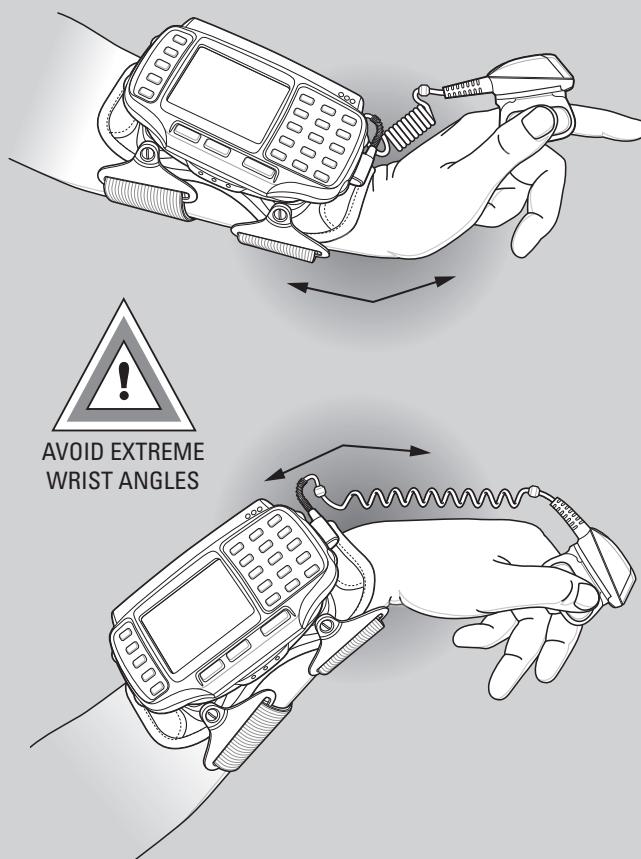


## AVOID BENDING AND REACHING

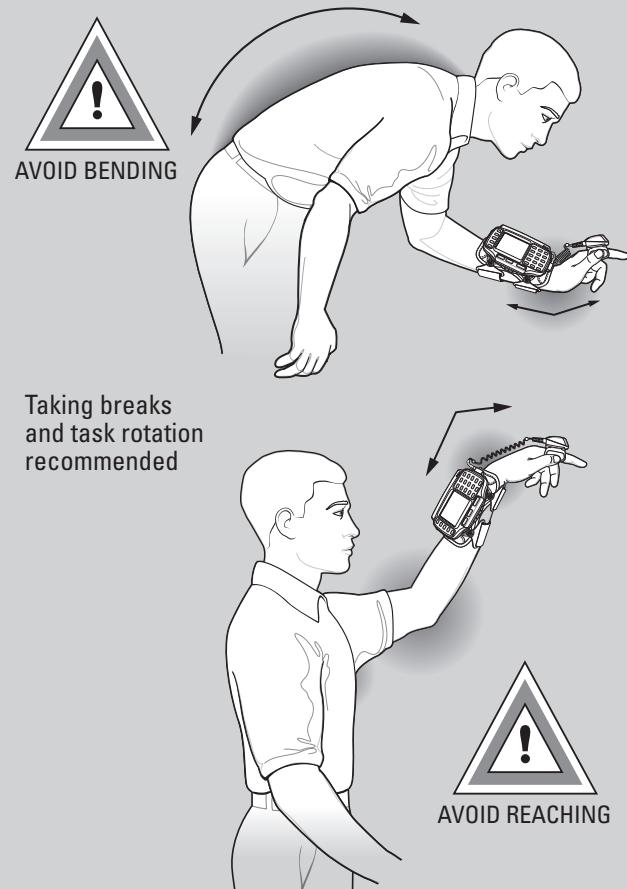


## OPTIMUM BODY POSTURE


### Low Scanning

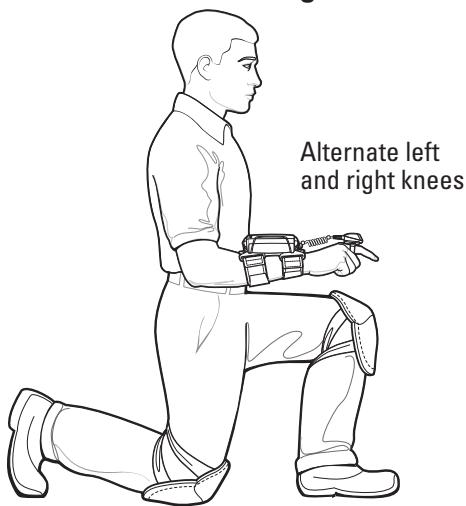

### Upright Scanning

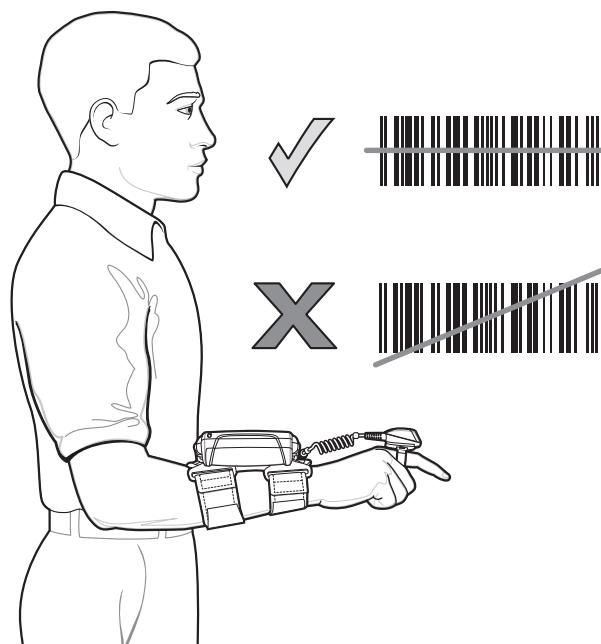

### High Scanning

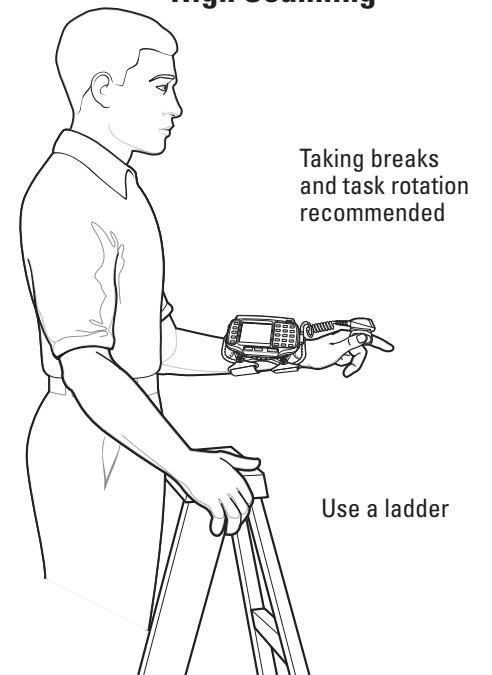

Zebra Technologies Corporation  
Lincolnshire, IL U.S.A.  
Zebra and the Zebra head graphic are registered trademarks of ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company.  
© 2015 Symbol Technologies, Inc.



72-157178-03 Rev A — March 2015

<http://www.zebra.com/wt41n0>

# WT41N0