

# ZQ110 Quad Docking Cradle Installation Guide


P1069385-001 (Rev. A)

## ZQ110 Quad Docking Cradle

### Information

This installation guide provides information required for product installation and use. The ZQ110 Quad Docking Cradle offers simultaneous recharging of up to four ZQ110 printers.

### Components

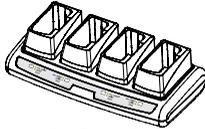

Quad Docking Cradle



Adaptor for Quad Battery Charger / Docking Cradle



Power Cord




Installation Guide

### Installation Precautions

1. Avoid placing in direct sunlight and/or locations subject to excessive heat.
2. Do not use or store in locations subject to high temperatures and/or humidity.
3. Do not use or store in dusty locations.
4. Do not install in unstable and/or non-level locations.
5. Subjecting the product to strong vibration and/or shock can cause damage.
6. Secure sufficient space in the installation area to facilitate easy usage.

### Connecting the cables

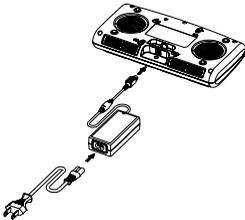

1. Connect the power cord to the adaptor for Quad Battery Charger/ Docking Cradle, and connect the adaptor for Quad Battery Charger/ Docking Cradle to the power connector of the Quad Docking Cradle.
2. Plug the power cord into a power outlet. Input power is 100-240VAC, 50/60Hz, 1.0A.
3. When the power is on, the amber, green, and red LEDs are lit for three seconds.

### WARNING

Use only the designated Adaptor for Quad Battery Charger/ Docking Cradle. (12VDC, 3A)


### NOTE

LED	Self-Test
Red LED Blinking	Error Condition for Quad Docking Cradle

### CAUTION

1. Initially, the Quad Docking Cradle performs the self-test when power is on. If an error occurs, red LED will blink.
2. If the red LED is blinking continuously, remove the printer. Check if there is a foreign substance on the battery contact of printer or the Quad Docking Cradle. Then, disconnect and connect power cord 4 to 5 times to check connection status.
3. If the red LED is still blinking after performing the above procedures, contact your local dealer.

### Battery Charging

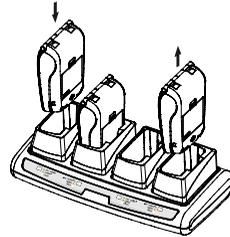

1. Turn the printer off.
2. Slide the printer into the Quad Docking Cradle as shown.
3. Push in the printer until it clicks in place.
4. Charging begins when the printer is inserted.
5. When charging is complete, pull out the printer to remove it.

### CAUTION

Please be sure to use the battery with external power contacts.

### NOTE

Battery charging status descriptions are as follows.

LED	Charging Status	Charge Time
Amber LED On	Charging	2.5 hours
Green LED On	Fully Charged	
Red LED Blinking	Error Replace or Reinstall Battery	

### CAUTION

1. If the red LED of the charger blinks, install the printer again.
2. If the red LED continues to blink despite several attempts (4-5 times) to install the printer, contact your local dealer.
3. The charging time may vary depending on the type of the charger or ambient temperature.

### WEEE (Waste Electrical and Electric Equipment)



This marking shown on the product or its literature, indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

### Zebra Technologies Corporation

- **Web site:** <http://www.zebra.com>
- **Zebra Technologies Corporation (Global/Americas Headquarters)**  
475 Half Day Road, Suite 500, Lincolnshire, IL 60069 USA  
Tel: +1 847 634 6700 or +1 866 230 9494
- **Zebra Technologies Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5XF, UK  
Tel: +44 (0)1628 556000
- **Zebra Technologies Asia Pacific, LLC**  
120 Robinson Road, #06-01 Parakou Building, Singapore 068913  
Tel: +65 6858 0722
- **Latin American Sales Office**  
9850 NW 41<sup>st</sup> Street, Suite 110 Doral FL 33178  
Tel: +1 305 558 8470