


## R12 Dock Firmware used to update the R12 Dock to support XSLATE R12 external video

Instructions for updating the previous R12 Docking Station or R12 Secure Mobile Dock for use with XSLATE R12.


This firmware update is needed to resolve a display frequency issue when using an external monitor.

It is not needed if you have the XSLATE R12 Docking Station or XSLATE R12 Secure Mobile Dock.

1. Download the R12\_Dock\_Firmware1.52.zip package below and unzip to a local directory on your XSLATE R12 tablet
2. Dock the XSLATE R12 tablet to the R12 Docking Station or R12 Secure Mobile Dock
3. Connect an external monitor via VGA or HDMI cable
4. Launch file explorer (yellow folder icon on taskbar) and navigate to the unzipped local directory
5. Double-click anx6470\_api\_for\_e2p\_V04
6. Click Get FW Version and verify it shows FW Version: 151

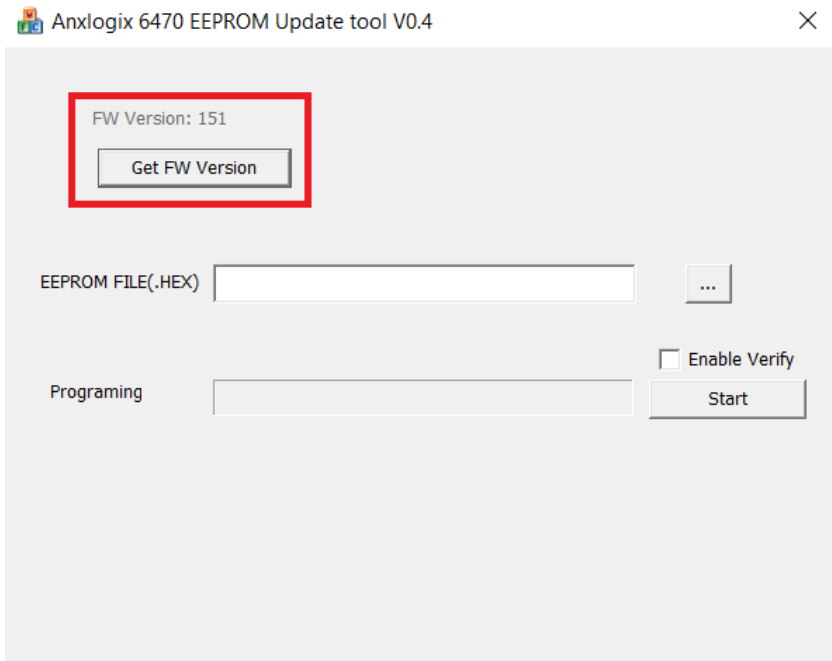

7. Click “...” to choose file “ANX6470\_FW v1.52 for motion\_HBR\_2 lane.hex”

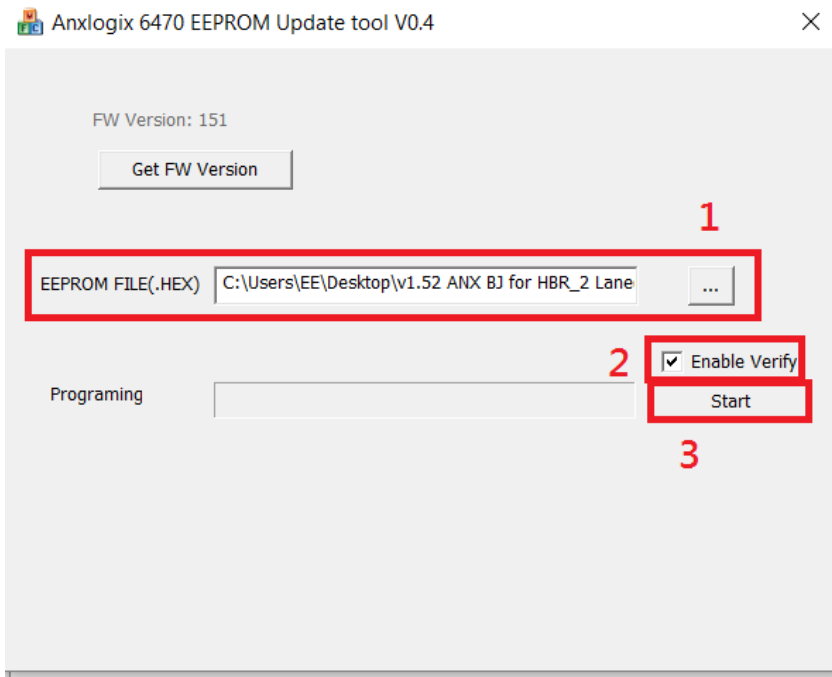

8. Set Enable Verify and click Start (note: update takes 2 - 3 minutes to complete)
9. Click Ok button to close the tool upon update success
10. Undock the XSLATE R12 tablet
11. Repeat steps 2 - 6 and verify the FW Version changed to 152

