

IMPORTANT NOTES FOR Upgrading and Downgrading MC959x Device to/from BSP47 (v5.47.02) RevE

Upgrading to v5.47.02 RevE SW:

- **If your device is running BSP27 (v2.27.08) / BSP37 (v3.37.02)/BSP41 (v4.41.03)/BSP41 (v4.41.04) Windows Mobile 6.5, you can simply use the BSP47 (RevE SW v5.47.02) Update Loader package to update from BSP27/BSP35/BSP41 to BSP47 (v5.47.02).**
- **If your device is running BSP19 (v1.19.11), you must first update your device to the released version of BSP27 (v2.27.08). Once the device is running BSP27, you can then perform the update to BSP47 (v5.47.02).**

Downgrading to **BSP41.04/BSP41.03/BSP37/BSP27/BSP19:**

- **If your device is having CPLD 5.02 then it is a Old Main Board device having CMI display. This device is not allowed to downgrade to 04.41.03 or earlier Image.**
(Go to System Info Applet on the device to find the CPLD Version : Start->Settings->System->"System Info" Applet->"HW Version". For OLD Main Board CPLD ver:5.02)
- **If your device was manufactured before Dec 1,2012 and your device has 256MB RAM/LG Display , you are only permitted to downgrade to BSP41(v4.41.04,4.41.03)/BSP37(v3.37.02)/BSP27(v2.27.08)**
(Go to System Info Applet on the device to find the RAM size: Start->Settings->System->"System Info" Applet->"Misc" Page)
(Go to System Info Applet on the device to find the Display Id: Start->Settings->System->"System Info" Applet->"Display" Page. For CMI->PJ037PD,For LG->LH370V01).
- **If your device was manufactured on or after Dec 1,2012 and your device has CMI Display, you WOULD NOT be able to Downgrade to BSP37(v3.37.02) / BSP27 (v2.27.08) / BSP19 (1.19.11).**
(DO NOT Downgrade MC95xx devices built on or after Dec 2012 with the new CMI display to BSP37 (v3.37.02), BSP27 (v2.27.08), BSP19 (1.19.11) since these BSPs do not have support for CMI display).
(Go to System Info Applet on the device to find the Display Id: Start->Settings->System->"System Info" Applet->"Display" Page. For CMI->PJ037PD,For LG->LH370V01).
- **If your device has 128MB RAM and running with BSP47 (v5.47.02), you are permitted to downgrade to BSP41(v4.41.04,4.41.03)/BSP37(v3.37.02), BSP27 (v2.27.08) and BSP19 (v1.19.11). However, if you want to downgrade to BSP19 (v1.19.11), you must first downgrade to BSP27 (v2.27.08) before performing the downgrade to BSP19 (v1.19.11).**
(Go to System Info Applet on the device to find the RAM size: Start->Settings->System->"System Info" Applet->"Misc" Page)