

IMPORTANT NOTES FOR Updating and Downgrading MC959x Device to/from BSP37 (v3.37.02) RevC

Upgrading to v3.37.02 RevC SW:

- **If your device is running BSP27 (v2.27.08) Windows Mobile 6.5, you can simply use the BSP37 (RevC SW v3.37.02) Update Loader package to update from BSP27 to BSP37**
- **If your device is running BSP19 (v1.19.11), you must first update your device to the released version of BSP27 (v2.27.08). Once the device is running BSP27, you can then perform the update to BSP37 (v3.37.02).**

Downgrading to BSP27/BSP19:

- **If your device has 256MB RAM, you are only permitted to downgrade to BSP27(v2.27.08)**
(Go to System Info Applet on the device to find the RAM size: Start->Settings->System->"System Info" Applet->"Misc" Page)
- **If your device has 128MB RAM and running with BSP37 (v3.37.02), you are permitted to downgrade to either BSP27 (v2.27.08) or BSP19 (v1.19.11). However, if you want to downgrade to BSP19 (v1.19.11), you must first downgrade to BSP27 (v2.27.08) before performing the downgrade to BSP19 (v1.19.11).**
(Go to System Info Applet on the device to find the RAM size: Start->Settings->System->"System Info" Applet->"Misc" Page)