

IMPORTANT NOTES FOR Updating and Downgrading MC9590/9596/9598 Device to/from BSP47 (v6.47.12) RevF Software.

Upgrading

- If your device is running BSP27 (v2.27.08) / BSP37(v3.37.02)/ BSP41(v4.41.03)/ BSP47 (v5.47.02) Windows Mobile 6.5, you can simply use the BSP47 (RevF SW v6.47.12) Update Loader package to update from BSP27/BSP37/ BSP41/BSP47 to BSP47 RevF
- If your device is running BSP19 (v1.19.11), you must first update your device to the released version of BSP27 (v2.27.08). Once the device is running BSP27 (v2.27.08), you can then perform the update to BSP47 (v6.47.12).

Note: Update Loader of BSP47.12 file: 95x6w65HenUC064712.zip will clean the application partition;

Downgrading

- If your device has 256MB RAM, you are only permitted to downgrade to BSP27 (v2.27.08) / BSP37(v3.37.02)/ BSP41(v4.41.03, v4.41.04) /BSP47 (v05.47.02).

(Go to System Info Applet on the device to find the RAM size: Start->Settings->System->"System Info" Applet->"Misc" Page)

- If your device has 128MB RAM and running with BSP47 (v6.47.12), you are permitted to downgrade to BSP47 (v5.47.02), BSP41(v4.41.03, , v4.41.04) ,BSP37 (v3.37.02), BSP27 (v2.27.08), BSP19 (1.19.11). However, if you want to downgrade to BSP19 (1.19.11), you must first downgrade to BSP27 (v2.27.08) before performing the downgrade to BSP19 (v1.19.11).

(Go to System Info Applet on the device to find the RAM size: Start->Settings->System->"System Info" Applet->"Misc" Page)

- **Downgrading from BSP 47 to BSP 41.03 on OLD Main Board device having CMI display.**

If your device is having CPLD 5.02 then it is a Old Main Board device having CMI display. This device is not allowed to downgrade to 04.41.03 or earlier Image.

(Go to System Info Applet on the device to find the CPLD Version : Start->Settings->System->"System Info" Applet->"HW Version". For OLD Main Board CPLD ver:5.02)

Preserving Application partition:

- CleanAppl.bin must be removed from Pkgs.lst in the Update Loader Package to preserve Application partition data.