# WT6000 / WT6300 RS4000/RS5000/RS5000x (RS6000 Series)

ZEBRA

**Accessories Guide** 

## **Single Cradles**



# WT6x Single Slot Cradle w/Spare Battery Charger:

**CRD-NGWT-1S1BU-01:** Single slot USB Cradle, w/spare battery charging, charges one wearable terminal and one spare battery.

Allows USB communication to the device with an additional micro-USB cable.

**Requires:** Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

 
# Additional accessories for single slot cradle



### 25-124330-01R

Micro-USB to USB Cable for single slot cradle







### CBL-DC-388A1-01

specific grounded AC line cord.

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



### 23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

## **Single Cradles**



# RS6000 Single Slot Cradle w/Spare Battery Charger:

**CRD-NGRS-1S1BU-01:** Single slot USB Cradle, w/spare battery charging, charges one ring scanner and one spare battery.

Allows USB communication to the device with an additional micro-USB cable.

**Requires:** Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

# Additional accessories for single slot cradle



### 25-124330-01R

Micro-USB to USB Cable for single slot cradle

### PWR-BGA12V50W0WW



Level VI AC/DC Power Supply (Brick, replacement for PWRS-14000-148R) **AC Input:** 100-240V, 2.4A **DC Output:** 12V, 4.16A, 50W **Requires:** DC line cord and Country specific grounded AC line cord.



### CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



### 23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

## **Two-Slot Cradle**



### WT6x/RS6000 Two Slot Cradle:

**CRD-NWTRS-2SUCH-01:** 2slot USB Cradle, charges one wearable terminal and one ring scanner.

Allows USB communication to each device with an additional micro-USB cable.

**Requires:** Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

# Additional accessories for single slot cradle



### 25-124330-01R

Micro-USB to USB Cable for single slot cradle

### PWR-BGA12V50W0WW



Level VI AC/DC Power Supply (Brick, replacement for PWRS-14000-148R) **AC Input:** 100-240V, 2.4A **DC Output:** 12V, 4.16A, 50W <u>Requires:</u> DC line cord and Country specific grounded AC line cord.



### CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW, Level VI replacement for PWRS-14000-148R.



### 23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
Solid Red	Unhealthy battery

## **Five-Slot Cradles**





### **Five-Slot Cradle options:**

**CRD-NGWT-5S5BC-01:** WT6x 5Slot Charge Only Cradle w/Spare Battery Charger, charges up to 5 wearable terminals and 5 spare batteries.

**CRD-NGRS-5S5BC-01:** RS6000 5Slot Charge Only Cradle w/Spare Battery Charger, charges up to 5 ring scanners and 5 spare batteries.

**CRD-NGWT-5S5BE-01:** WT6x 5Slot Ethernet Cradle w/Spare Battery Charger, charges up to 5 ring scanners and 5 spare batteries.

**CRD-NGRS-5S5BE-01:** RS6000 5Slot Ethernet Cradle w/Spare Battery Charger, charges up to 5 ring scanners and 5 spare batteries.

All Cradles Require: Power Supply PWR-BGA12V108W0WW, DC Cord CBL-DC-381A1-01 and Country Specific 3 wire AC Line Cord.

### **Additional accessories**







#### **PWR-BGA12V108W0WW** Level VI AC/DC Power Supply (Brick,

AC Input: 100-240V, 2.8A DC Output: 12V, 9A, 108W Requires: DC line cord and Country specific grounded AC line cord.

### CBL-DC-381A1-01

DC Line Cord for running multi-slot cradles from a single Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R

### 23844-00-00R

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



### BRKT-SCRD-SMRK-01

Rack/Wall Mounting bracket for multi-slot cradles.

Off	Battery not charging
Solid Amber	Healthy battery charging
Solid Green	Healthy battery charging complete
Fast Blink Red	Charging error
 Solid Red	Unhealthy battery

# Charging Options Ten-Slot Cradles



### **Ten-Slot Cradle options:**

**CRD-NWTRS-10SCH-01:** WT6x/RS6000 10Slot Charge Only Cradle, charges up to 5 wearable terminals and 5 ring scanners.

**CRD-NGWT-10SCH-01:** WT6x 10Slot Charge Only Cradle, charges up to 10 wearable terminals.

**CRD-NGRS-10SCH-01:** RS6000 10Slot Charge Only Cradle, charges up to 10 ring scanners

 
All Cradles Require: Power Supply PWR-BGA12V108W0WW, DC Cord CBL-DC-381A1-01 and Country Specific 3 wire AC Line Cord.

### Additional accessories









US AC line cord, 7.5 feet long, grounded, three wire for power supplies.



### **BRKT-SCRD-SMRK-01**

Rack/Wall Mounting bracket for multi-slot cradles.

### **Charging LED indicators**

-	Off	Battery not charging
	Solid Amber	Healthy battery charging
	Solid Green	Healthy battery charging complete
	Fast Blink Red	Charging error
	Solid Red	Unhealthy battery

### PWR-BGA12V108W0WW


Level VI AC/DC Power Supply (Brick, Replacement for PWRS-14000-241R) **AC Input:** 100-240V, 2.8A **DC Output:** 12V, 9A, 108W **Requires:** DC line cord and Country specific grounded AC line cord.

### CBL-DC-381A1-01

DC Line Cord for running multi-slot cradles from a single Level VI power supply PWR-BGA12V108W0WW, Level VI replacement for PWRS-14000-241R

# **Multi-Slot Cradle Installations**



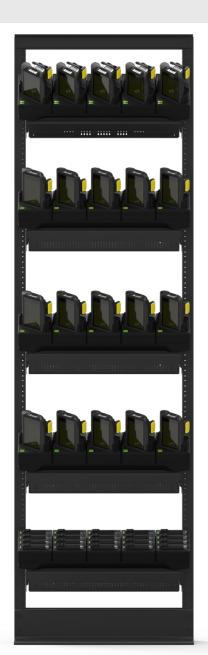



# **Battery / battery charging accessories**

### 3350 mAh Battery

#### BTRY-NWTRS-33MA-02

PowerPrecision+ Lithium Ion battery, 3350 mAh. Advanced battery technology, provides higher level of intelligence (State of Charge and State of Health) for wearable terminal or ring scanner.



#### **5000 mAh Battery**

#### BTRY-NGWT-50MA-01

PowerPrecision+ Lithium Ion battery, 5000 mAh for WT6x wearable terminal. For extended run time at ambient temperature and in freezer environments. **Not for use in RS6000.** 

### **Spare Battery Charging Options:**



SAC-NWTRS-4SCH-01: 4-slot battery charger, charges four spare batteries. **Requires:** Power Supply **PWR-BGA12V50W0WW**, DC Line Cord **CBL-DC-388A1-01** and Country Specific 3 wire AC Line Cord.

#### SAC-NWTRS-20SCH-01:

20-slot battery charger, charges 20 spare batteries. **Requires:** Power Supply **PWR-BGA12V108W0WW**, DC Cord **CBL-DC-381A1-01** and Country Specific 3 wire AC Line Cord.



### **Accessories for battery chargers:**



### PWR-BGA12V50W0WW

Level VI AC/DC Power Supply AC Input: 100-240V, 2.4A DC Output: 12V, 4.16A, 50W Requires: DC line cord and Country specific grounded AC line cord.



### CBL-DC-388A1-01

DC Line Cord for running the single slot cradles or battery chargers from a single Level VI power supply PWR-BGA12V50W0WW.

#### PWR-BGA12V108W0WW

Level VI AC/DC Power Supply AC Input: 100-240V, 2.8A DC Output: 12V, 9A, 108W <u>Requires:</u> DC line cord and Country specific grounded AC line cord.

### CBL-DC-381A1-01

DC Line Cord for running multi-slot cradles from a single Level VI power supply PWR-BGA12V108W0WW.

# °**Q**



#### **23844-00-00R** US AC line cord 7

US AC line cord, 7.5 feet long, grounded, three wire for power supplies.

#### BRKT-SCRD-SMRK-01

Rack/Wall Mounting bracket for multi-slot cradles and 20slot battery charger.



# WT6x Keypad

### Accessory Keypad for WT6x Wearable Terminal

### **KYPD-WT6XANFASM-01**

WT6x Keypad Assembly, Alphanumeric and Function, Includes Mounting Cleat



### ACC-WT6XCLTMNT-01

Spare Mounting Cleat for WT6x Keypad Assembly





WT6x with Attached Keypad

# **Cables/Adapters**

### **USB/Charge Cable**

### **CBL-NGWT-USBCHG-01**

Provides USB communication and charge to the wearable terminal. **Requires:** Power supply **PWR-BUA5V16W0WW**, DC Line Cord **CBL-DC-383A1-01** and ungrounded country specific AC line cord.



### **Audio Cables**

### CBL-NGWT-AUQDLG-01

Audio adapter cable, compatible with quickdisconnect wired headsets. Compatible while the device is worn on the hip. **Requires:** QD headset. Audio adapter cable, compatible with quickdisconnect wired headsets. Compatible while the device is worn on the wrist. **Requires:** QD headset.

CBL-NGWT-AUQDST-01



### **Other Cables**

#### CBL-NGWT-HDVBAP-01

Vibrating cable, connects directly to the wearable terminal and provides additional haptic feedback to the user.



#### PWR-BUA5V16W0WW



Level VI AC/DC Power Supply AC Input: 100-240V, 0.6A DC Output: 5.4V, 3A, 16W Requires: DC line cord and Country specific un-grounded AC line cord.



#### CBL-DC-383A1-01

DC Line Cord for running single slot cradles or charging cables from a single Level VI power supply PWR-BUA5V16W0WW.



RCH51 Rugged wired headset with quickdisconnect



#### 25-129938-02R

Training cable - connects two wired headsets to one mobile computer



### 50-16000-182R

US AC line cord, un-grounded, two-wire.

# **Soft-Goods**

## Wearable Terminal



### Wrist Mount options:

**SG-NGWT-WRMTS-01:** WT6x Wrist Mount, includes carrier, comfort pad and small/medium strap.

**SG-NGWT-WRMTL-01:** WT6x Wrist Mount, includes carrier, comfort pad and medium/large strap.

**SG-NGWT-WRMTXL-01:** WT6x Wrist Mount, includes carrier, comfort pad and extra large strap.

### **Additional accessories**



### SG-NGWT-WSTPST-01

Spare replacement strap for wrist mount (small/medium)



### SG-NGWT-WSTPLN-01

Spare replacement strap for wrist mount (medium/large)



### SG-NGWT-WSTPLX-01

Spare replacement strap for wrist mount (extra large)

### SG-WT4027050-01R

Optional arm sleeves for wrist mount (pack of 5)

### SG-NGWT-CMPD-01

Replacement comfort pad for wrist mount.



### SG-NGWT-HPMNT-01

Hip-mount for wearable terminal, allows to use the device on the hip.

# **Soft-Goods: Wrist Mount**




- Velcro removed
- One Adjustable strap instead of two
- Integrated BOA closure system
  - Strong
  - Durable
  - Easy to use
- Specific Materials chosen for hygienic reasons
  - Can be cleaned down on site
  - Non absorbent

### BOA closure system

Specific Materials chosen for grip and wipe down qualities

# **Soft-Goods: Comfort Pad**

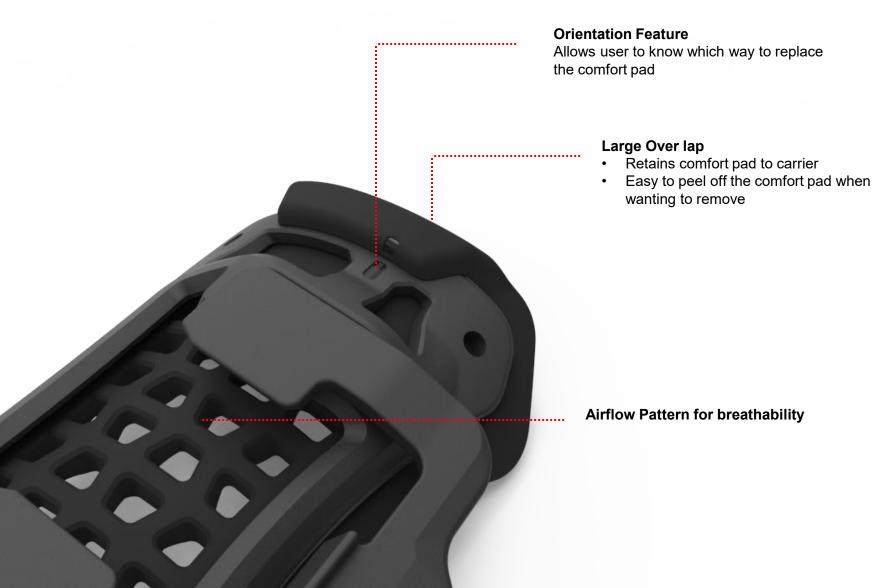

# **Soft-Goods: Wrist Strap**



# **Corded Ring Scanners and Soft-Goods**

### **RS5000x Ring Scanner**



### **RS5000X-TCFSSWR**

RS5000x Corded Wearable Scanner, SE4770 Scan Engine, Short Cable, Standard Finger Trigger, Worldwide. Freezer rated to -30C.

For use with WT6000, WT6300 and WT6400 wearable terminals only.



### **RS5000X-TCFSXWR**

RS5000x Corded Wearable Scanner, SE4770 Scan Engine, Short Cable, Freezer Glove Finger Trigger, Worldwide. Freezer rated to -30C.

For use with WT6000, WT6300 and WT6400 wearable terminals only.

## Soft-Goods RS4000 / RS5000 Ring Scanner

## Spare Accessories for RS5000 and RS5000x Ring Scanners



### SG-RS50X-TRGS-01

Replacement Trigger with improved cam-buckle strap for RS5000x (also fits RS5000) Standard Size, Includes Finger Strap



### SG-RS51-STRPN2-10

Replacement Strap for SG-RS50X-TRGS-01, for Standard Trigger – Pack of 10



### SG-RS50X-TRGX-01

Replacement Trigger with improved cam-buckle strap for RS5000x (also fits RS5000), Large Size for Freezer Gloves, Includes Finger Strap and Finger Grip



### SG-RS50X-STRPX-01

Replacement Strap for SG-RS50X-TRGX-01, for Large Trigger, Includes Finger Grip

## Soft-Goods RS4000 / RS5000 Ring Scanner

## Spare Accessories for RS4000 and RS5000 Ring Scanners



### SG-NGRS-SFSVS-01R

RS4000 / RS5000 Standard Spare Finger Strap (Single Pack, 6" length)



### SG-RS419-FGSTP-02R

RS4000 / RS5000 Extended Spare Finger Strap (Single Pack, 7.8" length)

## SG-NGRS-SFRVPD-05

RS5000 Replacement Velcro Pads for Attaching RS5000 Power Buffer to WT41N0 Wrist Mount (Pack of 5 units)



### SG-NGRS-TRGASR-01R

RS4000 / RS5000 Replacement Trigger Assembly

# Soft-Goods RS5100 Ring Scanner

## **Trigger Accessories for RS5100 Ring Scanner**



**SG-RS51-TRGSS-01** RS5100 replacement trigger assembly, single sided trigger. Includes comfort pad and strap.



**SG-RS51-TRGDS-01** RS5100 replacement trigger assembly, double sided trigger.

**SG-RS51-TRGDU-01** Double Sided trigger with USB-C

**SG-RS51-TRGDV-01** Double Sided trigger with vibration

-77

### SG-RS51-CMPD-05

RS5100 replacement comfort pads, to be used with single sided trigger (5-pack).

### SG-RS51-STRPNY-10

RS5100 spare nylon finger straps single sided trigger (10-pack).







**SG-RS51-BHMT-01** RS5100 Back of Hand mount.

**SG-RS51-BHSTP-01** Replacement strap for RS5100 back of hand mount

SG-RS51-LNYD-01

RS5100 Spare Lanyard Trigger Assembly.

# Soft-Goods RS6000 Ring Scanner

## Spare Accessories for RS6000 Ring Scanner



### SG-NGRS-STRPKV-10

RS6000 Spare velcro finger straps for trigger configuration (pack of 10 units). Order buckles SG-NGRS-STBKLV-10 separately.



### SG-NGRS-TRGA-01

RS6000 replacement trigger swivel assembly for use with Velcro straps. Order finger straps SG-NGRS-STRPKV-10 and buckles SG-NGRS-STBKLV-10 separately



### SG-NGRS-STRPNY-10

RS6000 spare nylon finger strap for triggered configurations with cam buckle (10 pack).



### SG-NGRS-TRGA-02

RS6000 replacement trigger swivel assembly for use with nylon straps. Order finger straps SG-NGRS-STRPNY-10 separately



### SG-NGRS-STBKLV-10

RS6000 Spare buckles for velcro finger strap (pack of 10 units) Order velcro finger straps separately.



### SG-NGRS-CMPD-01

RS6000 Replacement comfort pads. Pack includes front and back comfort pads.