



DS9900 Series Hybrid Scanner

Accessory Guide



Customize Your Solution With A Full Range Of Accessories



We offer a choice of power supplies, battery packs, capacitors, USB adapters, mounts and holsters to fit every barcode scanning need. Enhance productivity for your workforce with accessories designed to complement and enhance scanner operation. Part numbers may vary by region.

Mounting Brackets

- Multi-Mount Bracket
 - Allows the scanner to be mounted horizontally (ie. tabletop) or vertically (ie. wall).
 - Mounted with screws or double-sided tape
 - The scanner can be slid in and out of the bracket as needed.
 - Compatible with DS9908 only, will not fit the DS9908R
 - Part Numbers:
 - BRKT-MM0099C-04
 - Multi-Mount - DS9908 (Midnight Black)
 - BRKT-MM0099C-0W
 - Multi-Mount - DS9908 (Alpine White)




Cable options

USB

Series A



Power Plus

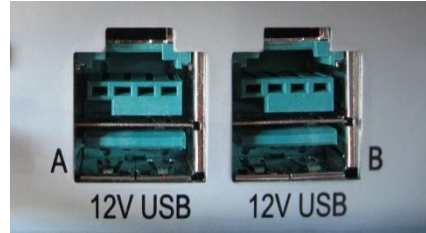

USB Cables

CBA-U21-S07ZBR

Shielded USB: Series A Connector, 7Ft. (2.1M), Straight, BC1.2



OR

CBA-U23-S07ZBR

Shielded USB: Power Plus Connector, 7Ft. (2.1M), Straight, 12V



Main features

- USB communication
- Automatically detects the host
- Powered from the host, including DS9908R
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types cables available
- Compatible with DS9808 USB cables (Shielded USB Cables are recommended for best ESD performance)

Power Supplies

Not Applicable for USB Cables

Cable options

RS-232



RS-232 Cables

CBA-R01-S07PBR

RS232: DB9F, 7Ft. (2M) ST, TXD-2, W/ TTL Current Limit Protection [Requires external 5V power supply]

OR

CBA-R37-C09ZBR

RS232: DB9F, 9Ft. (2.8M) CL, PWR Pin 9, W/ TTL Current Limit Protection

OR

CBA-R08-S07ZBR

RS232: 7FT (2M), NIXDORF BEETLE- 5V Direct Power, W/ TTL Current Limit Protection



Main features

- Serial communication
- Automatically detects the host
- External power supply not required, unless specified
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types available
- Compatible with DS9808 & DS9808R RS-232 Cables

Power Supplies for RS-232 cables

| | |
|----------------|--|
| PWR-WUA5V4W0US | Power Supply, 5VDC, 100 - 240VAC, US/CA/MX/JP/TW |
| PWR-WUA5V4W0BR | Power Supply, 5VDC, 100 - 240VAC, Brazil |
| PWR-WUA5V4W0EU | Power Supply, 5VDC, 100 - 240VAC, EU/UK |
| PWR-WUA5V4W0CN | Power Supply, 5VDC, 100 - 240VAC, CN |
| PWR-WUA5V4W0AU | Power Supply, 5VDC, 100 - 240VAC, HK/AU |



CBA-R01-S07PBR




+



PWR-WUA5V4W0US
Power Supply
5.2v, 1.1A

Cable options

IBM (RS-485)

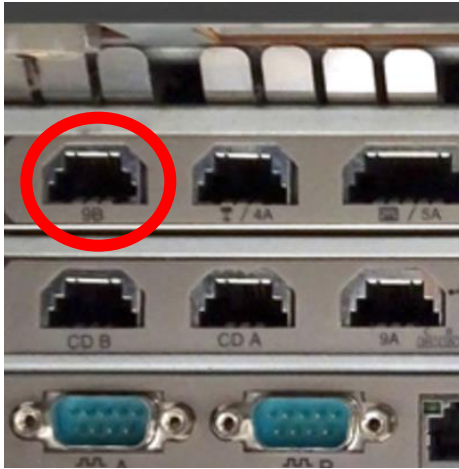

IBM Cables

CBA-M61-S07ZAR

Assembly, Cable, Auto-Host
detect – IBM: 468X/9X, 7FT(2M)
Straight, Port 9B



Main features

- IBM 4690 communication
- Automatically detects the host, but does not choose a port address
- External power supply not required

Power Supplies

Not Applicable for IBM Cables



AG-DS9908 Feb 19 2021

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. ©2021 Zebra Technologies Corp. and/or its affiliates. All rights reserved.