




CONTENTS OF THE BOX




> ST3006
6-Slot Battery Charger
for Omnii and Ikôn



> AC Power Supply
(requires an IEC320-C13
power cord approved by
Psion, sold separately)




> This Guide




> Regulatory and
Warranty Guide
(not shown)

Optional - must be ordered separately




Country-specific
Power Cord

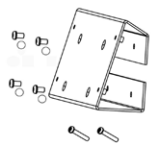

MT2031 Mounting
Bracket Kit
(contains Wall Mount
Bracket, 4 wall
screws, 4 washers,
2 screws for Charger)

FEATURES

TOP

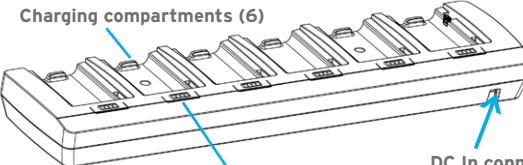


Charging compartments (6)

Charge indicator LEDs (set of 4 per compartment)

DC In connector

BOTTOM

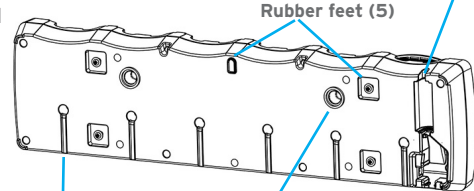

Rubber feet (5)


Drain holes (6)

Bracket mounting holes (2)

GETTING STARTED

1 Mount the Battery Charger (if bracket was purchased).

Attach the Mounting Bracket to the wall using the 4 screws with washers included in the MT2031 Mounting Bracket Kit. See the location guide overleaf for dimensions.

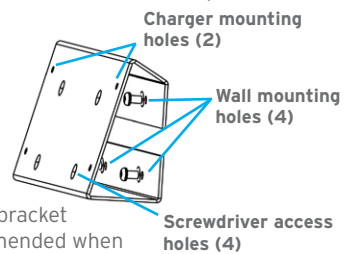


Charger mounting holes (2)

Wall mounting holes (4)


Screwdriver access holes (4)

Note: Wall mount or Desk mount bracket configuration is not recommended when charging Ikôn CH3000 battery packs.


Insert the two mounting screws from the Kit into the holes through the top of the Battery Charger and tighten to the Mounting Bracket to secure it.

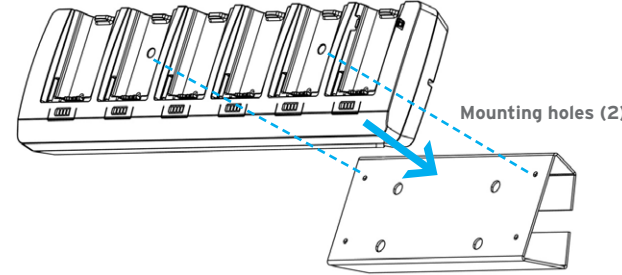

Final position with AC/DC Adaptor in place.
(attachment to either surface is optional)

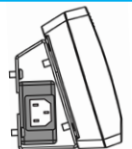


Wall mount

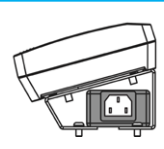


Desk mount

2 Connect the Battery Charger to External Power.




Warning: Use an IEC320-C13 power cord approved by Psion, with the ground pin connected to a proper earth-grounded receptacle. Check with a qualified electrician if you are uncertain of your receptacle grounding.



IEC320-C13

Note: The LEDs light when first connected to power.

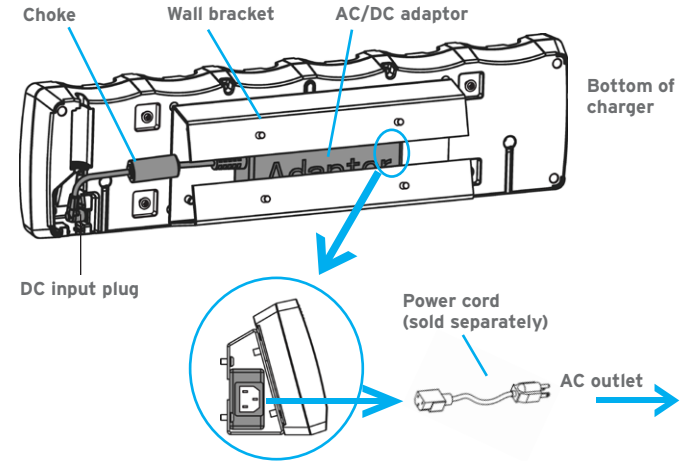

Choke

Wall bracket

AC/DC adaptor

Bottom of charger

DC input plug

Power cord (sold separately)


AC outlet

Note: Use only the universal AC/DC power adaptor approved by Psion for use with the Battery Charger.

3 Insert One or More Batteries for Charging.

Insert the battery by placing the base into the slot in line with the pins and pivoting the top of the battery into the charge compartment.

Then snap the battery tabs into place.

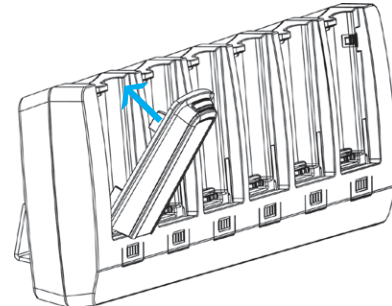

4 Allow the Batteries to Charge for 3-4 Hours.

Note: Full battery performance is only reached after the first few charge/discharge cycles. A table of the charge status indicated by the LEDs is shown overleaf.




0 - 40 °C
32 - 104 °F



3-4 h

CHARGE STATUS INDICATOR LEDS

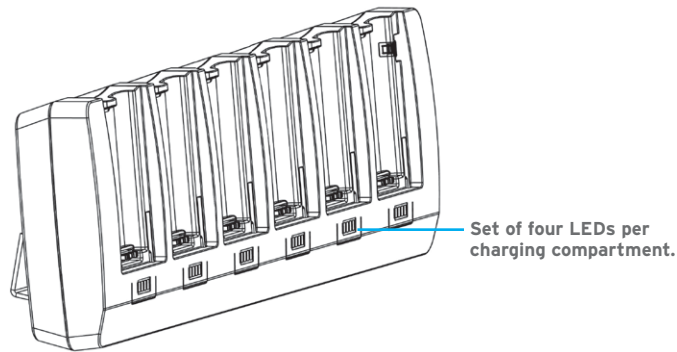

Set of four LEDs per charging compartment.

Charge status is indicated by the following LEDs.



Battery error or charging timeout
(solid RED)



Battery out of charging temperature range
(flashing YELLOW)

Battery capacity (25% capacity per bar) (flashing GREEN)



25%



50%




75%



100%

Fully Charged
(all LEDs solid GREEN)

LOCATION GUIDE FOR MOUNTING SCREWS

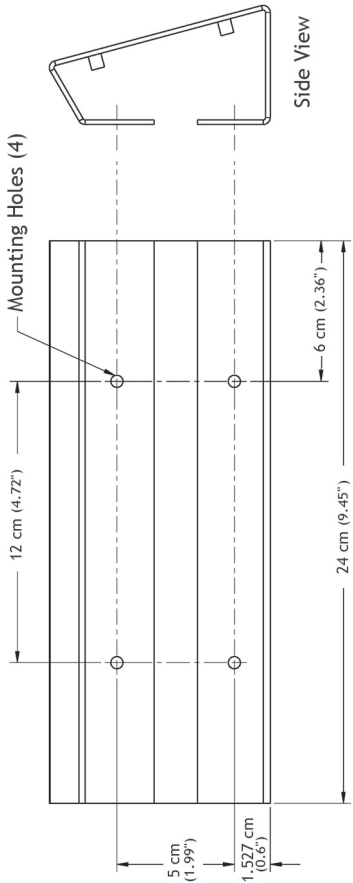

The mounting screws on the bracket are M4 x 6mm panhead screws.

© Copyright 2011 by Psion Inc.

Psion, Psion Teklogix, Omnii, and Ikôn are trademarks of Psion Inc. Other product names mentioned in this document are trademarks or registered trademarks of other hardware, software, or service providers and are used herein for identification purposes only.



ST3006

6-SLOT BATTERY CHARGER

QUICK START GUIDE



March 16, 2011
PN 8000204.B

ISO 9001 Certified
Quality Management System