
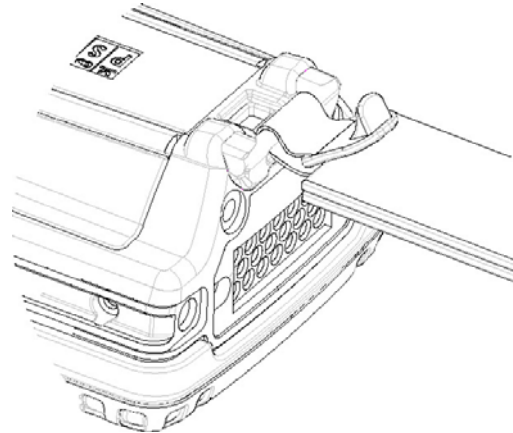




# Installation Instruction for ST6030 Shoulder Strap

## I. Installation of the Shoulder Strap

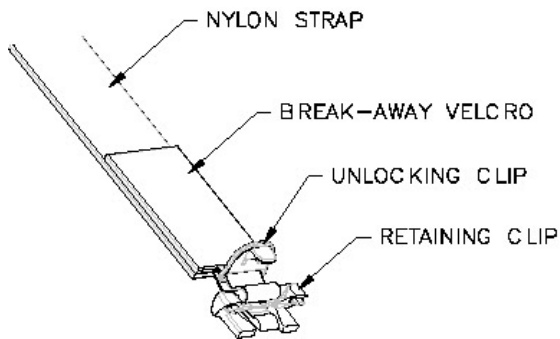


### SHOULDER STRAP INSTALLATION

TO LOCK THE SHOULDER STRAP IN PLACE, INSERT THE RETAINING CLIP IN THE SLOT AT THE BOTTOM OF THE OMNII HANDHELD.

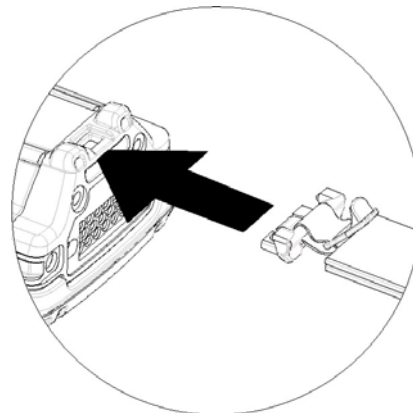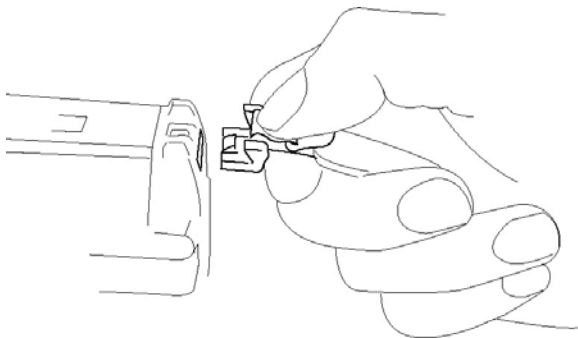


**SHOULDER STRAP REMOVAL**


WITH YOUR THUMB, PLACE THE UNLOCKING CLIP TAB IN THE TOP SLOT ON THE OMNII.

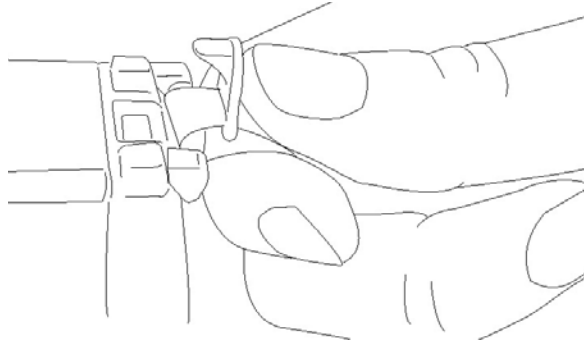


**STEP 1.**

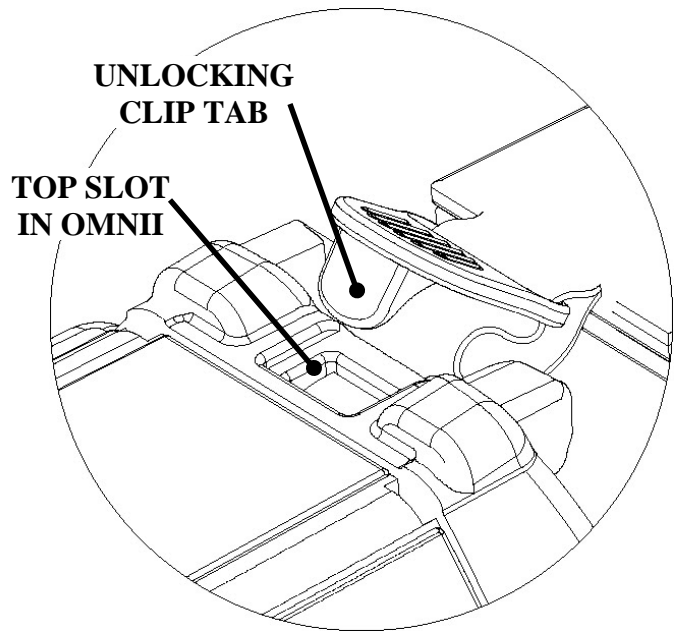

PUSH DOWN ON UNLOCKING CLIP, RELEASING RETAINING CLIP

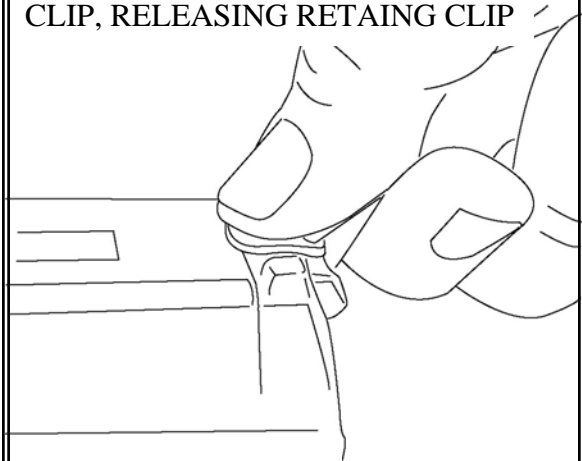

**STEP 2.**

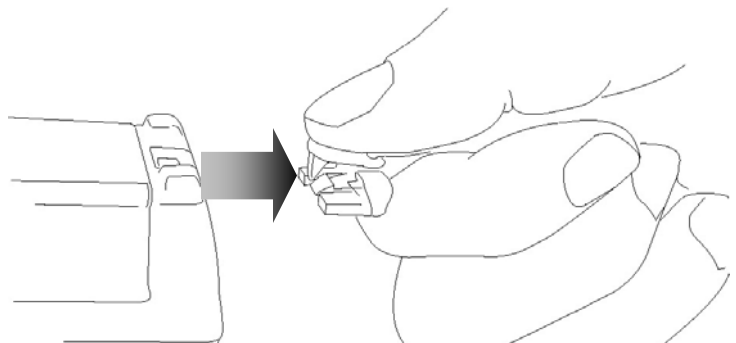

HOLDING BOTH THE UNLOCKING AND THE RETAINING CLIPS PULL BOTH AWAY FROM OMNII TO REMOVE SHOULDER STRAP

**STEP 3.**

**COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE**

PSION TEKLOGIX  
2100 Meadowvale Boulevard, Mississauga  
Ontario, Canada L5N 7J9  
Tel: +1 905 813 9900  
Fax: +1 905 812 6300  
E-mail: salescdn@psion.com