



Installation Instruction ST6056 Hard Shell Holster


I. Installation for left or right hand use

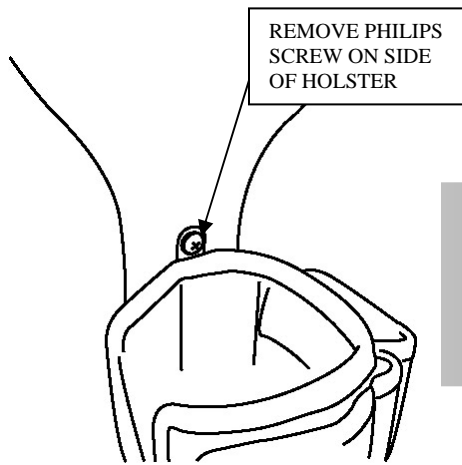


STEP 1.

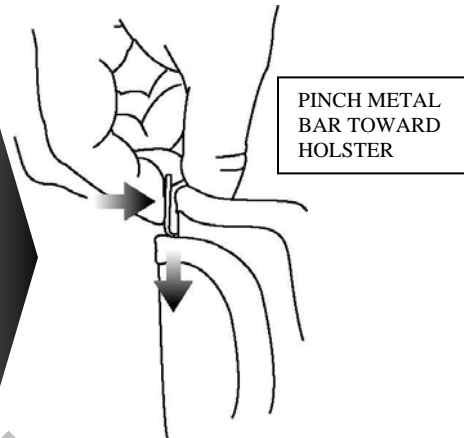

STEP 2.


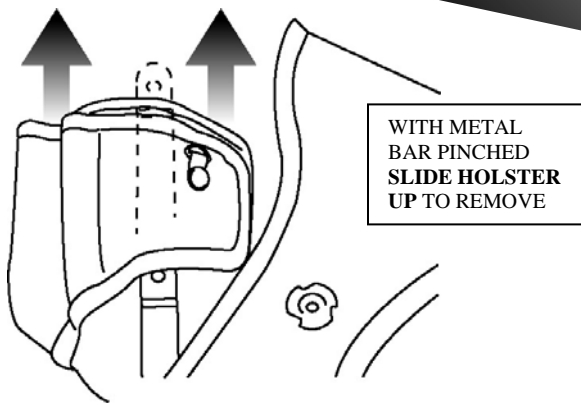


STEP 3.

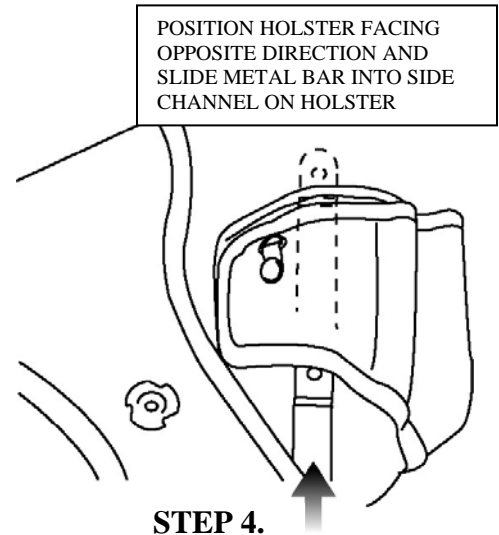


STEP 4.

REINSTALL SCREW.
SCREW SHOULD BE TIGHTENED ONE-
QUARTER TURN BEYOND FINGER
TIGHT. (OR TORQUE 9.0 ± 1.0 IN-LBS).
DO NOT OVERTIGHTEN.

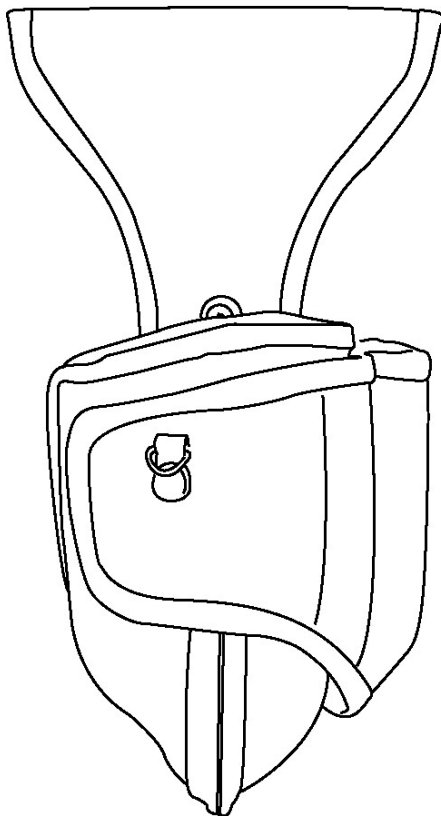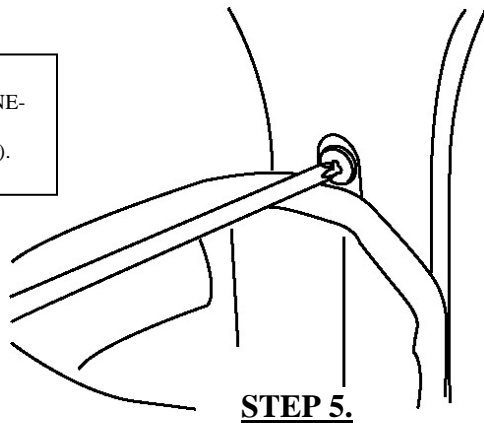

**FINISHED SETUP
(RIGHT HANDED USERS)**

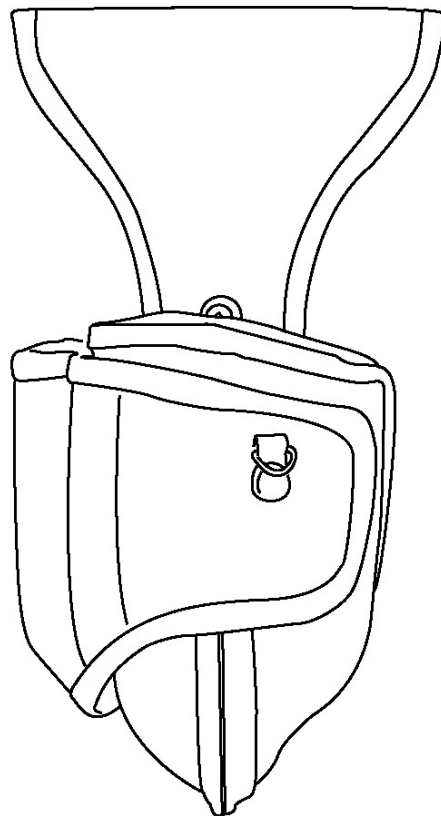

**FINISHED SETUP
(LEFT HANDED USERS)**

COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE

PSION TEKLOGIX
2100 Meadowvale Boulevard, Mississauga
Ontario, Canada L5N 7J9
Tel: +1 905 813 9900
Fax: +1 905 812 6300
E-mail: salescdn@psion.com