


Installation Instruction Workabout Pro C Handstrap

I. Installation

- Assemble Handstrap to inserts shown on Workabout Pro C handheld.
- Screws are M2.6 x 5mm Philips Driver, Fixed Flat Washer, with Black Oxide finish.
- The screws should be tightened one-quarter turn beyond finger tight. (Or torque 2.5 ± 0.25 in-lbs).
- Do not use any thread locking compounds or adhesives.
- Do not over tighten.
- Pull down on strap and hook metal clip into lip on bottom of terminal as shown.

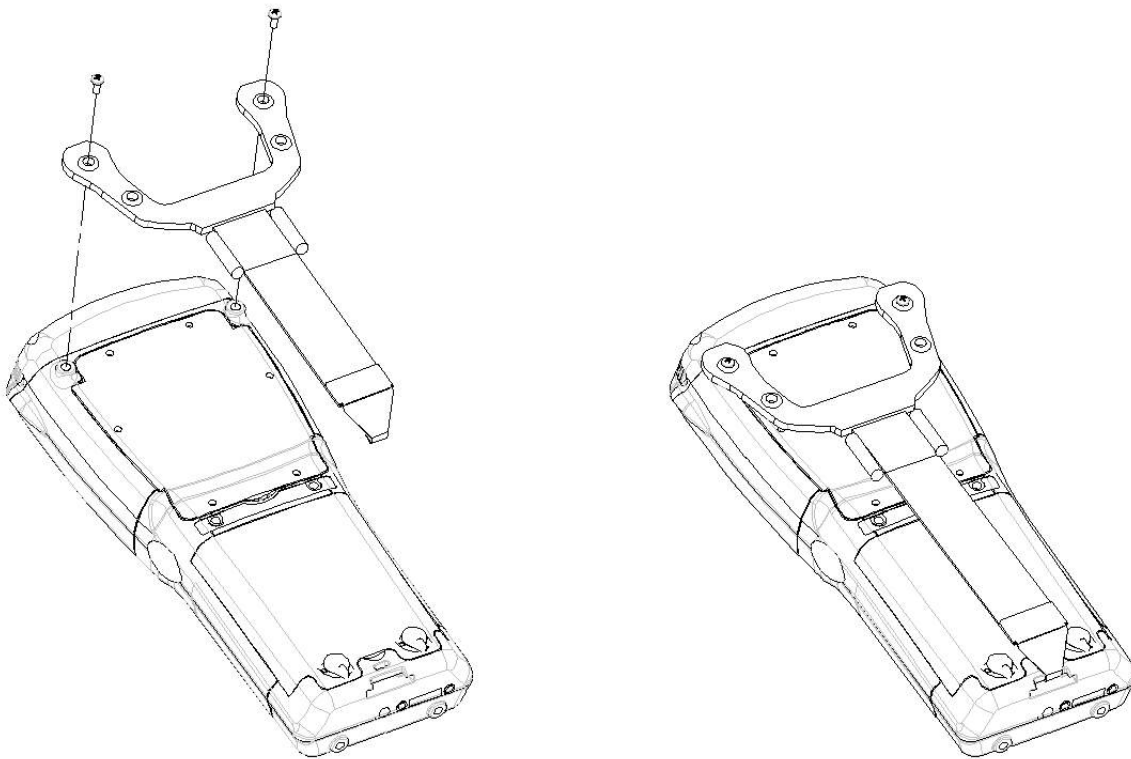

COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE

PSION
 2100 Meadowvale Boulevard, Mississauga
 Ontario, Canada L5N 7J9
 Tel: +1 905 813 9900
 Fax: +1 905 812 6300
 E-mail: salescdn@psion.com
www.pSION.com
www.ingenuityworking.com