


# Installation Instruction Workabout Pro S Handstrap

## I. Installation

- Assemble Handstrap to inserts shown on Workabout Pro S handheld.
- Screws are M2.6 x 5mm Philips Driver, Fixed Flat Washer, with Black Oxide finish.
- The screws should be tightened one-quarter turn beyond finger tight. (Or torque  $2.5 \pm 0.25$  in-lbs).
- Do not use any thread locking compounds or adhesives.
- Do not over tighten.
- Pull down on strap and hook metal clip into lip on bottom of terminal as shown.

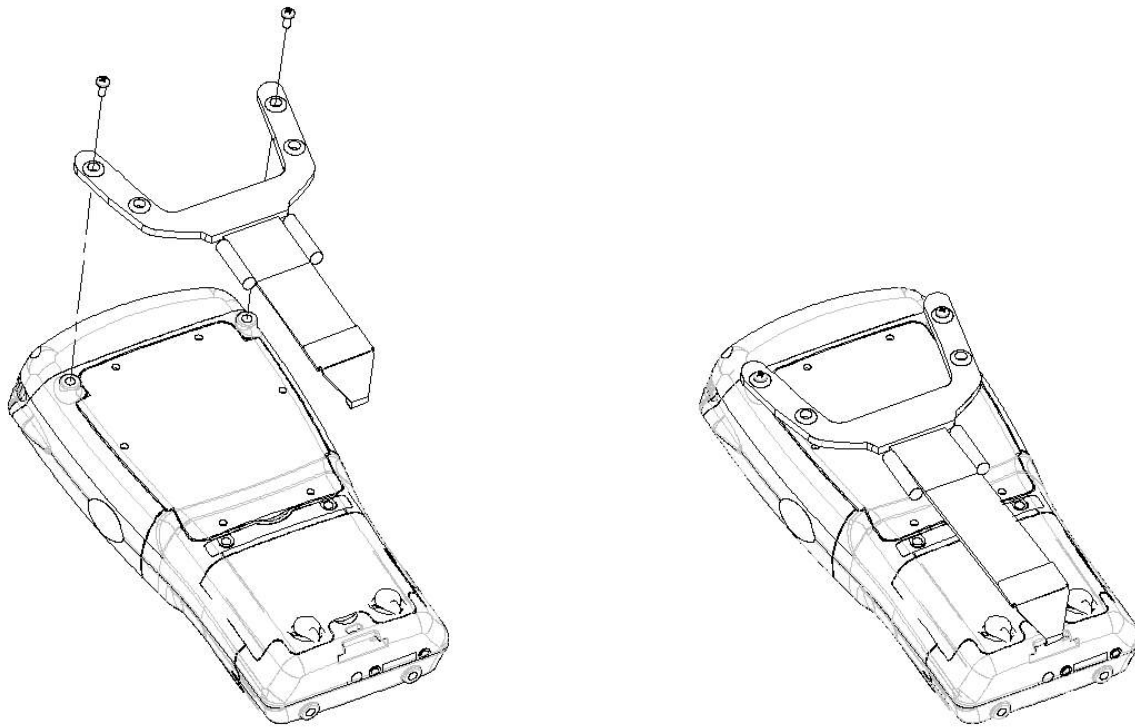

## COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE

PSION  
 2100 Meadowvale Boulevard, Mississauga  
 Ontario, Canada L5N 7J9  
 Tel: +1 905 813 9900  
 Fax: +1 905 812 6300  
 E-mail: [salescdn@psion.com](mailto:salescdn@psion.com)  
[www.pSION.com](http://www.pSION.com)  
[www.ingenuityworking.com](http://www.ingenuityworking.com)