

## Installation Instruction Workabout Pro S Rubber Case

### 1. Installation

- Figure A: Insert Workabout Pro S handheld through opening of rubber boot. Securely fitting the front end of the Workabout Pro S handheld in the end of the rubber boot.
- Figure B & C: Firmly pull bottom corners of rubber boot (one at a time works best) around the end of the Workabout Pro S handheld until securely enclosed.
- Figure D: Complete.

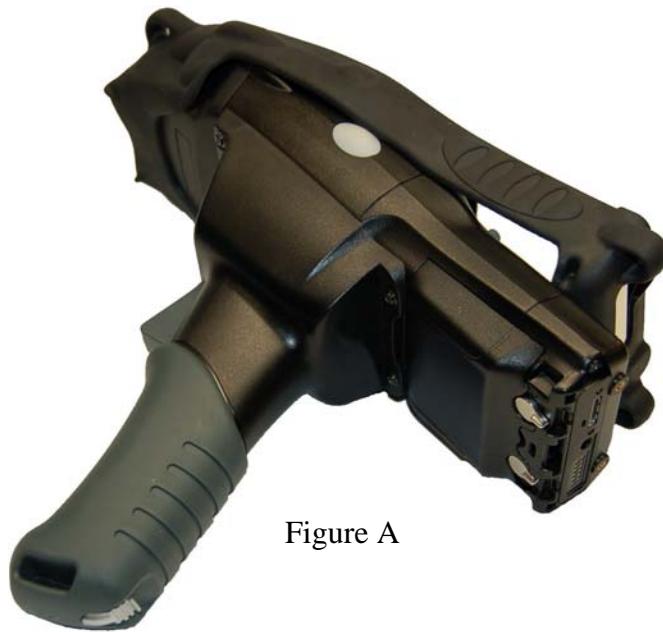


Figure A



Figure B



Figure C



Figure D

## COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE

PSION Inc.

2100 Meadowvale Boulevard, Mississauga

Ontario, Canada L5N 7J9

Tel: +1 905 813 9900

Fax: +1 905 812 6300

E-mail: [salescdn@psion.com](mailto:salescdn@psion.com)

[www.pSION.com](http://www.pSION.com)

[www.ingenuityworking.com](http://www.ingenuityworking.com)