

Installation Instruction Workabout Pro C Rubber Case

1. Installation

- Figure A: Insert Workabout Pro C handheld through opening of rubber boot. Securely fitting the front end of the Workabout Pro C handheld in the end of the rubber boot.
- Figure B & C: Firmly pull bottom corners of rubber boot (one at a time works best) around the end of the Workabout Pro C handheld until securely enclosed.
- Figure D: Complete.

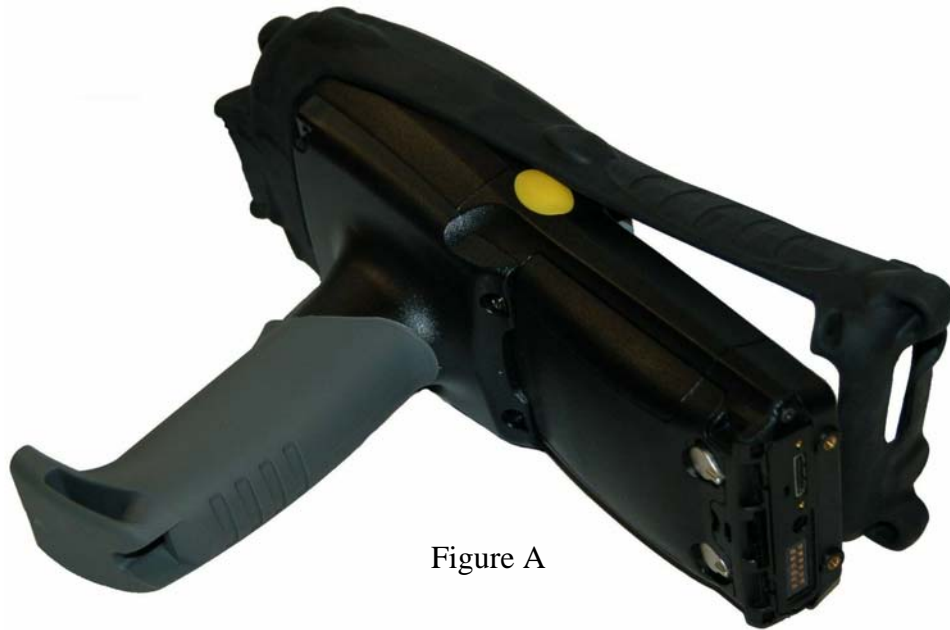


Figure A



Figure B



Figure C



Figure D

COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE

PSION Inc.

2100 Meadowvale Boulevard, Mississauga

Ontario, Canada L5N 7J9

Tel: +1 905 813 9900

Fax: +1 905 812 6300

E-mail: salescdn@psion.com

www.pSION.com

www.ingenuityworking.com