


MC9090-G

Quick Start Guide


<http://www.zebra.com/mc9000> See User Guide for more information

BATTERY INSERTION


Front View

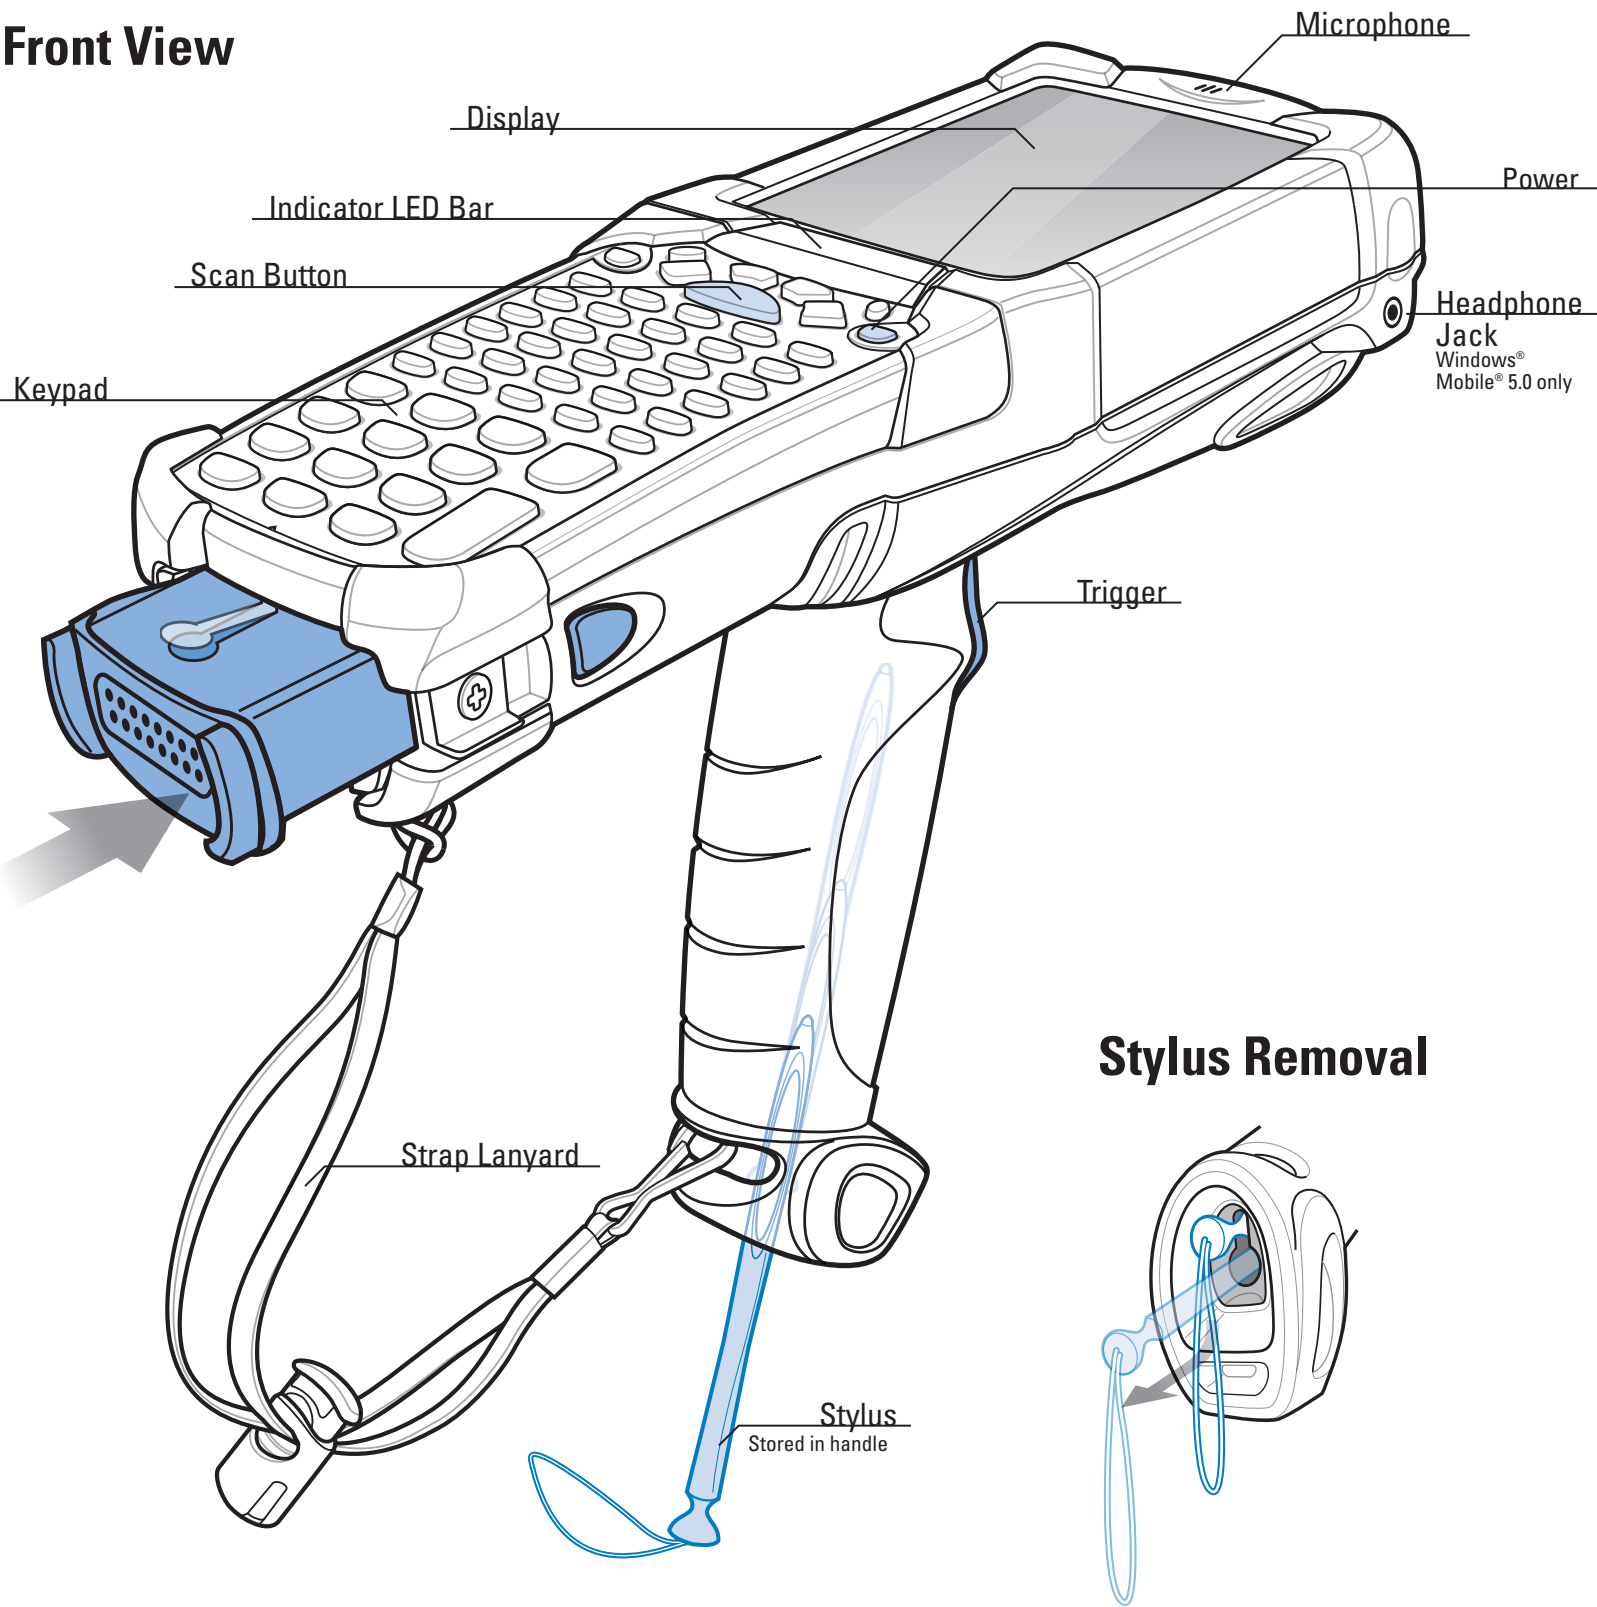



Battery Removal

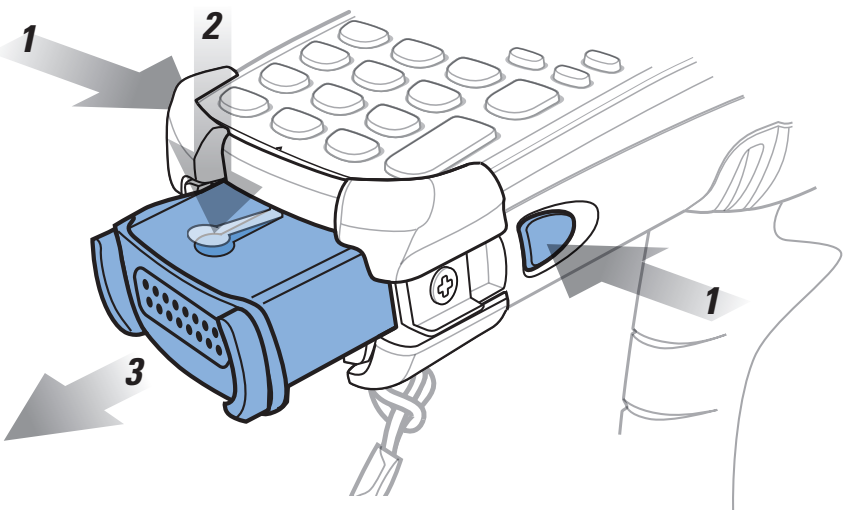


Stylus Removal

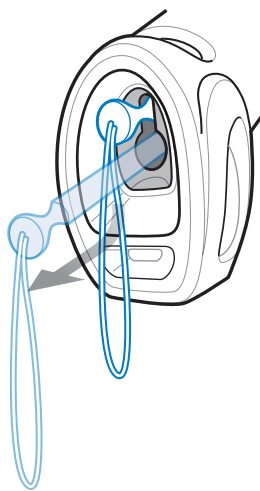

SNAP-ON ACCESSORY INSTALLATION

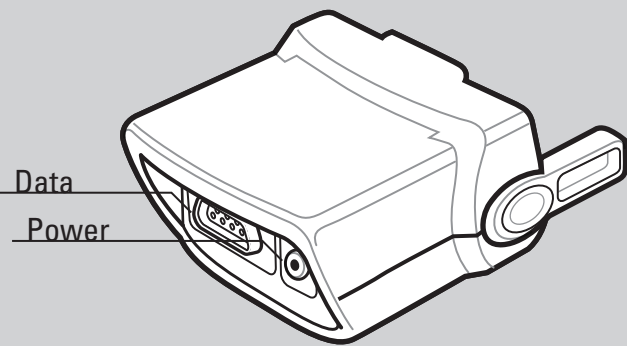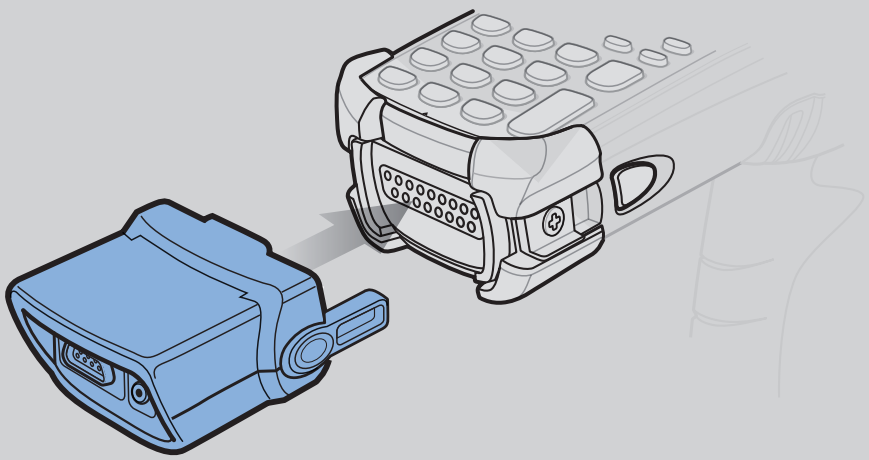


Cable Adapter Module

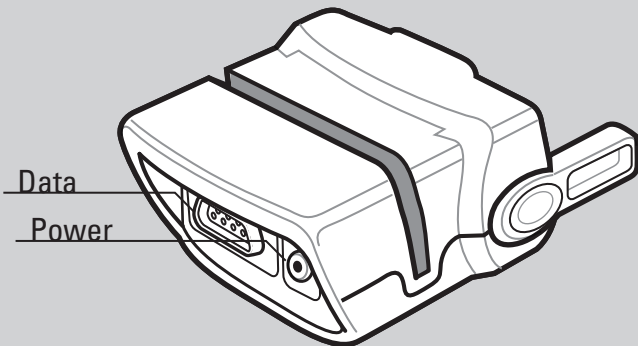

Magnetic Stripe Reader

CHARGING INSTRUCTIONS


⦿ = LED Indicator Location Slow Flash = Normal Charge Solid Amber = Full Charge Fast Flash = Charging Error

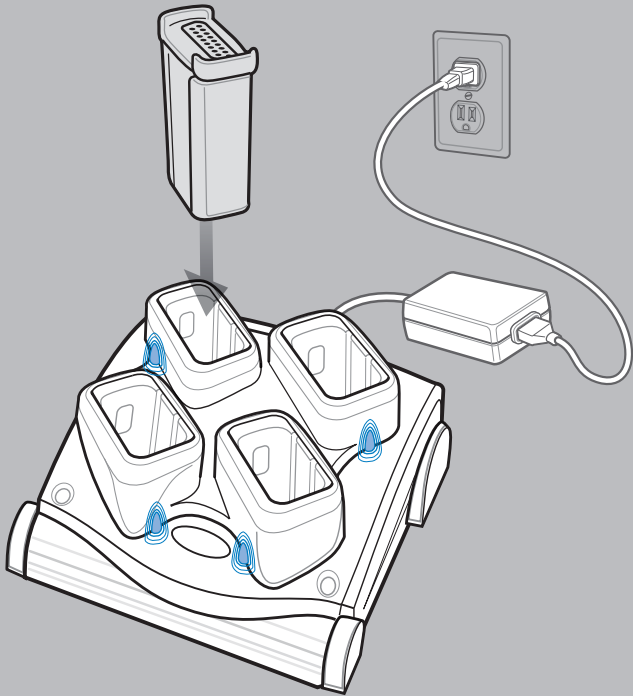

Four Slot Spare Battery Charger






Single Slot Serial/USB Cradle

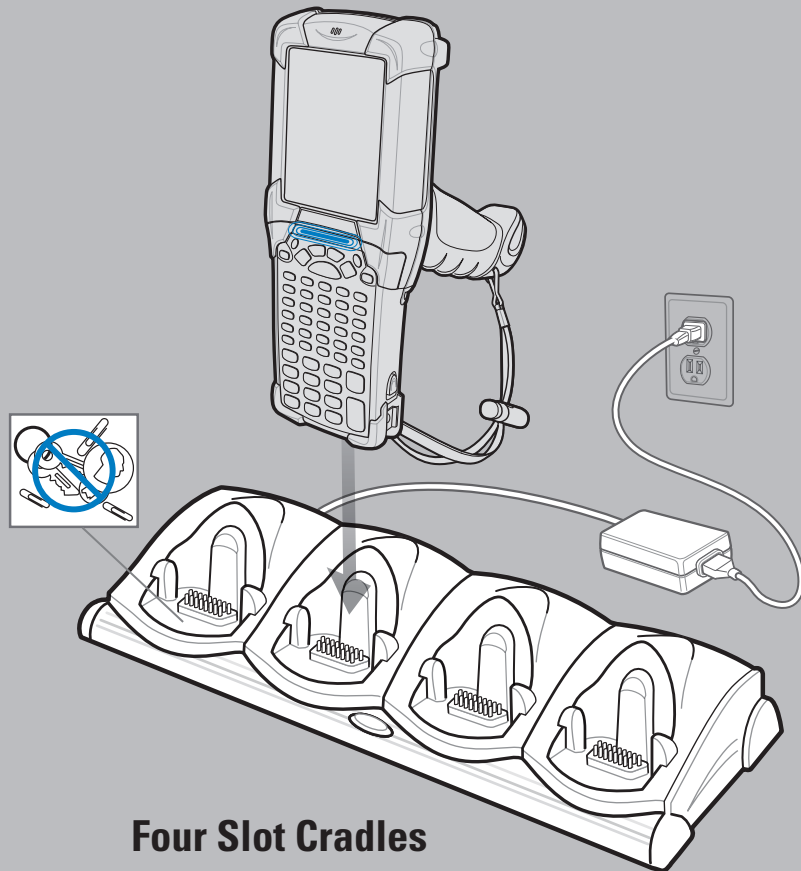



Four Slot Cradles
Charge-Only Cradle and Ethernet Cradle

OPTIMUM IMAGING AND SCANNING POSITIONS

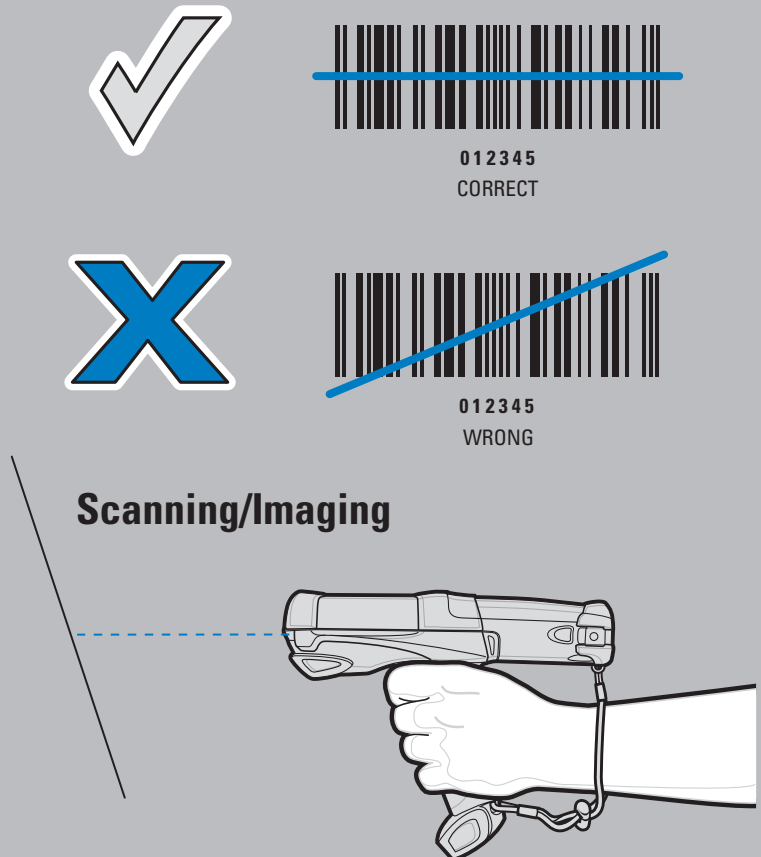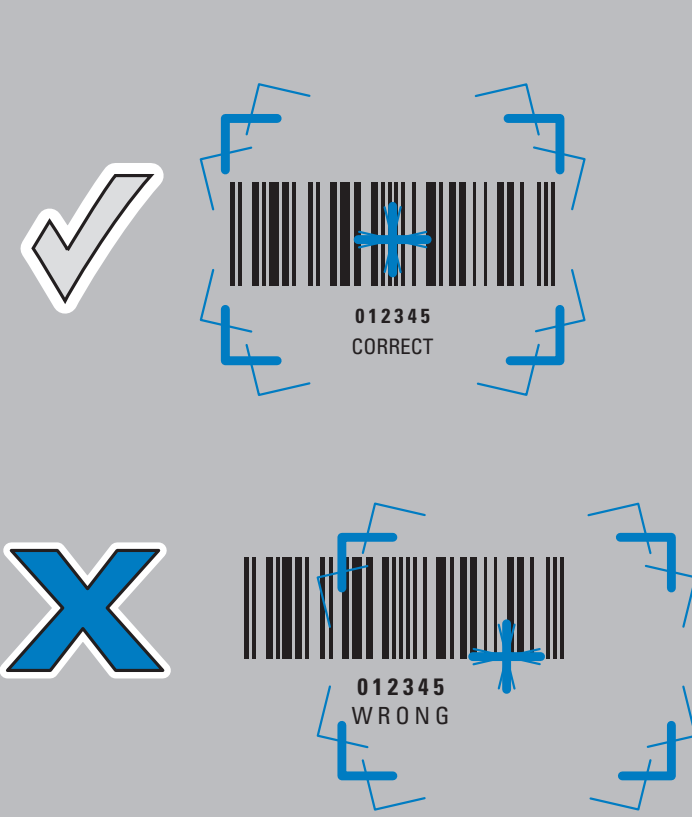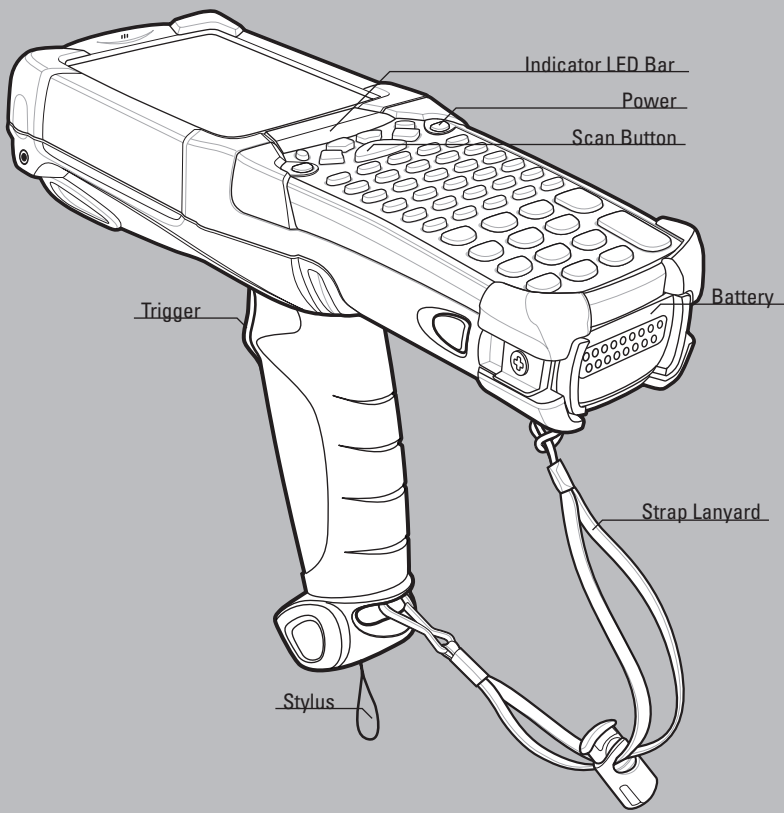

OPTIMUM UPRIGHT BODY POSTURE

AVOID EXTREME WRIST ANGLES

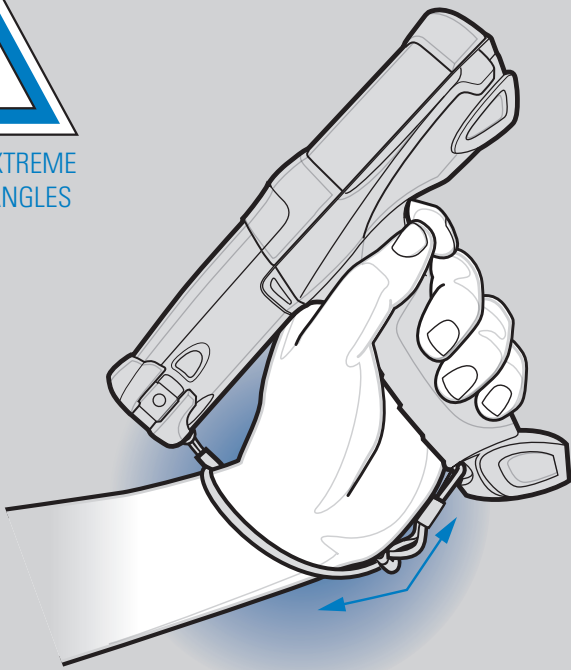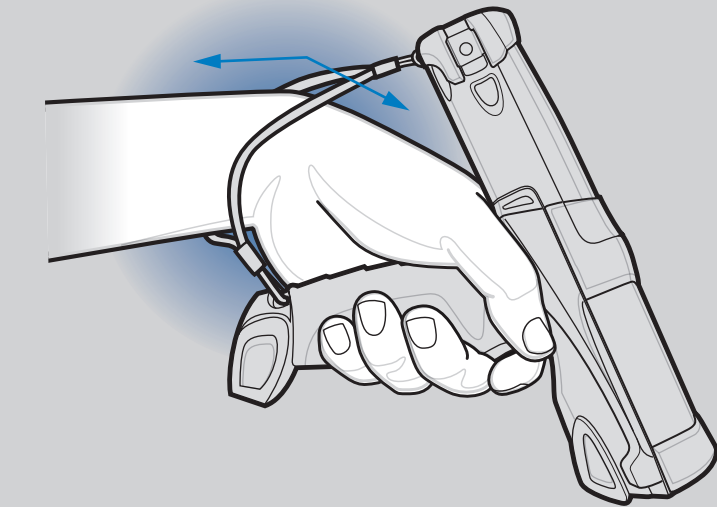


ALTERNATE LEFT AND RIGHT HANDS
TAKING BREAKS AND TASK ROTATION RECOMMENDED


OPTIMUM BODY POSTURE

Low Scanning

Alternate left and right knees

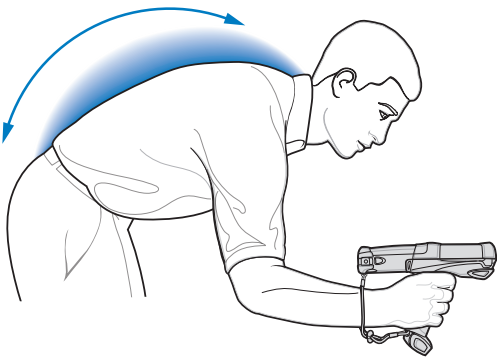

Alternate left and right hands

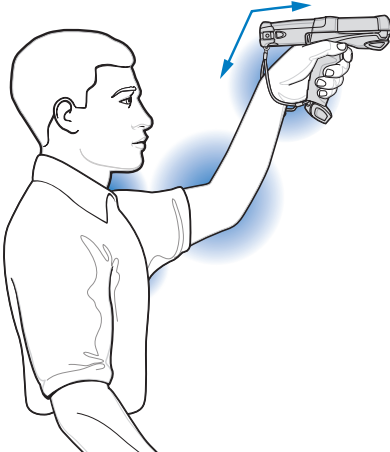

High Scanning

Use a ladder



Taking breaks and
task rotation recommended



Lincolnshire, IL U.S.A.
Zebra and the Zebra head graphic are registered trademarks of ZIH Corp. The Symbol logo is a registered trademark of Symbol Technologies, Inc., a Zebra Technologies company. © 2015 Symbol Technologies, Inc.



72-72217-03 Rev. A – March 2015

<http://www.zebra.com/mc9000>