



Installation Instruction for ST6040 Wrist Strap

I. Installation of the Wrist Strap

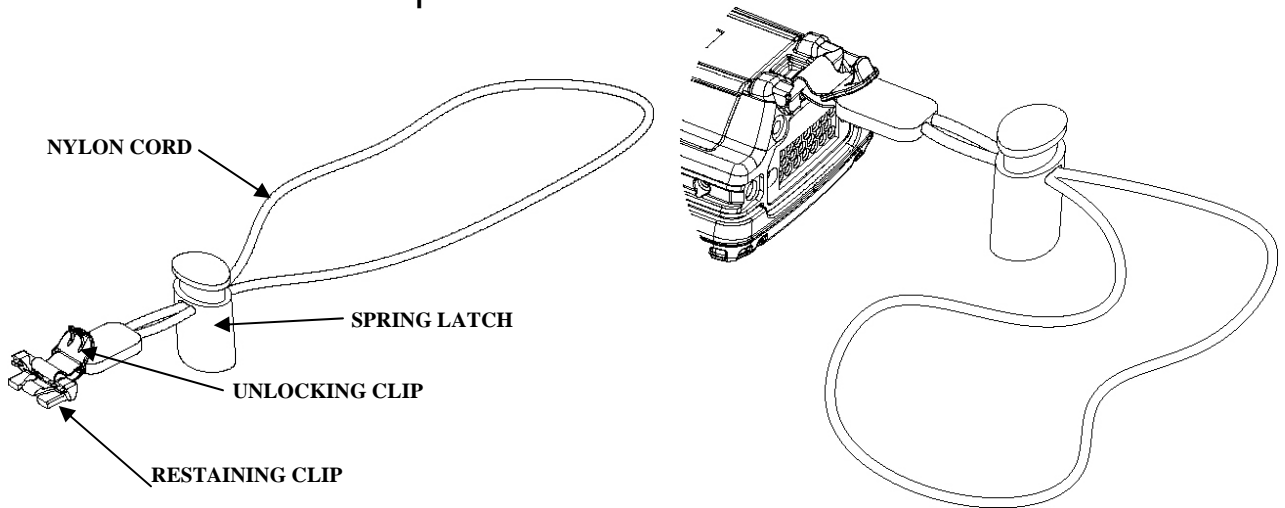


WRIST STRAP INSTALLATION

TO LOCK THE WRIST STRAP IN PLACE, INSERT THE RETAINING CLIP IN THE SLOT AT THE BOTTOM OF THE OMNII HANDHELD.

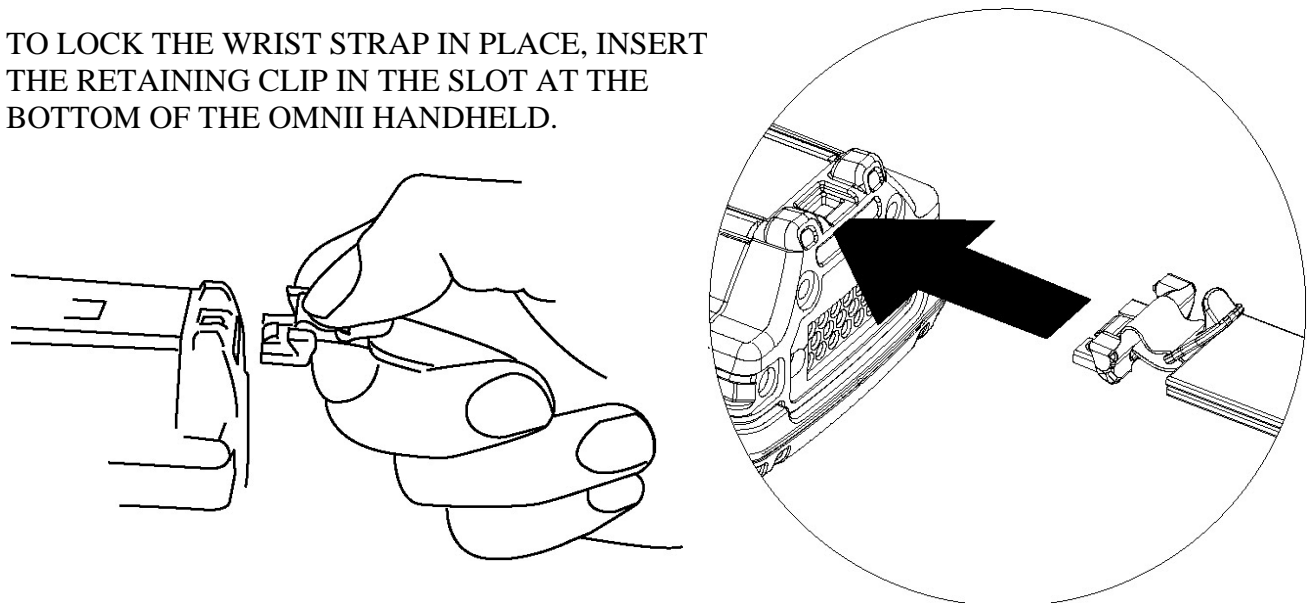


WRIST STRAP REMOVAL


WITH YOUR THUMB, PLACE THE UNLOCKING CLIP TAB IN THE TOP SLOT ON THE OMNII.

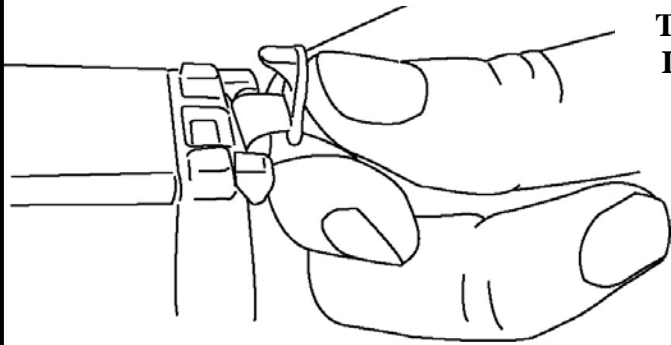


STEP 1.

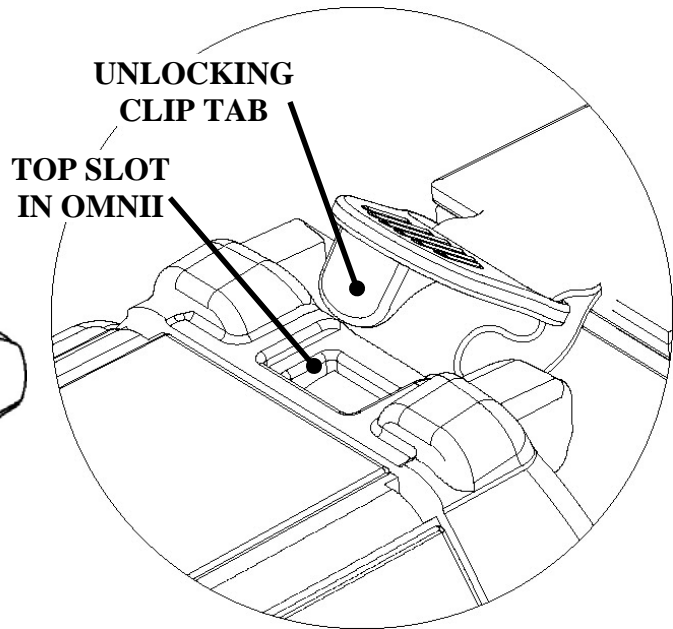

PUSH DOWN ON UNLOCKING CLIP, RELEASING RETAINING CLIP

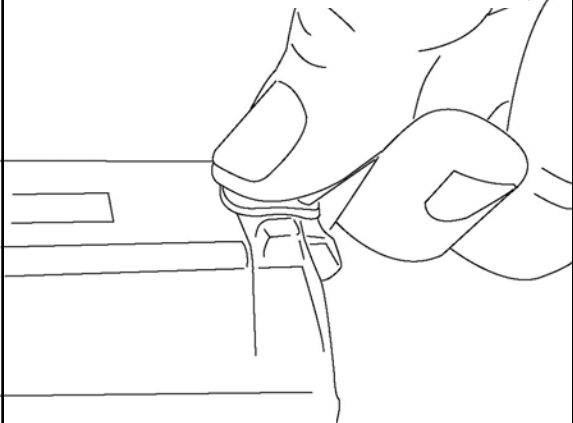

STEP 2.

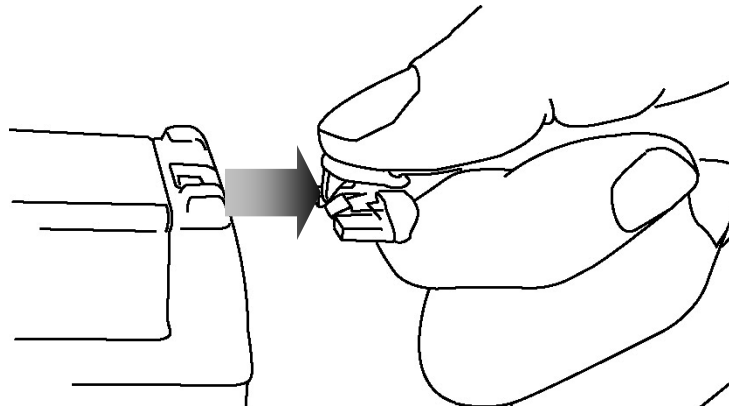

HOLDING BOTH THE UNLOCKING AND THE RETAINING CLIPS PULL BOTH AWAY FROM OMNII TO REMOVE WRIST STRAP

STEP 3.

COMPANY HEADQUARTERS AND CANADIAN SERVICE CENTRE

PSION
 2100 Meadowvale Boulevard, Mississauga
 Ontario, Canada L5N 7J9
 Tel: +1 905 813 9900
 Fax: +1 905 812 6300
 E-mail: salescdn@psion.com
www.pSION.com
www.ingenuityworking.com